

[Manuals.plus](#) /

> [JOYIN](#) /

> Instruction Manual for JOYIN 67" Life Size Animatronics Grim Reaper

JOYIN 13573

Instruction Manual for JOYIN 67" Life Size Animatronics Grim Reaper

Model: 13573

1. INTRODUCTION

Thank you for purchasing the JOYIN 67" Life Size Animatronics Grim Reaper. This product is designed to enhance your Halloween decorations with its imposing size, creepy sounds, and glowing eyes. Please read this manual carefully before assembly and operation to ensure safe and proper use.

2. SAFETY INFORMATION

- This product is intended for **outdoor use only**.
- **Unplug the unit during inclement weather** to prevent damage and ensure safety.
- Keep the product away from **flammable materials**.
- Do not attempt to modify or disassemble the product. This may cause damage and void the warranty.
- Ensure all components are securely assembled before use to prevent the unit from falling.
- Keep out of reach of small children and pets when not supervised.

3. PACKAGE CONTENTS

Please verify that all the following components are included in your package:

- 1 x Life Size Standing Grim Reaper Figure (with attached chain)
- Metal Rods for Support Bracket (multiple segments)
- Plastic Bottom Base for Support Bracket
- Instruction Manual (this document)

Note: 3 AA batteries are required for operation and are **NOT INCLUDED**.

4. SETUP INSTRUCTIONS

Follow these steps to assemble your Grim Reaper decoration:

1. **Assemble the Metal Rods:** Carefully splice the metal rod segments together to form the vertical support pole.
2. **Assemble the Plastic Base:** Splice the pieces of the plastic bottom base together to form a stable cross-shaped stand.
3. **Connect Rod to Base:** Insert the assembled metal rod into the central opening of the plastic base. Ensure it is firmly seated and stable.
4. **Install Batteries:** Locate the battery compartment on the back of the Grim Reaper figure (typically near the head or upper body). Open the compartment and insert 3 AA batteries, observing the correct polarity (+/-). Close the compartment securely.
5. **Attach Grim Reaper to Stand:** Carefully place the Grim Reaper figure onto the top of the assembled support bracket. The internal stand mechanism allows for adjustment. Ensure the figure is securely attached and balanced on the stand.

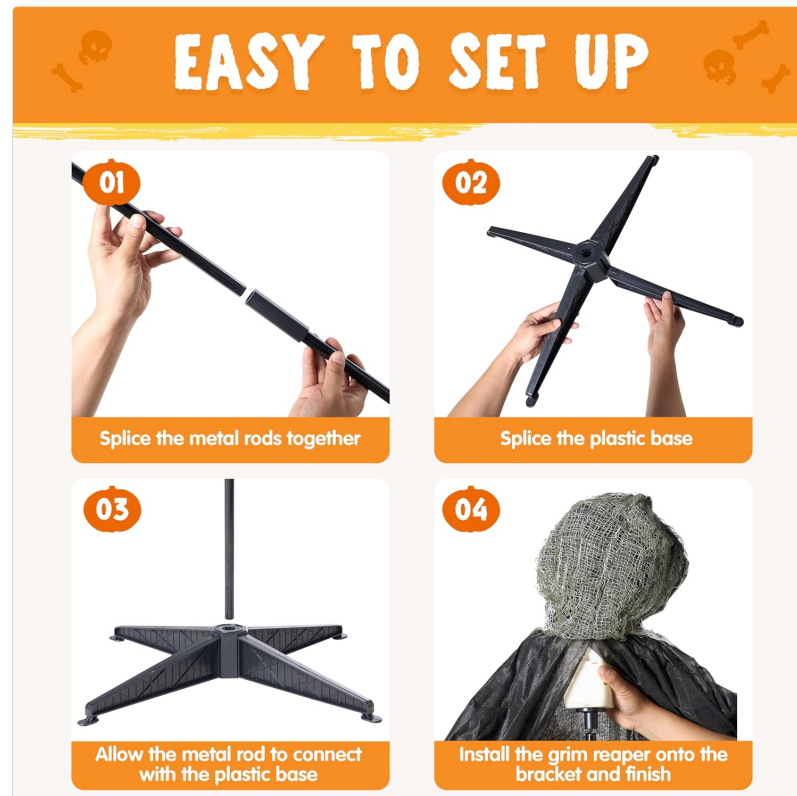


Figure 4.1: Step-by-step assembly guide for the Grim Reaper.

5. OPERATING INSTRUCTIONS

The JOYIN Grim Reaper features sound activation and motion sensing capabilities:

- **Power On:** Once batteries are installed, the unit is ready for operation. There is typically an ON/OFF switch located near the battery compartment. Set it to 'ON'.
- **Motion Sensor:** The motion sensor has an effective range of approximately **1.64 feet (0.5 meters)**. When motion is detected within this range, the Grim Reaper's eyes will light up, it will emit scary noises, and begin vibrating.
- **Light Sensitivity:** The sensitivity of the motion sensor can be affected by ambient light conditions. In very bright light, its sensitivity may decrease. For optimal performance, consider placement in areas with moderate to low light.
- **Placement:** Position the Grim Reaper in an area where its motion sensor can effectively detect approaching individuals for maximum effect.



Figure 5.1: Key features of the Grim Reaper, including light-up eyes and sound activation.

6. MAINTENANCE

To ensure the longevity of your Grim Reaper decoration, follow these maintenance guidelines:

- **Cleaning:** Wipe the surface of the Grim Reaper with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.
- **Battery Replacement:** If the lights dim, sounds become distorted, or the vibration weakens, it is time to replace the batteries. Always replace all 3 AA batteries at the same time.
- **Storage:** When not in use, store the Grim Reaper in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to remove the batteries before long-term storage to prevent leakage.

7. TROUBLESHOOTING

If you encounter any issues with your Grim Reaper, please refer to the following troubleshooting tips:

Problem	Possible Cause	Solution
Eyes do not light up / No sound / No vibration	Batteries are dead or incorrectly installed. ON/OFF switch is in 'OFF' position. Motion sensor is not detecting movement or is in strong light.	Replace batteries, ensuring correct polarity. Flip the ON/OFF switch to 'ON'. Move closer to the sensor (within 1.64 ft) or try in a less brightly lit area.
Grim Reaper is unstable or falls over	Support bracket not assembled correctly. Placed on an uneven surface.	Re-assemble the metal rods and plastic base, ensuring all connections are secure. Place the decoration on a flat, stable surface.

8. SPECIFICATIONS

- **Product Height:** 67 inches
- **Materials:** Plastic, Fabric, Metal
- **Power Source:** 3 x AA Batteries (not included)
- **Motion Sensor Range:** Approximately 1.64 feet (0.5 meters)
- **Product Dimensions (Packaged):** 15.75 x 11.81 x 7.28 inches
- **Item Weight:** 4.16 pounds
- **Model Number:** 13573
- **UPC:** 840165840093



Figure 8.1: Product dimensions, highlighting the 67-inch height.

9. WARRANTY AND SUPPORT

JOYIN is committed to providing a great shopping experience. If your product does not meet your expectations, please do not hesitate to contact us. We prioritize customer satisfaction and are here to assist you with any concerns or issues.

For support, please message us through the 'contact sellers' option on the platform where you purchased the product. We will endeavor to resolve any issues promptly.

The celebrations start at JOYIN!

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B098GD1GF7>

More documents and user manuals: <https://manuals.plus/>