

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BELLA](#) /
- › [BELLA Pro Series 9-in-1 Indoor Grill with 5.8-qt Air Fryer User Manual](#)

BELLA Bella Pro Series

BELLA Pro Series 9-in-1 Indoor Grill with 5.8-qt Air Fryer User Manual

MODEL: BELLA PRO SERIES

Introduction

This manual provides essential instructions for the safe and efficient operation of your BELLA Pro Series 9-in-1 Indoor Grill with 5.8-qt Air Fryer. Please read all instructions thoroughly before first use and retain this manual for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your appliance.



The BELLA Pro Series 9-in-1 Indoor Grill with 5.8-qt Air Fryer, shown in its closed position on a kitchen counter, surrounded by prepared meals such as pizza, corn, and burgers, demonstrating its versatility.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

Parts and Features

Familiarize yourself with the components of your BELLA Pro Series 9-in-1 Indoor Grill and Air Fryer before operation.



An exploded view of the BELLA Pro Series 9-in-1 Indoor Grill, illustrating the main appliance body with its lid open, and separate components including the air fry basket, grill grate, and cooking pot, ready for assembly or use.

1. Main Unit with Heating Element and Lid
2. Control Panel with Digital Display
3. Removable Cooking Pot
4. Grill Plate (Nonstick)
5. Air Fry Basket
6. Cleaning Brush (if included)

Initial Setup

Before using your appliance for the first time, follow these steps:

1. **Unpack:** Carefully remove all packaging materials, stickers, and labels from the appliance and its accessories.
2. **Clean:** Wash the removable cooking pot, grill plate, and air fry basket in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the appliance on a stable, level, heat-resistant surface, away from walls and other appliances to allow for proper air circulation. Ensure there is at least 6 inches of space on all sides.
4. **First Use Burn-Off:** It is recommended to run the appliance empty for about 10-15 minutes on a high setting (e.g., Grill at 450°F) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.

Operating Instructions

Your BELLA Pro Series appliance offers multiple cooking functions. Always ensure the correct accessory is installed for the desired function.

Control Panel Overview

The digital control panel allows you to select cooking functions, adjust temperature, and set cooking time. It typically includes:

- **Power Button:** Turns the appliance on/off.
- **Function Buttons:** Selects cooking modes (e.g., Grill, Air Fry, Roast, Bake, Dehydrate).
- **Temperature/Time Adjustment Buttons:** Used to increase or decrease temperature and cooking time.
- **Start/Pause Button:** Initiates or pauses the cooking cycle.
- **Digital Display:** Shows selected function, temperature, and remaining time.

General Operation Steps

1. Plug the appliance into a grounded electrical outlet.
2. Press the Power Button to turn on the unit.
3. Select your desired cooking function (e.g., Grill, Air Fry).
4. Adjust the temperature and time using the adjustment buttons.
5. Place food into the appropriate accessory (grill plate, air fry basket) inside the cooking pot.
6. Close the lid securely.
7. Press the Start Button to begin cooking.
8. The appliance will beep when cooking is complete. Carefully open the lid and remove food.

Using the Grill Function

For grilling, use the grill plate. Preheat the unit for best results.



The BELLA Pro Series 9-in-1 Indoor Grill in operation, with its lid open, showcasing steaks being grilled on the nonstick grill plate. The appliance is situated on a kitchen counter alongside prepared side dishes.

1. Insert the cooking pot into the main unit. Place the grill plate inside the cooking pot.
2. Select the "Grill" function. Set desired temperature (e.g., 400°F - 450°F) and preheat.
3. Once preheated, carefully place food onto the grill plate. Close the lid.
4. Monitor cooking progress. Flip food halfway through if desired for even grilling.

Using the Air Fry Function

For air frying, use the air fry basket. This function circulates hot air for crispy results.

1. Insert the cooking pot into the main unit. Place the air fry basket inside the cooking pot.
2. Place food into the air fry basket. Do not overfill to ensure proper air circulation.
3. Select the "Air Fry" function. Set desired temperature and time.
4. Close the lid. For best results, shake the basket or flip food halfway through cooking.

Maintenance and Cleaning

Regular cleaning and maintenance will help keep your appliance in optimal condition.

- Always unplug the appliance and allow it to cool completely before cleaning.
- Do not use abrasive cleaners or scouring pads on any part of the appliance.

Cleaning the Main Unit

Wipe the exterior of the main unit with a clean, damp cloth. For stubborn stains, use a mild soap solution. Ensure no water enters the interior of the unit.

Cleaning Accessories

The removable cooking pot, grill plate, and air fry basket are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge. Ensure all parts are thoroughly dry before reassembling or storing.



The removable cooking pot, air fry basket, and grill plate from the BELLA Pro Series 9-in-1 Indoor Grill are shown neatly arranged within a dishwasher rack, highlighting their dishwasher-safe design for easy cleaning.

Troubleshooting

Refer to the table below for common issues and their potential solutions.

Problem	Possible Cause / Solution
Appliance does not turn on.	Ensure the power cord is securely plugged into a grounded outlet. Check if the outlet is functioning by plugging in another appliance. Verify the lid is fully closed and latched.
Food is not cooking evenly.	Do not overcrowd the cooking pot or basket. Cook in smaller batches if necessary. Flip or shake food halfway through cooking for even results. Ensure the correct temperature and time settings are selected for the food type.
Smoke is coming from the appliance.	A small amount of smoke during initial use is normal (first use burn-off). Excessive smoke may indicate food residue or grease buildup. Clean the cooking pot and accessories thoroughly. Ensure fatty foods are not causing excessive grease to drip onto the heating element.
Food is not crispy when air frying.	Ensure the air fry basket is not overloaded. Increase cooking time or temperature slightly. Lightly mist food with oil for better crisping.

Product Specifications

Model Name: Bella Pro Series

Brand: BELLA

Functions: 9-in-1 (Grill, Air Fry, Roast, Bake, Dehydrate, etc.)

Capacity: 5.8-qt Air Fryer / 9 Quarts total

Output Wattage: 1700 Watts

Control Method: Touch

Color: Black

Material: Polypropylene (Outer), Nonstick Coating (Cooking Surfaces)

Item Weight: Approximately 30 Pounds

Product Dimensions: 19 x 18 x 19 inches (L x W x H)

Dishwasher Safe Parts: Yes (Cooking Pot, Grill Plate, Air Fry Basket)

Special Feature: Temperature Control

Warranty and Customer Support

For detailed warranty information, please refer to the separate warranty card included with your purchase or visit the official BELLA website. If you encounter any issues not covered in this manual or require further assistance, please contact BELLA customer support.

Website: www.bellahousewares.com

