

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer TAC 1AA LED Tactical Flashlight User Manual

Energizer ENPMHT11E

Energizer TAC 1AA LED Tactical Flashlight User Manual

Model: ENPMHT11E

1. INTRODUCTION

The Energizer TAC 1AA LED Tactical Flashlight is a compact and durable lighting tool designed for various situations, from everyday tasks to emergencies. Its robust construction and versatile features make it an essential item for your home, vehicle, or outdoor gear.

Key features include:

- **Reliable Power:** Comes with 1 Energizer Max AA Battery for immediate use.
- **Super Bright Illumination:** Provides up to 140 lumens of LED light, shining up to 70 meters (210 feet) in High Mode.
- **Compact & Durable:** Small enough for everyday carry, yet built with aircraft-grade aluminum to withstand drops and impacts.
- **Water Resistant:** IPX4 rated, designed to withstand splashing, suitable for various weather conditions.
- **Multiple Light Modes:** Features High, Low, and an optional Emergency Strobe mode.
- **Convenient Clip:** Includes a removable, adjustable clip for easy attachment to pockets, clipboards, or hat bills.



Figure 1: The Energizer TAC 1AA LED Tactical Flashlight, a compact and durable lighting tool.

2. SETUP

2.1 Battery Installation

Your Energizer TAC 1AA LED Tactical Flashlight comes with one Energizer Max AA battery included. Follow these steps to install or replace the battery:

1. Unscrew the tail cap of the flashlight by turning it counter-clockwise.
2. Insert one AA battery into the flashlight with the positive (+) end facing towards the head of the flashlight (towards the LED).
3. Screw the tail cap back on by turning it clockwise until it is securely tightened. Ensure a snug fit to maintain water resistance.

2.2 Initial Inspection

Before first use, inspect the flashlight for any visible damage. Ensure the lens is clean and clear, and the tail cap is properly sealed. The flashlight is ready for operation once the battery is correctly installed.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off and Mode Selection

The flashlight features a rear push-button switch for power control and mode cycling.

- **To Turn On:** Press the rear push-button completely until it clicks. The flashlight will turn on in High mode.
- **To Cycle Modes:** Once the flashlight is on, lightly press the button (without clicking) to cycle through the modes: High → Low → Emergency Strobe.
- **To Turn Off:** From any mode, press the rear push-button completely until it clicks again.

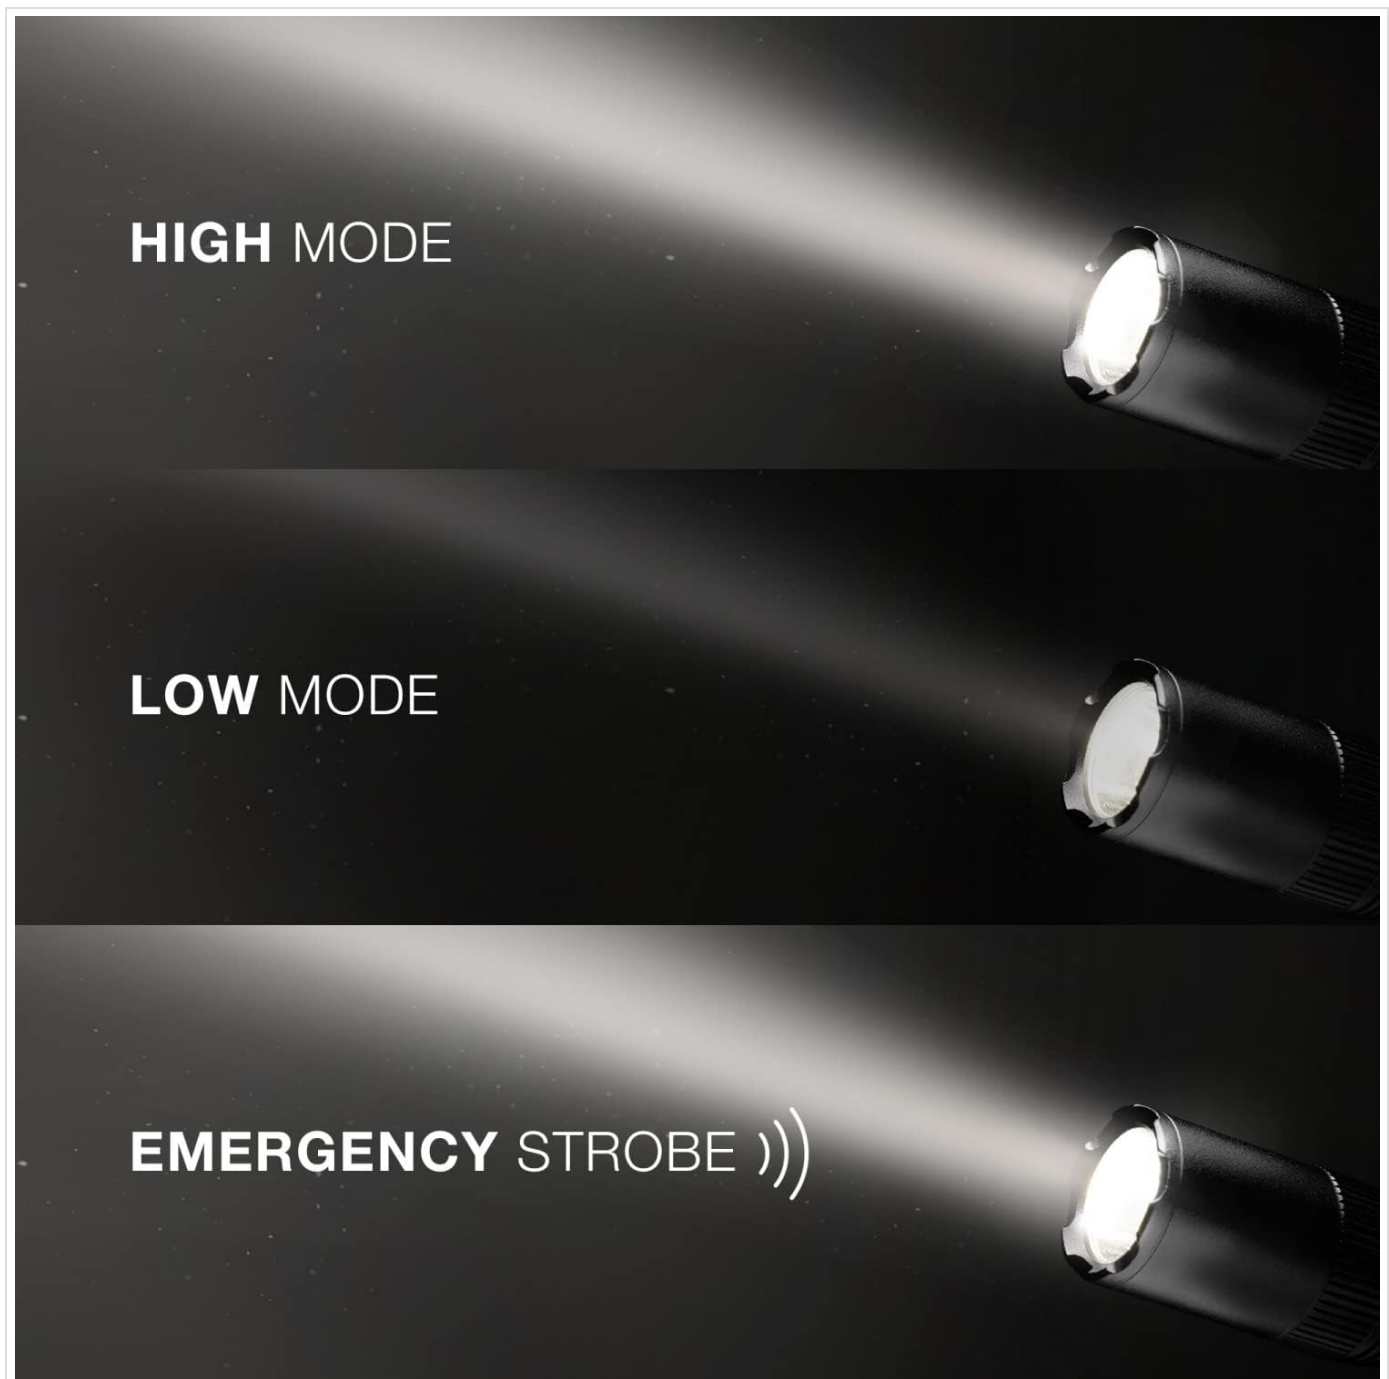


Figure 2: Illustration of the flashlight's three light modes: High, Low, and Emergency Strobe.

3.2 Using the Removable Clip

The Energizer TAC 1AA LED Tactical Flashlight includes a removable clip for convenient carrying and attachment.

- The clip can be used to attach the flashlight to pockets, belts, backpack straps, or the brim of a hat for hands-free lighting.
- To remove or re-position the clip, gently slide it off the flashlight body. Ensure it is securely re-attached if desired.



Figure 3: The flashlight's clip allows for easy attachment to various items for everyday carry.

4. MAINTENANCE

4.1 Cleaning

To ensure optimal performance and longevity of your flashlight:

- Wipe the exterior of the flashlight with a soft, damp cloth. Avoid using abrasive cleaners or solvents.
- Keep the lens clean to maintain maximum light output. Use a lens cleaning cloth if necessary.

4.2 Battery Replacement

Replace the AA battery when the light output becomes dim or the flashlight stops functioning. Refer to Section 2.1 for battery installation instructions.

4.3 Storage

When storing the flashlight for extended periods, remove the battery to prevent potential leakage and damage to the

device. Store in a cool, dry place away from direct sunlight.

4.4 Water Resistance (IPX4)

The flashlight is rated IPX4 water resistant, meaning it is protected against splashing water from any direction. It is not designed for submersion. Ensure the tail cap is always securely tightened to maintain this rating.



Figure 4: The flashlight's clip allows for easy attachment to various items for everyday carry.

5. TROUBLESHOOTING

If you encounter issues with your Energizer TAC 1AA LED Tactical Flashlight, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Flashlight does not turn on.	Battery is dead or incorrectly installed.	Replace the battery or ensure it is inserted with the correct polarity (+ end towards the head).
Light is dim or flickers.	Low battery power. Loose tail cap. Dirty contacts.	Replace the battery. Tighten the tail cap. Clean battery contacts with a dry cloth.
Cannot cycle through modes.	Button not being lightly pressed.	Ensure you are lightly pressing the rear button without fully clicking it to cycle modes.

If the problem persists after trying these solutions, please contact Energizer customer support for further assistance.

6. SPECIFICATIONS

Feature	Detail
Brand	Energizer
Model Number	ENPMHT11E
Light Source Type	LED
Brightness	140 Lumens (High Mode)
Light Path Distance	70 Meters (210 Feet)
Power Source	Battery Powered
Battery Type	1 x AA Alkaline (Included)
Runtime	Up to 10 hours (Low Mode)
Material	Aircraft-Grade Aluminum
Water Resistance Level	IPX4 (Water Resistant)
Product Dimensions	1.18"D x 2.36"W x 6.02"H
Item Weight	2.89 ounces (0.08 Kilograms)
Special Feature	Durable, Compact, Tactical

7. WARRANTY AND SUPPORT

7.1 Warranty Information

According to product specifications, warranty information is not applicable for this product. Please refer to the retailer's return policy at the point of purchase for any issues.

7.2 Customer Support

For further assistance, product inquiries, or to provide feedback, please visit the official Energizer website or contact their customer service department. You can often find contact information on the product packaging or the brand's official online presence.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B098HC3YJ8>

More documents and user manuals: <https://manuals.plus/>