

[Manuals.plus](#) /

› [Hansgrohe](#) /

› Hansgrohe Vernis Shape M35 Kitchen Tap 210 Instruction Manual

Hansgrohe 71871000

Hansgrohe Vernis Shape M35 Kitchen Tap 210 Instruction Manual

Model: 71871000

INTRODUCTION

This manual provides essential information for the safe installation, operation, and maintenance of your Hansgrohe Vernis Shape M35 Kitchen Tap 210. Please read these instructions carefully before installation and retain them for future reference.



Image: Hansgrohe Vernis Shape M35 Kitchen Tap 210 in chrome, featuring its tall swivel spout and modern design.

The Hansgrohe Vernis Shape M35 Kitchen Tap 210 is designed for kitchen use, offering a tall swivel spout (ComfortZone 260) for ample space. It features a ceramic mixer system for precise control of water flow and temperature, and incorporates AirPower technology for a full, splash-reduced water jet. The swivel range can be set during installation to 110°, 150°, or 360° to suit various sink configurations.

SAFETY INFORMATION

- Ensure all water supply lines are turned off before beginning installation or maintenance.
- If you are unsure about any installation steps, consult a qualified plumber.
- Do not use abrasive cleaners or scouring pads on the chrome finish, as this can damage the surface.
- Protect the product from frost.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Single lever kitchen mixer tap
- Connection hoses (flexible, G 3/8, DN15)
- Shaft attachment
- Assembly instruction manual (this document)
- Fixing set

SETUP AND INSTALLATION

The Hansgrohe Vernis Shape M35 Kitchen Tap is designed for stand-mounting with a 1-hole installation. A minimum tap hole diameter of 32 mm is required.

1. **Prepare the Installation Area:** Ensure the sink or countertop has a suitable 1-hole opening. Clean the area thoroughly.
2. **Turn Off Water Supply:** Locate the main water shut-off valve and turn off both hot and cold water supplies to the kitchen area.
3. **Mount the Tap:** Insert the tap into the tap hole. Secure it from underneath the sink using the provided shaft attachment and fixing set. Ensure the tap is oriented correctly.
4. **Connect Water Hoses:** Connect the flexible G 3/8 connection hoses to the corresponding hot and cold water supply lines. Use appropriate tools to tighten connections, but do not overtighten. Ensure hoses are certified for drinking water (DN15).
5. **Set Swivel Area:** During installation, you can define the swivel area of the spout to 110°, 150°, or 360° according to your preference and sink configuration. Refer to the detailed diagrams in the printed assembly instructions for specific steps on adjusting the swivel limiter.
6. **Check for Leaks:** Slowly turn on the main water supply. Check all connections for leaks. If leaks are detected, tighten the connections further.
7. **Flush the System:** Before first use, open the tap and let water run for a few minutes to flush out any debris from the new installation.

OPERATING INSTRUCTIONS

The Hansgrohe Vernis Shape M35 Kitchen Tap features a single lever for controlling both water flow and temperature.

- **Water Flow Control:** Lift the lever upwards to increase water flow. Push it downwards to decrease or stop the flow.
- **Temperature Control:** Move the lever to the left for hot water and to the right for cold water. The ceramic mixer system allows for precise temperature adjustments.
- **AirPower Technology:** The tap incorporates AirPower technology, which enriches the water with air. This creates a softer, fuller water jet with reduced splash, enhancing comfort and efficiency.
- **Swivel Spout:** The spout can be swiveled within the pre-set range (110°, 150°, or 360°) to direct water where needed in the sink.

MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and appearance of your Hansgrohe kitchen tap.

- **Cleaning the Chrome Finish:** Clean the chrome surface regularly with a soft cloth and a mild, non-abrasive cleaning agent. Rinse thoroughly with clean water and dry with a soft cloth to prevent water spots.

- **Avoid Harsh Cleaners:** Do not use cleaners containing hydrochloric acid, formic acid, chlorine bleach, or acetic acid, as these can damage the finish. Avoid abrasive sponges or brushes.
- **Aerator Maintenance:** Periodically unscrew the aerator at the end of the spout and clean any mineral deposits or debris. This helps maintain optimal water flow.
- **Ceramic Cartridge:** The high-quality ceramic mixer system is designed for long-lasting, smooth operation and typically requires no user maintenance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low water flow	Clogged aerator; partially closed shut-off valve; debris in water lines.	Clean the aerator. Ensure shut-off valves are fully open. Flush water lines.
Leaking at connections	Loose connection; damaged washer/seal.	Tighten connections. Replace damaged washers or seals.
Dripping from spout	Worn ceramic cartridge.	Contact Hansgrohe customer support for a replacement ceramic cartridge.
Difficulty adjusting temperature	Issue with ceramic cartridge or water heater settings.	Check water heater settings. If problem persists, contact Hansgrohe support.

SPECIFICATIONS

Brand	Hansgrohe
Model Name	Vernis Shape M35 Kitchen Tap 210
Model Number	71871000
Material	Ceramic (for valve)
Finish Type	Chrome
Mounting Type	Deck Mount, 1-hole
Number of Handles	1 (Single Lever)
Valve Type	Disc Valve (Ceramic)
Spout Design	Swivel
Spout Reach (ComfortZone)	260 mm
Swivel Range	Adjustable (110°, 150°, 360°)
Additional Features	AirPower technology, Suitable for continuous flow heaters
Item Weight	1.68 Kilograms

WARRANTY AND SUPPORT

Hansgrohe provides high-quality products and support. While specific warranty terms may vary by region, Hansgrohe

generally offers a manufacturer's warranty on its products. Please refer to the official Hansgrohe website or your purchase documentation for detailed warranty information.

Spare parts for the Vernis Shape M35 Kitchen Tap are guaranteed to be available for up to 15 years after the product range has been discontinued, ensuring long-term serviceability.

For technical assistance, spare parts, or warranty claims, please contact Hansgrohe customer service through their official website or the contact information provided with your purchase.

© 2024 Hansgrohe. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question