

[Manuals.plus](#) /

> [Hoover](#) /

> Hoover CleanSlate Plus Portable Carpet + Upholstery Spot Cleaner Machine, Powerful Suction with Versatile Tools, Pet Stain Remover, Car and Auto Detailer, Pair with Hoover Carpet Cleaner Solution

## Hoover FH14050

# Hoover CleanSlate Plus Portable Carpet + Upholstery Spot Cleaner

Model: FH14050 | Brand: Hoover

## INTRODUCTION

The Hoover CleanSlate Upholstery & Carpet Spot Cleaner is designed for permanently removing stains and messes with powerful suction and versatile tools. Its light, portable design and long cord make it ideal for cleaning spills and stains on the go. The machine features a 7" WidePath tool for large areas and a TightSpot tool for crevices. The integrated Hose Rinse tool ensures the machine stays clean and ready for its next use.

## WHAT'S IN THE BOX

Your Hoover CleanSlate Plus package includes the following components:

- Hoover CleanSlate Plus Portable Carpet + Upholstery Spot Cleaner Machine
- 7" WidePath Tool
- TightSpot Tool
- Hose Rinse Tool
- Trial Oxy Cleaning Solution

# CHOOSE THE PERFECT SPOT CLEANER FOR YOU



Figure 1: All components included with the Hoover CleanSlate Plus.

## SETUP

### 1. Filling the Clean Water Tank

Remove the clean water tank from the unit. Unscrew the cap and fill the tank with water up to the indicated line. Add the appropriate amount of Hoover cleaning solution based on the area size (small or large). Securely screw the cap back on and reinsert the tank into the machine until it clicks into place.



Figure 2: Filling the clean water tank with solution and water.

## 2. Attaching Cleaning Tools

Select the appropriate cleaning tool (7" WidePath or TightSpot) for your task. Attach the tool securely to the end of the hose until it locks into position.

# POWERFULLY CLEAN-UP PET MESSSES



Figure 3: Attaching the 7" WidePath tool to the hose.

## OPERATING THE CLEANER

Plug the machine into a power outlet. Press the power button located on the top handle to turn the unit on. The machine is now ready for use.



Figure 4: Hoover CleanSlate Plus ready for operation.

### **Cleaning Process: Spray, Scrub, Suction**

To clean, hold the tool over the stained area. Press the trigger on the tool to spray cleaning solution onto the stain. Release the trigger and scrub the area with the tool's bristles. Then, tilt the tool to engage the suction and pull it across the wet area to extract the dirty solution. Repeat as necessary until the stain is removed.



Figure 5: The three-step cleaning process: Spray, Scrub, Suction.

Video 1: Demonstrating the powerful cleaning action of the Hoover CleanSlate Plus on upholstery.

Video 2: Overview of the portable spot, carpet, and car cleaning capabilities, including pet stain removal.

Video 3: A detailed review showcasing the effectiveness of the Hoover CleanSlate Carpet Cleaner.

Video 4: Comprehensive demonstration of the cleaner's features and performance.

## **MAINTENANCE**

### **1. Emptying and Cleaning the Dirty Water Tank**

After each use, remove the dirty water tank by pressing the release button and tilting it out. Open the lid and carefully pour out the dirty water. Rinse the tank thoroughly with clean water and allow it to air dry before reassembling.

### **2. Using the Hose Rinse Tool**

To prevent clogs and maintain optimal performance, use the hose rinse tool after each cleaning session. Attach the hose rinse tool to the end of the hose. Turn on the machine and press the trigger to circulate clean water through the hose, flushing out any remaining debris. Continue until the water runs clear.



Figure 6: Using the hose rinse tool for self-cleaning convenience.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No suction	Dirty water tank full or improperly seated; Suction path clogged; Hose not properly connected.	Empty and re-seat dirty water tank; Check and clear any clogs in the hose or suction path; Ensure hose is securely connected to the unit.
No spray	Clean water tank empty or improperly seated; Spray nozzle clogged; Trigger not pressed.	Fill and re-seat clean water tank; Clear any debris from the spray nozzle; Ensure trigger is fully pressed during operation.
Machine not turning on	Not plugged in; Power button not pressed correctly.	Ensure unit is securely plugged into a working outlet; Press the power button firmly.

## SPECIFICATIONS

Feature	Detail
Brand	Hoover
Model Name	CleanSlate Plus Carpet & Upholstery Spot Cleaner

Feature	Detail
Model Number	FH14050
Style	CleanSlate Plus
Color	White
Power Source	Corded Electric
Capacity	1.18 Liters (40 oz clean solution)
Item Weight	5.85 Kilograms (12.87 pounds)
Product Dimensions	14"D x 10.5"W x 13"H
Country of Origin	China

## WARRANTY & SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, troubleshooting, and customer support, please refer to the official user manual.

You can download the full User Manual (PDF)[here](#).