

[Manuals.plus](#) /

› [Galanz](#) /

› Galanz GLR74BWER12 7.4 Cu Ft Bottom Mount Retro Refrigerator Instruction Manual

Galanz GLR74BWER12

Galanz GLR74BWER12 7.4 Cu Ft Bottom Mount Retro Refrigerator Instruction Manual

Model: GLR74BWER12 | Brand: Galanz

INTRODUCTION

Thank you for choosing the Galanz GLR74BWER12 7.4 Cu Ft Bottom Mount Retro Refrigerator. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions thoroughly before use and retain them for future reference.



Image: Front view of the Galanz GLR74BWER12 Retro Refrigerator, showcasing its sleek white finish and chrome handles.

SAFETY INFORMATION

Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

- **Electrical Safety:** Ensure the refrigerator is properly grounded. Do not use extension cords.
- **Flammable Materials:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **Child Safety:** Supervise children to ensure they do not play with the appliance.
- **Ventilation:** Maintain proper ventilation around the appliance to prevent overheating.
- **Disposal:** Dispose of the appliance according to local regulations for flammable refrigerants and blowing gas.

PRODUCT OVERVIEW & FEATURES

The Galanz GLR74BWER12 refrigerator combines retro aesthetics with modern functionality. Key features include:

- **Space Saving & Large Capacity:** This retro bottom mount refrigerator, measuring 20.79" W x 24.09" D x 65.55" H, offers a 7.4 Cu. Ft. capacity, ideal for various spaces.
- **Adjustable Mechanical Thermostat Control:** Manually control the temperature with a dial from 0-7. The refrigerator compartment ranges from 32°F to 46.4°F, and the freezer compartment maintains $\leq 0.4^{\circ}\text{F}$.
- **Removable Glass Shelves:** Organize your food with ease using the glass shelves and a crystal crisper drawer, which can be adjusted or removed to suit your storage needs.
- **Energy Saving & Leveling Front Legs:** Utilizes an R600a high-efficiency, low-energy consumption compressor for quick cooling. Two adjustable leveling front legs ensure stable placement.
- **LED Interior Light:** A bright interior LED light provides better visibility, automatically turning on or off when the door is opened or closed.





Image: The Galanz GLR74BWER12 refrigerator with its upper door open, revealing the spacious interior of the fresh food compartment with glass shelves and door storage.

WHAT'S IN THE BOX

Upon unpacking, ensure all items are present:

- 1 x Refrigerator
- 6 x Removable Glass Shelves
- 1 x Crisper Drawer
- 1 x Power Cord
- 1 x Grounding Wire
- 1 x Grounding Plug

SETUP

1. **Unpacking:** Carefully remove all packaging materials, including foam and tape. Remove any protective film from the surfaces.
2. **Placement:** Place the refrigerator on a flat, stable surface away from direct sunlight and heat sources. Ensure adequate clearance around the appliance for proper ventilation (at least 4 inches from walls).
3. **Leveling:** Adjust the two front leveling legs to ensure the refrigerator is stable and level. This helps with door alignment and efficient operation.
4. **Cleaning:** Before first use, clean the interior and exterior of the refrigerator with a soft cloth and mild detergent.
5. **Power Connection:** Plug the refrigerator into a dedicated, grounded 120V/60Hz electrical outlet. Do not use an adapter or extension cord. Allow the refrigerator to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.



Image: Diagram showing the dimensions of the Galanz GLR74BWER12 refrigerator: 20.79 inches deep, 24.09 inches wide, and 65.55 inches high.

OPERATING INSTRUCTIONS

1. **Initial Power-On:** After plugging in, the interior light will illuminate, and the compressor will start.
2. **Temperature Control:** Locate the mechanical thermostat control dial inside the refrigerator compartment. Turn the dial to your desired setting (0-7). '0' is off, '7' is the coldest setting. For general use, a setting of '3' or '4' is recommended.
3. **Food Storage:** Arrange food items to allow for proper air circulation. Use the crisper drawer for fruits and vegetables to maintain freshness. The removable glass shelves can be adjusted to accommodate taller items.
4. **Door Storage:** Utilize the versatile door storage for bottles, condiments, and smaller items.



GALANZ

65.55 inch

24.09 inch

20.79 inch



Image: Interior view of the Galanz GLR74BWER12 refrigerator, showing adjustable glass shelves, door bins, and a transparent crisper drawer at the bottom.

Your browser does not support the video tag.

Video: An official product video from Galanz America - MA, showcasing the features and design of the Galanz retro refrigerator, including its interior layout and various color options.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your refrigerator.

- **Cleaning:** Unplug the appliance before cleaning. Clean the interior and exterior regularly with a mild detergent and warm water. Avoid abrasive cleaners or sharp objects.
- **Defrosting:** This model features Partial Automatic Defrost. However, if ice buildup becomes excessive in the freezer compartment, manually defrost by unplugging the unit and allowing ice to melt naturally. Do not use sharp objects to remove ice.
- **Door Gaskets:** Inspect door gaskets regularly for cracks or damage. Clean them with warm, soapy water to ensure a tight seal.
- **Condenser Coils:** Periodically clean the condenser coils at the back of the unit to improve efficiency.





Image: The Galanz GLR74BWER12 refrigerator with its bottom freezer door open, showing the interior shelves of the freezer compartment.

TROUBLESHOOTING

If you encounter issues with your refrigerator, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate	Not plugged in; circuit breaker tripped; temperature control set to '0'	Check power connection; reset breaker; adjust thermostat setting.
Temperature is too warm	Door opened too frequently; large amount of warm food added; poor ventilation; thermostat set too high	Minimize door openings; allow food to cool before storing; ensure proper clearance; lower thermostat setting.
Excessive noise	Appliance not level; objects vibrating against the unit	Adjust leveling legs; ensure nothing is touching the refrigerator.
Door does not close properly	Food packages blocking door; door gasket dirty/damaged; appliance not level	Rearrange items; clean/replace gasket; adjust leveling legs.

SPECIFICATIONS

Feature	Detail
Brand Name	Galanz
Model Info	GLR74BWER12
Item Weight	103.6 pounds
Product Dimensions	20.79 x 24.09 x 65.55 inches
Capacity	7.4 Cubic Feet
Annual Energy Consumption	350 Kilowatt Hours Per Year
Refrigerator Fresh Food Capacity	4.6 Cubic Feet
Freezer Capacity	3 Cubic Feet
Installation Type	Freestanding
Special Features	Frost Free, Large Capacity
Color	White
Voltage	120 Volts
Number Of Doors	2
Defrost System	Partial Automatic Defrost
Shelf Type	Glass
Certification	E Star

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Galanz website. You may also contact Galanz customer service directly for assistance.
Online Support: [Visit the Galanz Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question