

[Manuals.plus](#) /

› [Astibym](#) /

› Astibym Digital Sports Stopwatch Timer User Manual

## Astibym Astibymmowse7ftb2766

# Astibym Digital Sports Stopwatch Timer User Manual

Model: Astibymmowse7ftb2766

## 1. INTRODUCTION

---

This manual provides detailed instructions for the Astibym Digital Sports Stopwatch Timer. It is designed for users who require precise time measurement for various sports and activities. Please read this manual thoroughly to understand the functions and ensure proper use of your device.

## 2. PACKAGE CONTENTS

---

- 1 x Astibym Digital Sports Stopwatch Timer

## 3. PRODUCT OVERVIEW

---



**Figure 3.1:** Front view of the Astibym Digital Sports Stopwatch Timer, showing the display and control buttons.

The Astibym Digital Sports Stopwatch Timer features a large screen display for clear visibility and a durable design suitable for various environments. It includes multiple buttons for mode selection, start/stop, reset, and memory recall.



**Figure 3.2:** Back view of the stopwatch, showing the battery compartment and manufacturing details.

A lanyard is attached for convenient carrying around the neck or wrist, preventing loss and allowing quick access during activities.

## 4. SETUP

---

### 4.1 Battery Installation

The stopwatch comes with one AG13, 140mAh battery pre-installed. If the display is dim or unresponsive, the battery may need replacement. To replace the battery, carefully open the battery compartment on the back of the device, insert a new AG13 battery with the correct polarity, and secure the cover.

### 4.2 Initial Power-On

The device typically powers on automatically when the battery is installed. If the screen remains blank, press any button to activate it.

### 4.3 Attaching the Lanyard

The stopwatch includes a lanyard for portability. Attach the lanyard securely to the designated loop on the stopwatch. This allows you to wear it around your neck or wrist, or attach it to a bag.

## 5. OPERATING INSTRUCTIONS



Figure 5.1: Close-up of the stopwatch display, showing time and memory indicators, and button labels.

### 5.1 General Operation

1. **Mode Selection:** Press the **MODE** button to cycle through different functions: Stopwatch, Clock, Alarm, and Countdown.
2. **Timing and Measurement:** Once a mode is selected, use the **START/STOP** and **RESET/DOWN** buttons to operate the chosen function.

### 5.2 Stopwatch Mode

This mode measures time with 1/100 second accuracy, up to 9 hours, 59 minutes, 59.99 seconds.

- **Start/Stop:** Press **START/STOP** to begin timing. Press again to pause.
- **Reset:** While paused, press **RESET/DOWN** to clear the time to zero.
- **Split/Lap Timing:** During active timing, press **LAP/SPLIT** to record a split time without stopping the main timer. The display will momentarily show the split time. Press **LAP/SPLIT** again to return to the running time. The stopwatch can store up to 20 track memories for split/lap times.
- **Recalling Split/Lap Times:** After stopping the timer, press **RECALL/UP** to view stored split/lap times. Use **RECALL/UP** and **RESET/DOWN** to navigate through the memory from front to back or

back to front.

## 5.3 Clock Mode

In Clock Mode, the stopwatch displays the current time, day, week, and month.

- **Setting Time/Date:** In Clock Mode, press and hold **SET** to enter setting mode. Use **RECALL/UP** and **RESET/DOWN** to adjust values. Press **MODE** to move to the next setting (hours, minutes, seconds, month, day, week). Press **SET** again to exit setting mode.
- **12/24 Hour System:** While in Clock Mode, press **START/STOP** to toggle between 12-hour and 24-hour display formats.

## 5.4 Alarm Mode

The alarm function allows you to set a specific time for an audible alert.

- **Setting Alarm:** In Alarm Mode, press and hold **SET** to enter setting mode. Use **RECALL/UP** and **RESET/DOWN** to adjust the alarm time. Press **MODE** to confirm and move to the next setting. Press **SET** again to exit.
- **Activating/Deactivating Alarm:** In Alarm Mode, press **START/STOP** to toggle the alarm on or off. An alarm icon will appear on the display when activated.

## 5.5 Countdown Timer Mode

Use the countdown timer for specific duration tracking.

- **Setting Countdown:** In Countdown Mode, press and hold **SET** to enter setting mode. Use **RECALL/UP** and **RESET/DOWN** to set the desired countdown duration. Press **MODE** to move between hours, minutes, and seconds. Press **SET** again to exit.
- **Start/Stop Countdown:** Press **START/STOP** to begin the countdown. Press again to pause. When the countdown reaches zero, an alarm will sound.
- **Reset Countdown:** While paused, press **RESET/DOWN** to reset the countdown to its initial set value.

# 6. MAINTENANCE

---

## 6.1 Cleaning

Wipe the stopwatch with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used. Avoid using harsh chemicals or abrasive cleaners, as these can damage the display or casing.

## 6.2 Storage

Store the stopwatch in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, consider removing the battery to prevent leakage.

## 6.3 Battery Replacement

When the display becomes faint or the stopwatch malfunctions, it is likely time to replace the AG13 battery. Refer to Section 4.1 for battery replacement instructions.

# 7. TROUBLESHOOTING

---

## 7.1 Blank or Faint Display

- **Cause:** Low or depleted battery.
- **Solution:** Replace the AG13 battery.

## 7.2 Buttons Unresponsive

- **Cause:** Temporary software glitch or low battery.
- **Solution:** Remove and reinsert the battery to perform a hard reset. If the issue persists, replace the battery.

## 7.3 Incorrect Time/Date

- **Cause:** Time/date not set correctly or reset due to battery change.
- **Solution:** Refer to Section 5.3 to reset the time and date.

## 8. SPECIFICATIONS

Feature	Specification
Item Type	Electronic Stopwatch
Model Number	Astibymmowse7ftb2766
Material	Acrylonitrile Butadiene Styrene (ABS)
Accuracy	1/100 second
Battery	1 x AG13, 140mAh (built-in)
Max Measurement Time	9 hours, 59 minutes, 59.99 seconds
Memory	20 tracks
Dimensions (LxWxH)	10 x 10 x 10 Millimeters
Item Weight	75 g

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact your retailer or the manufacturer directly. Keep your purchase receipt as proof of purchase.