

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ZORAMI](#) /

› [ZORAMI Ear and Nose Hair Trimmer Clipper User Manual](#)

ZORAMI BRC001

ZORAMI Ear and Nose Hair Trimmer Clipper User Manual

Model: BRC001

Brand: ZORAMI

INTRODUCTION

The ZORAMI Ear and Nose Hair Trimmer Clipper is a versatile grooming tool designed for effective and comfortable removal of unwanted hair. Its compact, battery-operated design makes it ideal for both home use and travel. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance and longevity.



Figure 1: ZORAMI Ear and Nose Hair Trimmer Clipper and its packaging.

KEY FEATURES

- **Versatile Trimming:** Effectively removes hair from nose, ears, eyebrows, beard, and face.
- **Dual-Edge Spinning Blades:** Features a protective cover and 360° rotating design for smooth, precise, and painless trimming.
- **IPX7 Waterproof:** Fully washable and easy to clean under running water. The removable trimmer head simplifies maintenance.
- **Energy-Saving & Quiet Operation:** Upgraded motor offers powerful performance with 5% less power consumption. Operates quietly (less than 50db).
- **Battery-Operated:** Requires 1 AA battery (not included), providing over 6 months of use (based on 5 minutes per use).

PACKAGE CONTENTS

Upon opening the package, ensure all the following items are present:

- ZORAMI Ear and Nose Hair Trimmer Clipper
- Dust-proof protective cap
- Cleaning brush (typically included for maintenance)
- User Manual (this document)

Note: 1 AA battery is required and not included in the package.

SETUP

Battery Installation

1. Twist the bottom cap of the trimmer counter-clockwise and pull it off to open the battery compartment.
2. Insert one AA battery into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside.
3. Replace the bottom cap by twisting it clockwise until it is securely fastened.



Figure 2: Illustration of the trimmer's internal components and battery insertion point.

OPERATING INSTRUCTIONS

General Use

1. Remove the dust-proof protective cap from the trimmer head.
2. Slide the power switch to the "ON" position. The trimmer will begin to operate quietly.
3. Gently insert the trimmer head into the desired area (nose, ear, etc.) and move it slowly to trim unwanted hair. The dual-edge spinning blades will cut hair without pulling.
4. After use, slide the power switch to the "OFF" position.
5. Clean the trimmer head as described in the Maintenance section.
6. Replace the dust-proof protective cap for storage.

Specific Applications

Nose Hair Trimming



Figure 3: Gently insert the trimmer into the nostril and rotate for effective hair removal.

Ear Hair Trimming



Figure 4: Carefully guide the trimmer around the outer ear and ear canal opening to remove unwanted hair.

The trimmer can also be used for precise trimming of eyebrows, beard lines, and other facial hair. Always use a light touch and avoid pressing too hard against the skin.

MAINTENANCE

Cleaning the Trimmer Head

Regular cleaning ensures hygiene and prolongs the life of your trimmer. The IPX7 waterproof design allows for easy cleaning.

1. Turn off the trimmer.
2. Twist the trimmer head counter-clockwise to detach it from the main body.
3. Rinse the detached trimmer head under running water to remove hair clippings and debris. You may use the provided cleaning brush for stubborn particles.
4. Allow the trimmer head to air dry completely before reattaching it to the main body.
5. Reattach the trimmer head by aligning it and twisting clockwise until it clicks into place.



Figure 5: Step-by-step guide for detaching and rinsing the trimmer head for cleaning.

Storage

Always replace the dust-proof protective cap on the trimmer head after each use to prevent dust and debris from accumulating on the blades. Store the trimmer in a cool, dry place away from direct sunlight and moisture.

Important: If the trimmer will not be used for an extended period, remove the AA battery to prevent potential leakage and damage to the device.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is dead or incorrectly inserted.	Replace the AA battery with a new one, ensuring correct polarity (+/-).
Trimmer pulls hair or operates weakly.	Low battery power; hair accumulation in blades.	Replace the AA battery. Clean the trimmer head thoroughly as per Maintenance instructions.
Trimmer head is difficult to remove/attach.	Debris or improper alignment.	Ensure no hair or debris is obstructing the connection. Align the head correctly before twisting.

SPECIFICATIONS

- **Model:** BRC001
- **Power Source:** 1 x AA Battery (not included)
- **Dimensions:** 5.6 x 1.57 x 1.57 inches
- **Item Weight:** 2.8 Ounces
- **Waterproof Rating:** IPX7
- **Blade Material:** High-quality Stainless Steel
- **Manufacturer:** Ningbo Tianchao Electrical Appliance Co., LTD
- **Country of Origin:** China

WARRANTY AND SUPPORT

The ZORAMI nose hair trimmer comes with a 30-day full-money-back guarantee. If you have any questions or dissatisfaction with your product, please do not hesitate to reach out to ZORAMI customer support. We are committed to ensuring your satisfaction and will assist you with any inquiries or issues.

For support, please refer to the contact information provided on the product packaging or the official ZORAMI website.