

IKEA 505.046.92

IKEA LADDA Rechargeable Batteries User Manual

Model: 505.046.92

INTRODUCTION

This manual provides essential information for the safe and effective use of your IKEA LADDA Rechargeable AA Batteries. Please read this manual thoroughly before first use and retain it for future reference.

The IKEA LADDA rechargeable batteries are designed for various electronic devices requiring AA (HR6) size batteries. They offer a capacity of 2450mAh and a voltage of 1.2V, providing a reliable and sustainable power source.

IMPORTANT SAFETY INFORMATION

WARNING: KEEP OUT OF REACH OF CHILDREN.

Swallowing batteries can be fatal. If a battery is swallowed, seek immediate medical attention. Store batteries in a safe place away from children and pets.

- Do not disassemble, crush, puncture, or short-circuit the batteries.
- Do not expose batteries to fire or high temperatures.
- Do not mix new and used batteries, or different types of batteries.
- Ensure correct polarity (+/-) when inserting batteries.
- Remove batteries from devices not in use for extended periods.
- Dispose of used batteries according to local regulations.

 
PRODUCT OVERVIEW

LADDA


2450mAh



Design and Quality
IKEA of Sweden

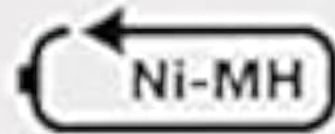

Rechargeable cell

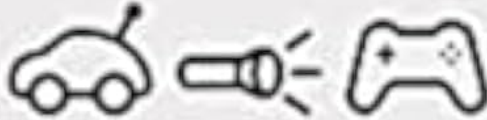 

WARNING
KEEP OUT OF REACH OF CHILDREN

If a battery has been swallowed or if you suspect that a battery has been swallowed, get immediate medical attention! Swallowing a battery may lead to severe injuries and death.



READY TO USE

Figure 1: IKEA LADDA AA Batteries (4-pack) in original packaging.

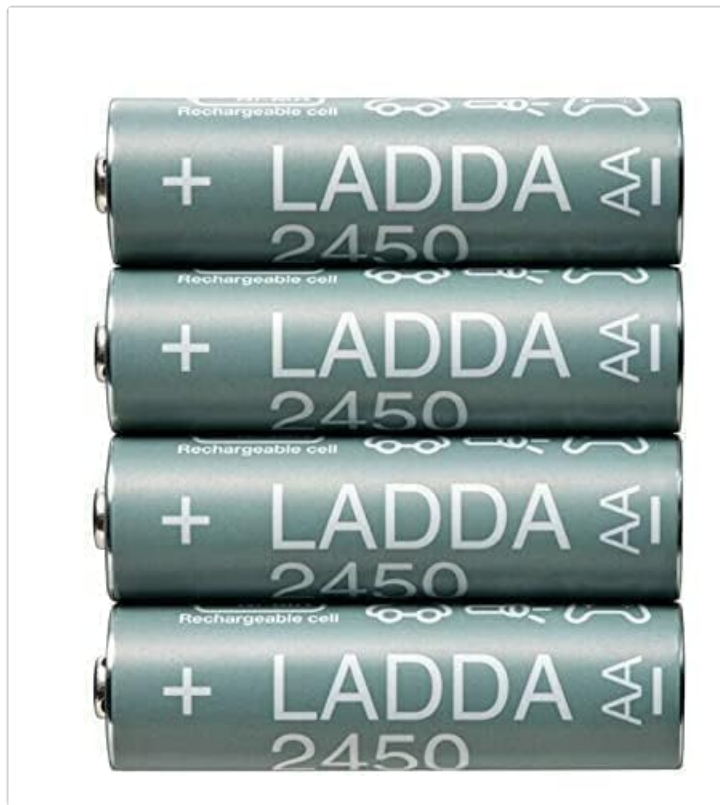 


Figure 2: Four IKEA LADDA AA Batteries, showing the grey design and "LADDA 2450" marking.

The IKEA LADDA AA rechargeable batteries are designed for high performance and durability. Key features include:

- Pack of 4 AA Rechargeable Batteries
- Capacity: 2450mAh
- Voltage: 1.2V
- Rechargeable up to 500 times
- Materials: Steel, PET Plastic
- New grey design for 2021

SETUP AND FIRST USE

Before using your new IKEA LADDA rechargeable batteries, it is recommended to fully charge them for optimal performance.

Charging the Batteries:

1. Insert the LADDA batteries into a compatible NiMH battery charger. Ensure correct polarity (+/-).
2. Connect the charger to a power source.
3. Allow the batteries to charge until the charger indicates they are full. Charging times vary depending on the charger model and battery depletion level.
4. Once charged, remove the batteries from the charger.

Inserting Batteries into a Device:

1. Identify the battery compartment of your device.
2. Open the battery compartment cover.

3. Insert the LADDA batteries, matching the positive (+) and negative (-) terminals with the markings inside the compartment.
4. Close the battery compartment cover securely.

OPERATING INSTRUCTIONS

IKEA LADDA batteries are designed for use in devices that require AA (HR6) size batteries. Common applications include:

- Cameras
- Clocks
- Radios
- Remote controls
- Toys
- Flashlights

Once inserted correctly, the device should power on. If the device does not power on, refer to the Troubleshooting section.

Recharging:

When the device indicates low battery or stops functioning, remove the batteries and recharge them using a compatible NiMH charger. Regular recharging helps maintain battery life and performance.

CARE AND MAINTENANCE

- **Storage:** Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. For long-term storage, it is recommended to store them at approximately 50% charge.
- **Cleaning:** If battery terminals become dirty, gently wipe them with a clean, dry cloth. Do not use water or chemical cleaners.
- **Disposal:** Do not dispose of batteries in household waste. Recycle them at designated collection points for batteries, as per local environmental regulations.
- **Cycle Life:** These batteries are rechargeable up to 500 times. Battery capacity may gradually decrease after many charge cycles, which is normal for rechargeable batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not powering on.	Batteries are not charged. Incorrect polarity. Batteries are old/worn out.	Charge the batteries fully. Check battery orientation (+/-). Replace with new batteries if cycle life is exhausted.

Problem	Possible Cause	Solution
Batteries not holding charge.	Batteries have reached end of life. Faulty charger.	Replace batteries. Try a different charger.
Batteries feel hot during charging.	Normal during charging. Overcharging. Faulty charger/batteries.	Slight warmth is normal. If excessively hot, discontinue charging and check charger/batteries.

SPECIFICATIONS

Model Number: 505.046.92
Battery Type: AA (HR6) Rechargeable
Battery Chemistry: NiMH (Nickel-Metal Hydride)
Capacity: 2450 mAh
Voltage: 1.2V
Recharge Cycles: Up to 500 times
Materials: Steel, PET Plastic
Item Weight: 4.4 ounces (for the pack)
Manufacturer: IKEA
Recommended Uses: Camera, Clock, Radio, etc.

WARRANTY AND SUPPORT

For information regarding warranty terms and conditions, please refer to the purchase documentation or visit the official IKEA website. For product support or inquiries, please contact IKEA customer service.
IKEA Official Website: www.ikea.com

© 2025 IKEA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question