

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN RM-ANU192 Remote Control Instruction Manual for Sony Soundbar Models

PERFASCIN RM-ANU192

PERFASCIN RM-ANU192 Remote Control Instruction Manual

For Sony Soundbar Models: SACT60BT, SS-WCT60, SA-CT60BT, HT-CT60BT, and others

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your PERFASCIN RM-ANU192 replacement remote control. This remote is designed to be compatible with various Sony Soundbar models, offering a convenient way to control your audio system.

Compatible Sony Soundbar Models include:

- SACT60BT
- SS-WCT60
- SSWCT60
- SA-CT60BT
- SACT60
- SA-CT60
- HT-CT60BT
- HTCT60BT
- HTCT60
- HT-CT60

2. SETUP

2.1 Battery Installation

The PERFASCIN RM-ANU192 remote control requires two (2) AAA batteries for operation. Ensure correct polarity when inserting the batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment.

4. Replace the battery compartment cover, ensuring it clicks securely into place.



Figure 2.1: Rear view of the RM-ANU192 remote control, illustrating the battery compartment location.

2.2 Initial Connection

This remote control operates via infrared (IR) technology. No manual pairing or programming is typically required. Once batteries are installed, point the remote directly at your Sony Soundbar and begin operation.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your PERFASCIN RM-ANU192 remote control. Below is a description of common button functions:



Figure 3.1: Front view of the RM-ANU192 remote control, displaying all control buttons.

Button	Function
TV I/O	Powers the connected TV On or Off.
I/O (Soundbar)	Powers the Sony Soundbar On or Off.
FUNCTION	Cycles through available input functions on the soundbar (e.g., TV, HDMI, Optical, Bluetooth).
BLUETOOTH PAIRING	Initiates Bluetooth pairing mode for connecting devices to the soundbar.
INPUT	Selects the audio input source for the soundbar.

Button	Function
VOL + / VOL -	Adjusts the main volume level of the soundbar.
CH + / CH -	(Typically for TV control) Changes TV channels up or down. May not be active for soundbar-only functions.
TV VOL + / TV VOL -	Adjusts the volume level of the connected TV.
MUTING (Soundbar)	Mutes or unmutes the soundbar audio.
SURROUND MUTING	Toggles the surround sound effect or mutes surround channels.
BASS + / BASS -	Adjusts the bass level of the soundbar.
TREBLE + / TREBLE -	Adjusts the treble level of the soundbar.

General Operation Tips:

- Ensure a clear line of sight between the remote control and the soundbar's IR receiver.
- Avoid placing objects that might block the signal.
- The effective range of the remote control is typically up to 20 feet (6 meters).

4. MAINTENANCE

4.1 Cleaning

To clean your remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in liquid.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not working.	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity.
Remote is unresponsive.	Obstruction between remote and soundbar; remote too far away.	Ensure a clear line of sight. Move closer to the soundbar.
Specific buttons do not function.	Button malfunction or not applicable to current soundbar mode.	Check if the button is relevant to the selected input/function. If not, the button may be faulty (rare).

6. SPECIFICATIONS

- **Model Number:** RM-ANU192
- **Brand:** PERFASCIN
- **Connectivity:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 7 x 2 x 0.6 inches (approximately)
- **Item Weight:** 1.13 ounces (approximately, without batteries)
- **Compatible Devices:** Sony Soundbar models including SACT60BT, SS-WCT60, SA-CT60BT, HT-CT60BT, and others.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Specific warranty details for this replacement remote control may vary. Please refer to the purchase documentation or contact your retailer for information regarding warranty coverage and terms.

7.2 Customer Support

For any inquiries, technical assistance, or issues not covered in this manual, please contact the seller or manufacturer directly. Refer to your purchase platform or packaging for contact information.

"If you have any inquiry about item, contact me freely, thanks in advance."

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question