

Braun D3055133KPKMCB

Braun Oral-B Kids PRO Electric Toothbrush User Manual

Model: D3055133KPKMCB

Brand: Braun

1. INTRODUCTION AND OVERVIEW

The Braun Oral-B Kids PRO Electric Toothbrush D3055133KPKMCB is designed to make brushing an engaging and effective experience for children. This electric toothbrush features a unique 3D round rotation action combined with up-and-down vibrations to effectively remove plaque, a primary cause of cavities. It includes a pressure sensor to protect gums and offers multiple brushing modes tailored for children's dental needs.

Key features include:

- **3D Round Rotation:** Combines oscillation, rotation, and pulsation for thorough cleaning.
- **Soft Bristles:** Specially designed soft bristles for gentle cleaning of milk teeth and gums.
- **3 Brushing Modes:** Includes a Daily Clean mode, a Soft Rotation mode for sensitive gums, and a Whitening mode.
- **Pressure Sensor:** Stops vertical movement if too much pressure is applied, protecting gums from damage.
- **2-Minute Timer:** Helps children brush for the dentist-recommended duration.
- **Pokemon Stickers:** Four special Pokemon design stickers are included to personalize the toothbrush handle.



Image: Oral-B Kids PRO Electric Toothbrush with Pokemon design, emphasizing extended brushing time for children.

2. SAFETY INFORMATION

Important Safety Warning: Children's use of this electric toothbrush requires adult supervision. Ensure children are instructed on proper brushing techniques to prevent injury.

- Do not use on infants.
- Keep the charging unit away from water.
- Inspect the brush head before each use. Replace if damaged.
- Do not modify the appliance.

3. SETUP

3.1 Charging the Toothbrush

1. Plug the charger into an electrical outlet.
2. Place the toothbrush handle on the charging unit. The charging indicator light will illuminate, indicating that the toothbrush is charging.
3. A full charge typically takes approximately 12-16 hours and provides up to 8 days of regular brushing (twice a day for 2 minutes).

3.2 Attaching the Brush Head

1. Align the brush head with the shaft on the toothbrush handle.
2. Push the brush head down firmly until it clicks into place.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off and Mode Selection

1. Press the power button once to turn on the toothbrush. It will start in the default Daily Clean mode.
2. To switch modes, press the power button repeatedly within 5 seconds of turning it on. The modes cycle

through: Daily Clean → Soft Rotation → Whitening.

3. To turn off the toothbrush, press and hold the power button for 2 seconds, or press the power button after cycling through all modes.



Image: Visual representation of the three available brushing modes.

4.2 Brushing Technique

1. Wet the brush head and apply a small amount of toothpaste.
2. Place the brush head on your child's teeth, guiding them to brush one tooth at a time.
3. Allow the brush head to do the work. Slowly move the brush head from tooth to tooth, holding it in place for a few seconds on each tooth surface.
4. Ensure all surfaces (outer, inner, and chewing surfaces) are cleaned.



Image: The 3D round rotation brush head in action, demonstrating plaque removal.

4.3 Pressure Sensor

The toothbrush is equipped with a pressure sensor. If too much pressure is applied during brushing, the vertical movement of the brush head will stop to protect your child's gums. Guide your child to brush gently.

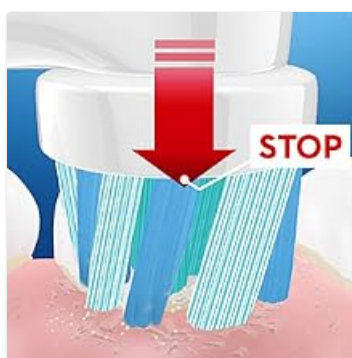


Image: The pressure stopper mechanism, indicating when brushing force is too high.

4.4 2-Minute Timer

The built-in timer signals after 2 minutes of brushing, indicating that the dentist-recommended brushing time has been reached. Encourage your child to continue brushing until the timer signals.

5. MAINTENANCE

5.1 Cleaning the Toothbrush

1. After each use, rinse the brush head thoroughly under running water with the handle switched on.
2. Turn off the handle and remove the brush head.
3. Rinse both the brush head and the handle separately under running water.
4. Wipe the handle dry with a cloth.

5.2 Replacing the Brush Head

Dentists recommend replacing the brush head every 3 months, or sooner if the bristles become splayed or worn. The indicator bristles on the brush head will fade halfway down to signal when it's time for a replacement.

6. TROUBLESHOOTING

- **Toothbrush not turning on:** Ensure the toothbrush is fully charged. If it still doesn't turn on, try charging it for a longer period or contact customer support.
- **Reduced brushing power:** This usually indicates a low battery. Place the toothbrush on the charger for a full charge.
- **Unusual noise during operation:** Check if the brush head is securely attached. If the noise persists and is significantly louder than usual, it may indicate an internal issue.
- **Brush head feels too large for child's mouth:** While this model uses a small, soft head designed for children, individual mouth sizes vary. Ensure the child is comfortable and can reach all areas. If discomfort persists, consult a dental professional for advice on suitable brush head sizes.
- **Gums bleeding:** This can occur if brushing too hard or if gums are inflamed. The pressure sensor helps prevent excessive force. If bleeding continues, consult a dentist.

7. SPECIFICATIONS

Feature	Detail
Brand	Braun
Model Number	D3055133KPKMCB
Target Age	Children
Power Source	Battery Powered
Bristle Hardness	Soft
Color	Caribbean
Brush Head Shape	Round
Operating Modes	3 (Daily Clean, Soft Rotation, Whitening)
Drive Method	Oscillation, Rotation, Vibration
Included Components	Timer, 1 Brush Head, 4 Pokemon Stickers
Bristle Material	Nylon

Handle Material	Acrylonitrile Butadiene Styrene (ABS)
-----------------	---------------------------------------



Image: Feature comparison table for various Oral-B Kids PRO models.

8. WARRANTY AND SUPPORT

This product comes with a full refund guarantee. For specific warranty details, duration, and terms, please refer to the documentation included with your purchase or visit the official Braun Oral-B website.

For customer support, technical assistance, or to inquire about replacement parts, please contact Braun customer service through their official channels. Contact information can typically be found on the product packaging or the manufacturer's website.