

ALLIMITY RM-L01

ALLIMITY Replacement Remote Control User Manual

For Humax iCord Evolution Satellite Receiver Streamer Models: 03202-00204, RM-L01, RML01

INTRODUCTION

This manual provides instructions for the ALLIMITY replacement remote control, designed for use with Humax iCord Evolution Satellite Receiver Streamer models. This remote control is a direct replacement and offers full functionality without the need for programming.





Figure 1: Front view of the ALLIMITY Replacement Remote Control. This image shows the full layout of buttons, including power, navigation, playback controls, and numeric keypad.

SETUP

1. **Battery Installation:** Locate the battery compartment on the back of the remote control. Open the cover and insert two new AAA alkaline batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment. Close the battery cover securely.
2. **No Programming Required:** This replacement remote control is pre-programmed and ready to use immediately with compatible Humax iCord Evolution Satellite Receiver Streamer models. No additional setup or code entry is necessary.



Figure 2: Angled view of the ALLIMITY Replacement Remote Control, highlighting the ergonomic design and button placement for easy access to functions.

OPERATING INSTRUCTIONS

The ALLIMITY replacement remote control functions identically to your original Humax remote. Below are general guidelines for common operations:

- **Power Button (U):** Press to turn your Humax device on or off.
- **Numeric Keypad (0-9):** Use to directly enter channel numbers or other numerical inputs.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Use to navigate menus, select options, and confirm choices.
- **Volume Control (+/-):** Adjust the audio volume.
- **Channel Control (P+/P-):** Change channels up or down.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind):** Control media playback functions.
- **Home Button:** Access the main menu or home screen of your device.
- **Guide Button:** Open the electronic program guide (EPG).
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons typically correspond to specific functions displayed

on your screen, depending on the context.

For detailed information on specific functions, please refer to the user manual of your Humax iCord Evolution Satellite Receiver Streamer.



Figure 3: Side view of the ALLIMITY Replacement Remote Control, illustrating its slim profile and button arrangement.

MAINTENANCE

- **Cleaning:** To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in liquid.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA alkaline).
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there is a clear line of sight between the remote control and the Humax device. Remove any obstructions.
 - Verify that the remote control is pointed directly at the infrared receiver on your Humax device.
- **Limited Range:**
 - Ensure batteries are fresh. Low battery power can reduce the remote's effective range.
 - Minimize interference from other electronic devices or strong light sources.
- **Specific Buttons Not Working:**
 - Clean the remote control, especially around the non-functioning buttons, to remove any dirt or debris that might be obstructing them.
 - If only specific buttons are not working after checking batteries and cleaning, the remote may be faulty and require replacement.

SPECIFICATIONS

Brand	ALLIMITY
Compatible Models	Humax iCord Evolution Satellite Receiver Streamer (03202-00204, RM-L01, RML01)
Remote Model Number	RM-L01
Manufacturer Part Number	QYSY-RM-L01-QYSY
Dimensions	4 x 12 x 0.3 cm
Weight	100 g
Special Feature	No programming required
Controller Type	Push button control

WARRANTY AND SUPPORT

For any issues not covered in this manual, or for warranty inquiries, please contact the seller or manufacturer directly. Please retain your proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question