

ECONTROLLY CT-8062

ECONTROLLY CT-8062 Remote Control User Manual

Model: CT-8062 (Replaces CT-8061)

INTRODUCTION

This manual provides instructions for the ECONTROLLY CT-8062 remote control, designed as a direct replacement for the CT-8061 model. It is compatible with various Toshiba LED LCD TV models, ensuring seamless operation without the need for programming.

Compatible Toshiba TV models include:

- 55L2600C
- 55U6500C
- 48L2600C
- T2016A
- 32P2650VS
- 24P2650VS

SETUP AND BATTERY INSTALLATION

The ECONTROLLY CT-8062 remote control requires two AAA alkaline batteries for operation. No programming is necessary; simply install the batteries, and the remote will be ready for use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.



Image: Back view of the ECONTROLLY CT-8062 remote control, illustrating the location of the battery compartment. The compartment cover is visible, indicating where to insert the two AAA batteries.

OPERATING INSTRUCTIONS

Once batteries are installed, point the remote control directly at your Toshiba TV. Ensure there are no obstructions between the remote and the TV's infrared receiver.





Image: Front view of the ECONTROLLY CT-8062 remote control, displaying its button layout. Key buttons include Power, OK, Navigation (Up, Down, Left, Right), Home, Settings, USB, and Volume controls.

Key Functions:

- **Power Button ():** Turns the TV on or off.

- **Navigation Buttons (Up, Down, Left, Right):** Used to navigate menus and select options.
- **OK Button:** Confirms selections.
- **Home Button (🏠):** Returns to the TV's home screen or main menu.
- **Settings Button (⚙️):** Accesses TV settings.
- **Volume Buttons (+/-):** Adjusts the TV's volume.
- **USB Button:** Likely for accessing media from a connected USB device.
- **Return Button (↶):** Navigates back to the previous screen or menu.

MAINTENANCE

- **Cleaning:** To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Replace batteries when the remote's response becomes sluggish or inconsistent.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Remote Control Not Responding:

- **Check Batteries:** Ensure that the batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with new AAA alkaline batteries.
- **Line of Sight:** Verify that there are no obstructions between the remote control and the TV's infrared sensor. The remote operates using infrared technology, which requires a clear line of sight.
- **Distance:** Ensure you are within the maximum operating range of 33 feet (10 meters) from the TV.
- **TV Sensor:** Confirm that the TV's infrared sensor is not blocked or dirty.

SPECIFICATIONS

Model Number	RCEC-CT-8062
Brand	ECONTROLLY
Compatible Devices	Toshiba Television (Specific models listed in Introduction)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Number of Buttons	20
Batteries Required	2 x AAA (Alkaline recommended)
Maximum Range	33 Feet (approximately 10 meters)
Product Dimensions	17.78 x 5.08 x 1.65 cm
Item Weight	28.35 g (1 Ounce)

WARRANTY INFORMATION

This ECONTROLLY remote control comes with a 30-day warranty from the date of purchase. During this period, returns or exchanges are accepted for manufacturing defects or malfunctions. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, troubleshooting, or warranty inquiries, please contact the seller or the manufacturer, ECONTROLLY Factory. Refer to your purchase documentation for specific contact details.