

Nictemaw NI5573-10

Nictemaw Portable Washing Machine User Manual

Model: NI5573-10

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Nictemaw Portable Washing Machine. Please read it thoroughly before first use and keep it for future reference. This compact and versatile appliance is designed for convenience in various living spaces, including apartments, dorms, and RVs.



Image: The Nictemaw Portable Washing Machine, a compact unit with a 20 lbs capacity, shown next to a laundry basket filled with clothes.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, always adhere to the following safety guidelines:

- **Electrical Safety:** Ensure the power outlet matches the machine's voltage (110V AC). Do not use extension cords. Unplug the machine when not in use or before cleaning.
- **Water Connection:** Securely connect all water hoses to prevent leaks. The water inlet temperature should be below 140°F (60°C) to avoid damage to internal components.
- **Drainage:** Ensure the drain pipe's height is less than 3.93 feet (1.2 meters) to prevent blocked drainage and potential leaks.
- **Placement:** Place the washing machine on a stable, level surface. The adjustable bottom feet can be used to ensure balance and stability, even on uneven terrain.
- **Child Safety:** Utilize the child lock feature to prevent accidental operation by children. Keep children away from the machine during operation.
- **General Use:** Do not wash waterproof materials. Do not overload the machine. Avoid placing heavy objects on the machine.



Image: Important tips for using the washing machine, including notes on factory testing (water stains are normal), maximum drain pipe height (3.93 feet), and recommended water inlet temperature (below 140°F).

3. PRODUCT OVERVIEW

Components and Features

Familiarize yourself with the main parts of your Nictemaw Portable Washing Machine:

- **Control Panel:** Intuitive LED display with push-button controls for programs, water levels, and functions.
- **Transparent Glass Cover:** Allows observation of the washing process.
- **Stainless Steel Inner Barrel:** Honeycomb-shaped design for gentle yet effective cleaning.
- **Built-in Lint Filter:** Detachable and easy to clean, effectively collects lint and debris.
- **Side Handles:** For easy lifting and moving of the machine.
- **Water Inlet:** Connection point for the water supply hose.
- **Drain Hose:** Extended hose with built-in drain pump for efficient water discharge.
- **Adjustable Bottom Feet:** For leveling the machine on uneven surfaces.



Image: A detailed diagram highlighting key components of the washing machine, including the water inlet, high-quality inlet hose, transparent glass cover, side handle, built-in filter & stainless steel inner barrel, extended drainage outlet, and adjustable bottom feet.

4. SETUP AND INSTALLATION

Initial Setup Steps:

1. **Unpacking:** Carefully remove the washing machine from its packaging. Retain packaging materials for future transport if needed.
2. **Placement:** Choose a flat, stable surface near a water source and drain. Adjust the bottom feet to ensure the machine is level and stable.
3. **Water Inlet Connection:** Connect the provided inlet hose to a suitable faucet. The machine supports quick connect adapters for most faucets or manual water pouring.
4. **Drain Hose Setup:** Position the extended drain hose into a sink, tub, or designated drain. Ensure the hose is not kinked and the outlet is below the maximum recommended height of 3.93 feet.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Image: Illustrations demonstrating two methods for water inlet: using a quick connect adapter for faucet connection and manual water pouring directly into the tub.

5. OPERATING INSTRUCTIONS

Control Panel and Programs:

The Nictemaw Portable Washing Machine features an intuitive LED button display for easy operation.



Image: A close-up of the washing machine's control panel, detailing the functions of Water Level, Program, Start/Pause, Power, and Child Lock buttons, along with the LED display.

Washing Programs:

Select from 10 pre-set programs to suit various laundry needs:

- **Common (01):** For everyday laundry.
- **Normal (02):** Standard wash cycle.
- **Quick (03):** A 20-minute quick wash for small loads.
- **Blanket (04):** Strong decontamination for bulky items.
- **Air Dry (05):** Independent air-drying function.
- **Soak (06):** Pre-soak cycle for heavily soiled clothes.
- **Wash (07):** Wash-only cycle.
- **Spin (08):** Spin-only cycle.
- **Wash and Rinses (09):** Combines washing and rinsing.
- **Rinses and Spin (10):** Combines rinsing and spinning.



Image: Visual representation of the 10 laundry programs available on the Nictemaw washing machine, including Normal, Quick, Blanket, and Soak, designed to meet daily needs.

Water Level Selection:

The machine offers 8 optional water levels. The default level is 6. Adjust the water level according to the load size to optimize water and energy consumption.



Image: A diagram illustrating different water levels and their recommended uses: Low Level for Rinsing, Middle Level for Washing, and High Level for Soaking.

Special Functions:

- **24-Hour Delayed Start:** Use this function to set a delayed start time for your wash cycle, allowing you to manage your laundry schedule efficiently.
- **Child Lock:** Activate the child lock to prevent unintended changes to settings or operation.
- **Auto Unbalance Detection (AUD):** The machine can autonomously detect and correct imbalances in the laundry load to ensure even washing and effective stain removal, reducing vibration and noise.



Image: An illustration demonstrating the 24-hour delay washing function, showing clothes being put in at 23:00 for washing after 10 hours, ready to be hung the next morning at 8:00.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

Tub Self-Cleaning:

The machine features a tub self-cleaning function to maintain a hygienic laundry environment and prevent secondary pollution of clothes. This function uses high-pressure water flow and a 360° scour pulsator to clean the inner barrel.



Image: A visual demonstrating the High-Pressure Tub Clean feature, showing the 360° scour pulsator and intensive water flow cleaning the tub wall, with 'Before' and 'After' illustrations.

Lint Filter Cleaning:

The built-in lint filter effectively collects thread and paper scraps. It is detachable and easy to clean, which helps reduce lint residue on clothes and keeps the machine barrel clean.



Image: A diagram illustrating the built-in lint filter, highlighting its high lint collection rate and ease of detachment and cleaning. A comparison shows less lint residue with the Nictemaw filter versus others.

7. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not power on.	No power supply; power cord loose.	Check power outlet and ensure cord is securely plugged in.
Water leakage.	Hoses not properly connected; drain hose too high or kinked.	Ensure all hose connections are tight. Adjust drain hose height and remove kinks.
Excessive vibration/noise.	Machine is not level; laundry load is unbalanced.	Adjust bottom feet to level the machine. Redistribute laundry evenly in the tub. The Auto Unbalance Detection system will attempt to correct this automatically.
Water not draining.	Drain hose blocked or too high.	Clear any blockages in the drain hose. Ensure the drain hose is positioned correctly and not exceeding 3.93 feet in height.

If problems persist after attempting these solutions, please contact Nictemaw customer service for assistance.

8. SPECIFICATIONS

Key technical specifications for the Nictemaw Portable Washing Machine:

- **Brand:** Nictemaw
- **Model Info:** NI5573-10
- **Capacity:** 2.8 Cubic Feet (20 Lbs)

- **Product Dimensions:** 18.2 x 18.2 x 31.4 inches (20"D x 20"W x 34.6"H)
- **Item Weight:** 57 pounds
- **Max Spin Speed:** 1300 RPM
- **Standard Cycles:** 10
- **Water Levels:** 8
- **Installation Type:** Freestanding
- **Control Console:** Push Button
- **Color:** Grey-Black
- **Voltage:** 110 Volts (AC)
- **Included Components:** Drain Hose, User Manual

9. WARRANTY AND SUPPORT

For any product-related issues, technical support, or warranty inquiries, please contact Nictemaw customer service. Refer to your purchase documentation for specific warranty terms and contact information.

We are committed to providing reliable products and excellent customer support to ensure your satisfaction.