

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY RM-C3196 Replacement Remote Control for JVC TV User Manual

ECONTROLLY RM-C3196

ECONTROLLY RM-C3196 Replacement Remote Control for JVC TV User Manual

1. INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY RM-C3196 replacement remote control, designed specifically for JVC televisions. This remote control is ready to use immediately after battery installation, requiring no additional programming or setup.

2. PACKAGE CONTENTS

- 1 x ECONTROLLY RM-C3196 Replacement Remote Control

3. SETUP: BATTERY INSTALLATION

To begin using your RM-C3196 remote control, follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

The remote control is now ready for use with your JVC TV.

4. OPERATING INSTRUCTIONS

The RM-C3196 remote control provides full functionality for your JVC TV. Ensure there is a clear line of sight between the remote control and the TV's infrared sensor.





An image showing the full layout of the ECONTROLLY RM-C3196 remote control. The remote is black with various function buttons, including power, number keys, navigation, volume, channel, and media controls. The model number RM-C3196 is printed at the bottom.

Button Functions:

- **Power ()**: Turns the TV on or off.
- **NICAM**: Selects the NICAM sound system.
- **ASPECT**: Adjusts the screen aspect ratio.
- **PMODE**: Cycles through picture modes (e.g., Standard, Dynamic, Movie).
- **SMODE**: Cycles through sound modes (e.g., Standard, Music, Speech).
- **Mute ()**: Mutes or unmutes the TV sound.
- **Number Buttons (0-9)**: Directly select channels or input numerical values.
- **-/--**: Toggles between single and double-digit channel input.
- **DISPLAY**: Shows on-screen information about the current program or input.
- **AUTO**: Automatic function, may initiate auto-tuning or auto-adjustment.
- **Color Buttons (RED, GREEN, YELLOW/REPEAT, BLUE)**: Used for specific functions in menus or interactive services.
- **SLEEP**: Sets the sleep timer for the TV.
- **SOURCE**: Selects the input source (e.g., HDMI, AV, TV).
- **Navigation Buttons (▲ ▼ ◀ ▶)**: Navigate through menus and options.
- **ENTER**: Confirms selections in menus.
- **MENU**: Opens the main TV menu.
- **EXIT**: Closes the current menu or on-screen display.
- **TV**: Switches to TV mode.
- **CH ▲/▼**: Changes channels up or down.
- **CC**: Activates or deactivates Closed Captions.
- **VOL ▲/▼**: Adjusts the volume level up or down.
- **MEDIA**: Accesses media playback functions.
- **RADIO**: Switches to radio mode (if supported by TV).
- **S.TITLE**: Selects subtitle options.
- **FAV**: Accesses favorite channels list.
- **T.SHIFT**: Activates time shift function (if supported by TV).
- **EPG**: Displays the Electronic Program Guide.
- **Playback Controls (, , , , ,)**: Control media playback (Play/Pause, Stop, Rewind, Fast Forward, Previous Track, Next Track).

5. TROUBLESHOOTING

If your remote control is not functioning as expected, please refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective range of the TV's infrared receiver.
- **Specific Buttons Not Working:**

- This remote is a direct replacement and does not require programming. If a button does not work, ensure your JVC TV model supports that specific function.

6. SPECIFICATIONS

Model Number	RM-C3196 (RCEC-RM-C3196)
Brand	ECONTROLLY
Compatibility	JVC TV
Power Source	2 x AAA Batteries (not included)
Connectivity Technology	Infrared
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounce
Special Feature	Ergonomic

7. WARRANTY AND SUPPORT

Specific warranty information for the ECONTROLLY RM-C3196 remote control is not provided in this manual. For warranty details or technical support, please refer to the seller or manufacturer's contact information provided at the time of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B098QSHC97>

More documents and user manuals: <https://manuals.plus/>