

[Manuals.plus](#) /

› [VINABTY](#) /

› VINABTY VAH0130 Remote Control Instruction Manual for Yamaha Sound Systems

VINABTY VAH0130

VINABTY VAH0130 Remote Control Instruction Manual

For Yamaha Front Surround System ATS-4080, MusicCast Bar 400, YAS-408, YAS408BL Soundbars

1. INTRODUCTION

This manual provides instructions for the VINABTY VAH0130 replacement remote control. This remote is designed to be compatible with various Yamaha Front Surround Systems, including the ATS-4080, MusicCast Bar 400, YAS-408, and YAS408BL Soundbars. It functions as an infrared (IR) remote and requires no programming for initial use.

2. SETUP AND BATTERY INSTALLATION

The VAH0130 remote control operates using two AAA batteries. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two 1.5V AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

This remote control is an IR (Infrared) type and does not require any programming or pairing with your Yamaha sound system. Once batteries are installed, it is ready for use.



Figure 2.1: Battery compartment with two AAA batteries installed. Ensure correct polarity.

3. OPERATING THE REMOTE CONTROL

The VAH0130 remote control provides comprehensive control over your compatible Yamaha sound system. Point the remote directly at the soundbar's IR receiver for optimal performance. Below is an overview of the main buttons and their functions:







Figure 3.1: Front view of the VAH0130 remote control.

- **Power Button ()**: Turns the sound system on or off.
- **TV Button**: Selects the TV audio input source on the sound system.
- **SURROUND / 3D SURROUND**: Activates or cycles through various surround sound modes.
- **BLUETOOTH**: Selects the Bluetooth input for wireless audio streaming.
- **SUBWOOFER (+/-)**: Adjusts the subwoofer volume level.
- **VOLUME (+/-)**: Increases or decreases the main volume level.
- **Mute Button ()**: Mutes or unmutes the sound.
- **NET**: Selects the network input for streaming services (if supported by your sound system).
- **HDMI**: Cycles through available HDMI input sources.
- **STEREO / ANALOG**: Selects stereo or analog audio input modes.
- **DIMMER**: Adjusts the brightness of the soundbar's display.
- **FAVORITE (1, 2, 3)**: Recalls preset favorite settings or inputs.
- **INFO**: Displays information about the current input or settings.
- **CLEAR**: Clears current selections or settings.
- **VOICE / BASS / EXTENSION**: These buttons may control specific audio enhancements or features depending on your sound system model. Refer to your Yamaha sound system's manual for detailed functionality.
- **Directional Pad (Up, Down, Left, Right, Enter)**: Navigates menus and confirms selections.

4. MAINTENANCE

Proper maintenance ensures the longevity and reliable operation of your remote control.

- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.
- **Cleaning**: Use a soft, dry cloth to clean the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.
- **Storage**: Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

If you encounter issues with your VAH0130 remote control, try the following troubleshooting steps:

- **Remote Not Responding**:
 - Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh 1.5V AAA batteries.
 - Ensure there is a clear line of sight between the remote control and the IR receiver on your Yamaha sound system. Obstructions can block the signal.

- Move closer to the sound system. The effective range for IR remotes is typically up to 20 feet (6 meters).

• **Specific Buttons Not Working:**

- Clean the remote control, especially around the non-functioning buttons, to ensure no debris is preventing proper contact.
- Verify that the button's function is supported by your specific Yamaha sound system model. Some buttons may have limited or no function depending on the soundbar's features.

• **Interference:**

- Strong light sources, especially fluorescent lights or direct sunlight, can interfere with IR signals. Try operating the remote in different lighting conditions.

If the issue persists after trying these steps, the remote control may be faulty, or there might be an issue with your Yamaha sound system's IR receiver. Consult your sound system's manual or contact its manufacturer for further assistance.

6. SPECIFICATIONS

Feature	Specification
Model Number	VAH0130
Brand	VINABTY
Compatible Devices	Yamaha Front Surround System, MusicCast Bar 400, YAS-408, YAS408BL Soundbar
Connectivity Technology	Infrared (IR)
Power Source	2 x 1.5V AAA Batteries
Product Dimensions	5 x 2 x 0.65 inches (12.7 x 5.08 x 1.65 cm)
Item Weight	1.13 ounces (32 grams)
Max. Supported Devices	1 (Specific Yamaha Sound System)

7. WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct customer support for the VINABTY VAH0130 remote control is not available in the provided product data. Please refer to the seller's return policy or contact the seller directly for warranty claims or support inquiries.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question