Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Zokop /
- > Zokop Outdoor Camp Stove High Pressure Propane Gas Cooker Instruction Manual

Zokop B098R5MSZS

Zokop Outdoor Camp Stove High Pressure Propane Gas Cooker Instruction Manual

Model: B098R5MSZS

INTRODUCTION

Thank you for purchasing the Zokop Outdoor Camp Stove. This high-pressure propane gas cooker is designed for outdoor use, providing a powerful and efficient cooking solution for camping, patio cooking, and other outdoor activities. Please read this manual thoroughly before assembly and operation to ensure safe and proper use of your appliance.

This stove features a robust cast iron construction, a powerful 75,000 BTU burner, and an adjustable 0-20 PSI regulator for precise heat control. Its portable design with removable legs makes it convenient for transport and storage.



Image: The Zokop Outdoor Camp Stove, fully assembled, showing the main burner unit, four legs, and the attached propane regulator and hose.

IMPORTANT SAFETY INFORMATION

WARNING: For Outdoor Use Only. Do not operate this appliance indoors or in an enclosed area.

DANGER: If you smell gas:

- 1. Shut off gas to the appliance.
- 2. Extinguish any open flame.
- 3. Open lid if equipped.
- 4. If odor continues, keep away from the appliance and immediately call your gas supplier or fire department.
- Read all instructions before operating the appliance.
- Keep children and pets away from the appliance at all times.
- Never leave the appliance unattended while in use.
- Always operate the appliance on a level, stable, non-combustible surface.
- Maintain a safe distance from combustible materials.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any

other appliance.

- Always connect the gas cylinder outdoors in a well-ventilated area.
- Check for gas leaks using a soapy water solution before each use.
- Do not obstruct the flow of combustion and ventilation air.
- Wear protective gloves when handling hot surfaces.
- Ensure all connections are tight before opening the gas supply.

PACKAGE CONTENTS

Carefully unpack all components and ensure you have received the following items:

- 1 x Single Burner Stove Unit (with integrated burner and control knob)
- 4 x Removable Legs
- 1 x 0-20 PSI Adjustable Regulator with Hose (1.2m / 47.2 inches)
- Instruction Manual



Image: All components of the Zokop Outdoor Camp Stove laid out, including the main burner unit, four detachable legs, the gas hose with regulator, and eye bolts for leg attachment.

SETUP AND ASSEMBLY

Follow these steps to assemble your Zokop Outdoor Camp Stove:

- 1. **Unpack Components:** Remove all parts from the packaging.
- Attach Legs: Insert each of the four removable legs into the designated sockets on the underside of the stove unit. Ensure they are securely seated. The legs are designed for easy removal for transport and storage.

DETACHABLE LEGS

For convenient transport & storage

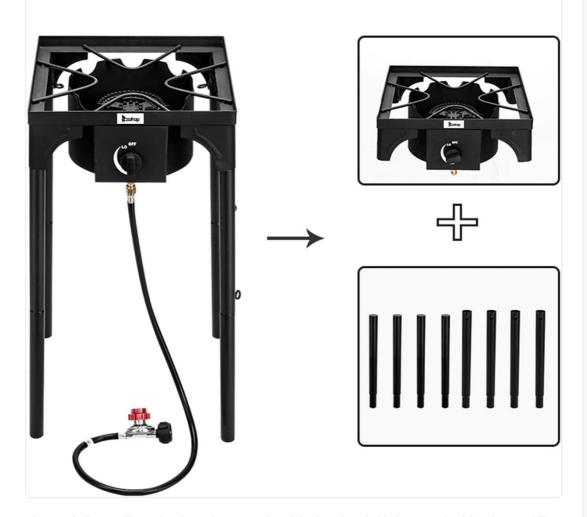


Image: A diagram illustrating the main stove unit and the four detachable legs, emphasizing the portability feature.

3. Connect Regulator and Hose:

- Ensure the stove's control knob is in the "OFF" position.
- Connect the hose end of the regulator to the gas inlet on the stove unit. Hand-tighten firmly.
- Connect the other end of the regulator to your propane gas cylinder (not included).
 Hand-tighten firmly.



Image: A close-up view of the 0-20 PSI adjustable propane regulator and hose, showing the connection points.

4. Leak Test:

- Mix a solution of equal parts liquid dish soap and water.
- Ensure the stove's control knob is "OFF".
- Slowly open the valve on the propane cylinder.
- Apply the soapy solution to all gas connections (stove inlet, regulator connections).
- If bubbles appear, there is a leak. Immediately close the propane cylinder valve and retighten connections. Repeat the leak test. If leaks persist, do not use the appliance and contact customer support.
- If no bubbles appear, the connections are secure. Close the propane cylinder valve before proceeding.

OPERATING INSTRUCTIONS

Always operate the stove in a well-ventilated outdoor area, away from flammable materials.

- 1. **Prepare for Cooking:** Place the stove on a stable, level surface. Ensure your cooking pot or pan is ready.
- 2. Open Gas Supply: Slowly open the valve on your propane gas cylinder.
- 3. Ignite Burner:
 - Turn the stove's control knob to the "LO" (Low) position.
 - Immediately apply a long match or lighter to the burner head.
 - Once ignited, adjust the flame to your desired cooking temperature using the control knob.

Note: This stove does not have an integrated igniter. Manual ignition is required.

75000BTU OUTPUT

Great for outdoor cooking or to has an extra stove



Image: The Zokop Outdoor Camp Stove with a red propane tank positioned underneath, illustrating its high heat output capability of 75,000 BTU.

4. **Adjust Heat:** The 0-20 PSI adjustable regulator and the stove's control knob allow for precise flame adjustment, from a low simmer to a powerful boil.

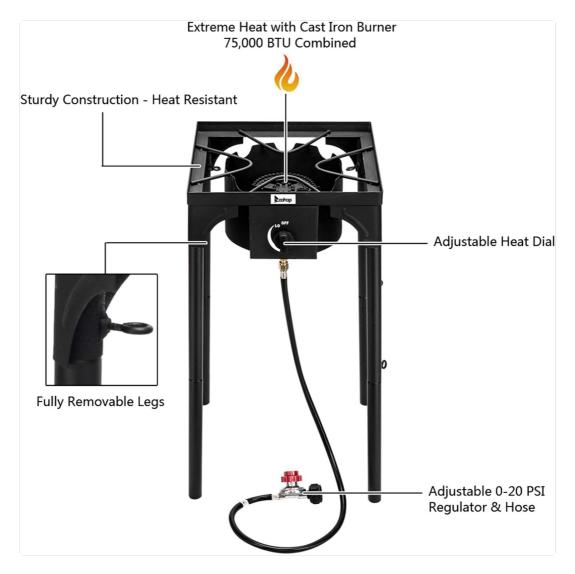


Image: A detailed diagram of the Zokop Camp Stove, pointing out key features such as the 75,000 BTU cast iron burner, sturdy construction, adjustable heat dial, fully removable legs, and the 0-20 PSI regulator and hose.

5. After Use:

- Turn the stove's control knob to the "OFF" position.
- Close the valve on the propane gas cylinder.
- Allow the stove to cool completely before handling or storing.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your stove.

- Cleaning: After each use, once the stove has cooled, wipe down the surfaces with a damp cloth. For stubborn grease or food residue, use a mild soap solution. Avoid abrasive cleaners or scouring pads that could damage the finish.
- **Burner Maintenance:** Periodically inspect the burner ports for any blockages (e.g., insect nests, food debris). Use a soft brush or compressed air to clear any obstructions.
- Hose and Regulator: Regularly inspect the gas hose and regulator for cracks, cuts, or signs
 of wear. If any damage is found, replace the component immediately with a Zokop-approved
 part.
- **Storage:** When not in use, disconnect the propane cylinder. Clean the stove and store it in a dry, protected area. The removable legs can be detached for more compact storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner does not ignite.	 No gas flow. Gas cylinder empty. Blockage in burner or hose. Control knob not open. 	 Ensure propane cylinder valve is open. Check gas cylinder level; replace if empty. Inspect hose and burner for obstructions. Turn control knob to "LO" or higher.
Low flame or inconsistent flame.	 Low gas pressure. Partial blockage in burner or hose. Regulator issue. 	 Adjust regulator to a higher PSI setting. Clean burner ports; check hose for kinks. Ensure regulator is properly connected and functioning.
Gas odor detected.	Gas leak at connections.Damaged hose or regulator.	 Immediately shut off gas. Perform a leak test with soapy water. Tighten connections or replace damaged parts. Do not operate if leak persists.

SPECIFICATIONS

• Product Type: Single Burner Outdoor Stove

• Brand: Zokop

Model: B098R5MSZSMaterial: Cast Iron

• Fuel Type: Liquefied Petroleum Gas (Propane)

Maximum Energy Output: 75,000 BTU
 Burner Diameter: 10.24 inches (26 cm)

• Furnace Head Diameter: 5.51 inches (14 cm)

• Regulator: 0-20 PSI Adjustable Regulator with 1.2m (47.2 inches) Hose

• **Product Dimensions (Assembled):** 15.75" L x 15.75" W x 29.92" H (40 x 40 x 76 cm)

• **UPC**: 661706982696



Image: A diagram showing the key dimensions of the Zokop Outdoor Camp Stove: 15.7 inches length, 15.7 inches width, and 29.9 inches height.

WARRANTY INFORMATION

Specific warranty details for Zokop products may vary. Please refer to the warranty card included with your purchase or visit the official Zokop website for the most current warranty policy. Typically, warranties cover manufacturing defects under normal use conditions.

Keep your purchase receipt as proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, operation, or troubleshooting, or need

to report a damaged or missing part, please contact Zokop customer support.

For the most up-to-date contact information, please visit the official Zokop website or refer to the contact details provided on your product packaging or warranty card.

When contacting support, please have your product model number (B098R5MSZS) and purchase date readily available.

Related Documents - B098R5MSZS



Zokop 721R Air Cooler User Manual: Operation, Maintenance, and Safety

Official user manual for the Zokop 721R air cooler. Provides detailed instructions on setup, operation, functions, troubleshooting, cleaning, maintenance, and safety precautions for optimal use.



Zokop JC-46 Beverage Cooler Instruction Manual

Instruction manual for the Zokop JC-46 Beverage Cooler, covering safety guidelines, parts identification, installation procedures, care and cleaning instructions, and troubleshooting tips.



Zokop NSC-150-7A2R Oil-Filled Radiator User Manual | Instructions & Features

Comprehensive user instruction manual for the Zokop NSC-150-7A2R Oil-Filled Radiator. Learn about safety, specifications, assembly, operation, maintenance, and troubleshooting.



Zokop NSC-150-7B2 Oil-Filled Radiator User Instruction Manual

Comprehensive user manual for the Zokop NSC-150-7B2 oil-filled radiator, covering important safety instructions, method of use, installation, maintenance, and troubleshooting.



Zokop FP1936W Electric Fireplace User Manual

Comprehensive user manual for the Zokop FP1936W electric fireplace, covering safety instructions, preparation, assembly, operation, care, maintenance, and troubleshooting. Includes specifications and FAQs.



Zokop FP1930W Electric Fireplace User Manual and Safety Instructions

Comprehensive user manual for the Zokop FP1930W electric fireplace, covering safety instructions, preparation, assembly, operation, care, maintenance, and troubleshooting.