

HADEN HDI6014

Haden 60cm Built In Dishwasher User Manual

Model: HDI6014

Brand: HADEN

INTRODUCTION

This user manual provides comprehensive instructions for the installation, operation, maintenance, and troubleshooting of your Haden HDI6014 60cm Built-In Dishwasher. Please read this manual carefully before using the appliance to ensure safe and efficient operation. Keep this manual for future reference.

The Haden HDI6014 is an energy-efficient, full-size integrated dishwasher designed to seamlessly blend into your kitchen cabinetry. It offers 14 place settings, low water consumption (11 liters per cycle), and a natural drying system for optimal performance and convenience.

SAFETY INFORMATION

Always adhere to the following safety precautions to prevent injury or damage to the appliance.

- Ensure the dishwasher is properly earthed before use.
- Do not touch the heating element during or immediately after operation.
- Keep children away from the dishwasher, especially when it is operating or the door is open.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not open the door during the wash cycle, as hot water may spray out.
- In case of malfunction, switch off the appliance and disconnect it from the power supply before attempting any repairs. Contact qualified service personnel.
- Sharp items should be loaded with points down to prevent injury.

SETUP AND INSTALLATION

The Haden HDI6014 is a built-in appliance and requires professional installation. Ensure the following steps are followed for proper setup:

1. **Unpacking:** Carefully remove all packaging materials. Inspect the dishwasher for any transit damage.
2. **Positioning:** Place the dishwasher in the desired cabinet opening. Ensure there is adequate space for ventilation and connections.

3. **Water Connection:** Connect the water inlet hose to a cold water supply and the drain hose to a suitable drain. Ensure all connections are secure and leak-free.
4. **Electrical Connection:** Connect the appliance to a grounded electrical outlet. Verify that the voltage and frequency match the specifications on the rating plate.
5. **Leveling:** Adjust the leveling feet to ensure the dishwasher is stable and level. This prevents vibrations and ensures proper door alignment.
6. **Cabinet Integration:** Secure the dishwasher to the surrounding cabinetry using the provided brackets. Install the custom cabinet panel (not included) onto the dishwasher door.



Figure 1: Front view of the Haden HDI6014 dishwasher with the door open, revealing the upper and lower racks. This image illustrates the internal layout and capacity of the appliance before loading.

OPERATING INSTRUCTIONS

Loading the Dishwasher

Proper loading ensures optimal cleaning performance and prevents damage to dishes. The Haden HDI6014 offers 14 place settings.

- Scrape off large food particles from dishes before loading.
- Place larger items like pots and pans in the lower rack.
- Arrange plates and bowls facing the center of the dishwasher.
- Load glasses, cups, and smaller bowls in the upper rack, ensuring they are stable.
- Place cutlery in the cutlery basket with handles down for forks and spoons, and handles up for knives (for safety).
- Ensure spray arms can rotate freely and are not blocked by tall items.



Figure 2: Interior view of the Haden HDI6014 dishwasher with various dishes, including plates, bowls, and glasses, loaded into the upper and lower racks. This demonstrates a typical loading configuration for efficient washing.



Figure 3: A close-up view of dishes, specifically plates and bowls, positioned within the lower rack of the Haden HDI6014 dishwasher. This highlights the spacing and arrangement for effective cleaning.

Adding Detergent and Rinse Aid

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent according to the cycle selected and the soil level of the dishes.
- Refill the rinse aid dispenser when the indicator light illuminates. Rinse aid helps with drying and prevents spots.

Selecting a Wash Cycle

The Haden HDI6014 offers 6 cycle options, including Economy, Glassware, Normal, and Rapid. Refer to the control panel for specific program details.

1. Close the dishwasher door firmly.
2. Press the Power button to turn on the appliance.
3. Select the desired wash cycle using the program selection buttons.
4. If desired, activate the Delay Start function to postpone the cycle start.

5. Press the Start button to begin the wash cycle.

Natural Drying System: After the wash cycle, the dishwasher door will automatically open slightly to allow natural air circulation for efficient drying, reducing energy consumption.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

Cleaning the Filters

- The filter system should be cleaned regularly to prevent blockages and ensure effective cleaning.
- Twist and remove the coarse filter, then lift out the fine filter.
- Rinse both filters under running water to remove food particles.
- Reassemble the filters and place them back into the dishwasher, ensuring they are securely locked.

Cleaning the Spray Arms

- Periodically check the spray arm nozzles for blockages.
- If necessary, remove the spray arms and clear any debris from the nozzles using a thin wire.
- Rinse and reattach the spray arms securely.

Exterior and Interior Cleaning

- Wipe the exterior of the dishwasher with a damp cloth. Do not use abrasive cleaners.
- Clean the door seal regularly to remove food residue and prevent odors.
- Run a dishwasher cleaner cycle periodically to remove grease and limescale buildup.

TROUBLESHOOTING

Before contacting service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	No power supply; Door not closed properly; Cycle not selected.	Check power connection and fuse; Ensure door is latched; Select a wash cycle and press Start.
Dishes are not clean	Improper loading; Clogged spray arms; Insufficient detergent; Clogged filters.	Reload dishes correctly; Clean spray arm nozzles; Add more detergent; Clean filters.
Water not draining	Clogged drain hose; Clogged filter; Drain pump malfunction.	Check and clear drain hose; Clean filters; Contact service if pump is faulty.
Excessive noise	Dishes rattling; Dishwasher not level; Foreign object in pump.	Rearrange dishes; Level the appliance; Inspect pump area for objects.
Spots or streaks on dishes	Insufficient rinse aid; Hard water; Incorrect detergent dosage.	Refill rinse aid dispenser; Adjust water softener setting (if applicable); Adjust detergent amount.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model	HDI6014
Capacity	14 Place Settings
Dimensions (D x W x H)	55 x 59.8 x 81.5 cm
Weight	35 kg
Water Consumption (per cycle)	11 litres
Noise Level	49 dB
Cycle Options	6 (Economy, Glassware, Normal, Rapid, etc.)
Special Features	Integrated Anti Flood Device, Low Water Usage, Timer Delay, Natural Drying System
Material	Stainless Steel
Installation Type	Built-In

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your purchase or visit the official HADEN website. Keep your proof of purchase for any warranty claims.

If you encounter issues not covered in the troubleshooting section, or require professional assistance, please contact HADEN customer service.

HADEN Customer Service: Please refer to your regional HADEN contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question