

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Mintu](#) /
- › Mintu Bake Element Replacement Manual for GE and HotPoint Ovens

Mintu JBP76GV3 JBP79GW1

Mintu Bake Element Replacement Instruction Manual

For GE, HotPoint, and Kenmore Oven/Stove Models

INTRODUCTION

This instruction manual provides essential information for the safe and correct installation, operation, and maintenance of your Mintu Bake Element Replacement. Please read this manual thoroughly before attempting any installation or repair to ensure proper function and safety. This bake element is designed as a direct replacement for specific GE, HotPoint, and Kenmore oven/stove models.

PRODUCT OVERVIEW

The Mintu Bake Element is a critical component in electric ovens, responsible for generating the heat required for baking. This replacement part is manufactured to meet or exceed the specifications of the original equipment, ensuring reliable performance and compatibility with the listed oven models.

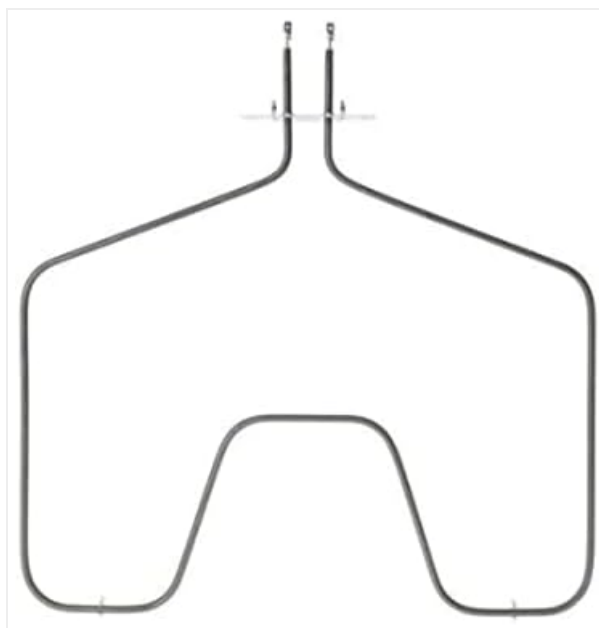


Figure 1: Mintu Bake Element Replacement. This image shows the U-shaped heating element with two terminal prongs at the top, designed to fit into the oven cavity.

COMPATIBILITY

This bake element is compatible with a wide range of GE, HotPoint, and Kenmore oven/stove models. It is crucial to verify your appliance's model number before purchasing and installing this replacement part. If you are unsure about compatibility, please contact the manufacturer or a qualified technician.

Replaces Part Number: WB44X5082

Compatible GE Models include:

- JBP76GV3, JBP79GW1, JBS03V1, JBP26GV3WH, JBS16WH1, JBP75GV2WH, JBS27WW1, JHP56G-OC1AD
- J76501, J765x01, J765x03, JB390GH1, JB390GxH1, JB391GH1, JB391GJ1, JB391GJ2, JB391GJ3, JB391GJ4, JB391GK1, JB391GxH1, JB391GxJ1, JB391GxJ3, JB391GxJ4, JB391GxK1
- JB400GH1, JB400GH2, JB400GH3, JB400GH4, JB400GH5, JB400GH6, JB400GJ1, JB400GJ2, JB400GJ3, JB400GJ4, JB400GK1, JB400GK2, JB400GxH1, JB400GxH2, JB400GxH3, JB400GxH4, JB400GxH5, JB400GxH6, JB400GxJ1, JB400GxJ3, JB400GxJ4, JB400GxK1, JB400GxK2
- JB450G0J3, JB450GJ1, JB450GJ2, JB450GJ3, JB450GK1, JB450GK2, JB450GN1, JB450GN2, JB450GP1, JB450GP2, JB450GxJ2, JB450GxJ3, JB450GxK1, JB450GxK2, JB450GxN1, JB450GxN2, JB450GxP1, JB450GxP2
- JB490GJ2, JB490GJ3, JB490GJ4, JB490GJ5, JB490GxH1, JB490GxJ1, JB490GxJ3, JB490GxJ4, JB490GxJ5
- JB500D1, JB500D2, JB500D3, JB500D4, JB500GB1, JB500GD1, JB500GD2, JB500GD3, JB500GD4, JB500GD5, JB500GH1, JB500GH2, JB500GH3, JB500GH4, JB500GH5, JB500GH6, JB500GJ1, JB500GJ2, JB500GJ3, JB500GW4, JB500GW5, JB500GW6, JB500GxB1, JB500GxD1, JB500GxD2, JB500GxD3, JB500GxD4, JB500GxD5, JB500GxH3, JB500GxH4, JB500GxH5, JB500GxH6, JB500GxJ1, JB500GxJ3, JB500GxW4, JB500GxW5, JB500GxW6, JB500W4, JB500W5, JB500W6, JB500xD1, JB500xD2, JB500xD3, JB500xD4, JB500xW4, JB500xW5, JB500xW6
- JB550G0J3, JB550GJ1, JB550GJ2, JB550GJ3, JB550GJ4, JB550GJ5, JB550GN1, JB550GN2, JB550GP1, JB550GP2, JB550GxJ2, JB550GxJ3, JB550GxJ4, JB550GxJ5, JB550GxN2, JB550GxP1, JB550GxP2
- JB551GL1, JB551GN1, JB551GN2, JB551GP1, JB551GP2, JB551GxL1, JB551GxN2, JB551GxP1, JB551GxP2
- JB600G04, JB600G05, JB600GC1, JB600GD1, JB600GD2, JB600GD3, JB600GD4, JB600GH1, JB600GH2, JB600GH3, JB600GJ1, JB600GJ2, JB600GJ4, JB600GJ5, JB600GJ6, JB600GJ7, JB600GJ8, JB600Gx04, JB600Gx05, JB600GxC1, JB600GxD1, JB600GxD2, JB600GxD3, JB600GxD4, JB600GxH2, JB600GxH3, JB600GxJ1, JB600GxJ4, JB600GxJ5, JB600GxJ6, JB600GxJ7, JB600GxJ8
- JBC16G01, JBC16G02, JBC16G03

Compatible HotPoint Models include:

- RK38GJ2, RK38GJ3, RK38GJ4, RK38J1, RK38J2, RK38J3, RK38J4, RK38J5
- RK767GD1, RK767GD2, RK767GJ1, RK767GJ2, RK767GJ3, RK767GJ4, RK767GxT5, RK767GxT6, RK767GxT7, RK767T6, RK767xD1, RK767xT5, RK767xT7
- RS4203, RS42J1, RS42J2, RS42J3, RS42J4, RS42J5, RS42J6, RS42x02, RS42x03, RS42xJ1, RS42xJ2

Compatible Kenmore Models include:

- 21235, 363.9308810, 363.9378810, 363.9378880, 363.9858810, 363.9858911, 363.9868810, 363.9878810, 363.9878911, 363.9878911KS, 363.9888810, 363JBS26GJ3
- 99138, 99141, 99148, 99151, 99158, 99241, 99258, 99351

SAFETY INFORMATION

WARNING: Risk of Electric Shock and Personal Injury.

- Always disconnect power to the oven/stove at the circuit breaker or fuse box before attempting any repairs or installations.

- Wear appropriate personal protective equipment, such as gloves and eye protection.
- If you are not comfortable performing electrical repairs, it is highly recommended to consult a qualified appliance technician.
- Ensure the new element is correctly seated and all electrical connections are secure before restoring power.
- Do not operate the oven if the element appears damaged or improperly installed.

INSTALLATION INSTRUCTIONS

The following steps provide a general guide for replacing a bake element. Specific procedures may vary slightly depending on your oven model. Refer to your appliance's original service manual for detailed instructions.

1. **Disconnect Power:** Turn off the power to the oven at the main circuit breaker or fuse box. Verify power is off by attempting to turn on the oven.
2. **Access Oven Interior:** Open the oven door and locate the bake element at the bottom of the oven cavity.
3. **Remove Mounting Screws:** Using a screwdriver, remove the screws that secure the bake element to the back wall of the oven.
4. **Carefully Pull Element Forward:** Gently pull the element forward a few inches. This will expose the electrical terminals.
5. **Disconnect Wires:** Carefully disconnect the electrical wires from the terminals of the old bake element. Note their positions for reattachment. It may be helpful to take a picture.
6. **Remove Old Element:** Once wires are disconnected, remove the old bake element from the oven.
7. **Install New Element:** Connect the electrical wires to the terminals of the new Mintu bake element. Ensure connections are secure.
8. **Secure New Element:** Push the new element into place, aligning the mounting brackets with the screw holes. Reinstall the mounting screws.
9. **Restore Power:** Close the oven door. Restore power to the oven at the circuit breaker or fuse box.
10. **Test Functionality:** Turn on the oven to a bake setting and observe if the new element heats up properly.

If the element does not heat or if you encounter any issues, refer to the Troubleshooting section or contact a qualified technician.

MAINTENANCE

The Mintu Bake Element is designed for long-lasting performance and typically requires no routine maintenance. Avoid using abrasive cleaners directly on the element. If the element becomes soiled, ensure the oven is cool and power is disconnected before gently wiping with a damp cloth. Do not immerse the element in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven not heating after element replacement.	<ul style="list-style-type: none"> • Power not restored. • Loose electrical connections. • Element not fully seated. • Faulty element (rare). • Other oven component failure (e.g., thermostat, control board). 	<ul style="list-style-type: none"> • Check circuit breaker/fuse. • Disconnect power and re-check all wire connections. • Ensure element is properly installed and secured. • Contact customer support or a qualified technician.

Problem	Possible Cause	Solution
Element glows unevenly or not at all.	<ul style="list-style-type: none">• Loose connection.• Internal element damage.	<ul style="list-style-type: none">• Disconnect power and check connections.• If still uneven, element may be faulty; contact customer support.

SPECIFICATIONS

- **Brand:** Mintu
- **Part Number:** JBP76GV3 JBP79GW1 (Also replaces WB44X5082)
- **Type:** Bake Element
- **Compatibility:** Refer to the "Compatibility" section for a comprehensive list of compatible GE, HotPoint, and Kenmore oven/stove models.

WARRANTY AND SUPPORT

Mintu stands behind the quality of its products. This bake element replacement comes with the following guarantees:

- **Money-Back Guarantee:** Within 30 days from the date of purchase, if you are not satisfied with the product, a full refund will be issued.
- **Extended Money-Back Guarantee:** Within 90 days from the date of purchase, if you are not satisfied, a refund will be made.
- **Compatibility Assistance:** If you are unsure about the compatibility of this part with your appliance, please contact Mintu customer support for advice. We aim to resolve your inquiries within 24 hours.

For support, please refer to the contact information provided with your purchase or visit the [Mintu Store on Amazon](#).