

[Manuals.plus](#) /

> [VINABTY](#) /

> NH304UD Replacement Remote Control User Manual for MAGNAVOX TV

VINABTY NH304UD

NH304UD Replacement Remote Control User Manual

For MAGNAVOX TV Models

1. INTRODUCTION

This manual provides instructions for the NH304UD replacement remote control. This remote is designed to be a direct replacement for your original MAGNAVOX TV remote, offering full functionality without the need for complex programming. Simply insert batteries, and it's ready to use.

Compatible MAGNAVOX TV Models:

- 24ME405V, 24ME405V/F7
- 32ME305V, 32ME305V/F7
- 40ME325, 40ME325V, 40ME325V/F7
- 32ME303V/F7A

Also replaces remote models:

- 32FNT005
- NH303UD
- NH305UD
- NH300UD
- NH301UD

2. SETUP

2.1 Battery Installation

The NH304UD remote control requires two (2) AAA 1.5V batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends align correctly with the polarity indicators inside the compartment.

4. Slide the battery cover back into place until it clicks securely.

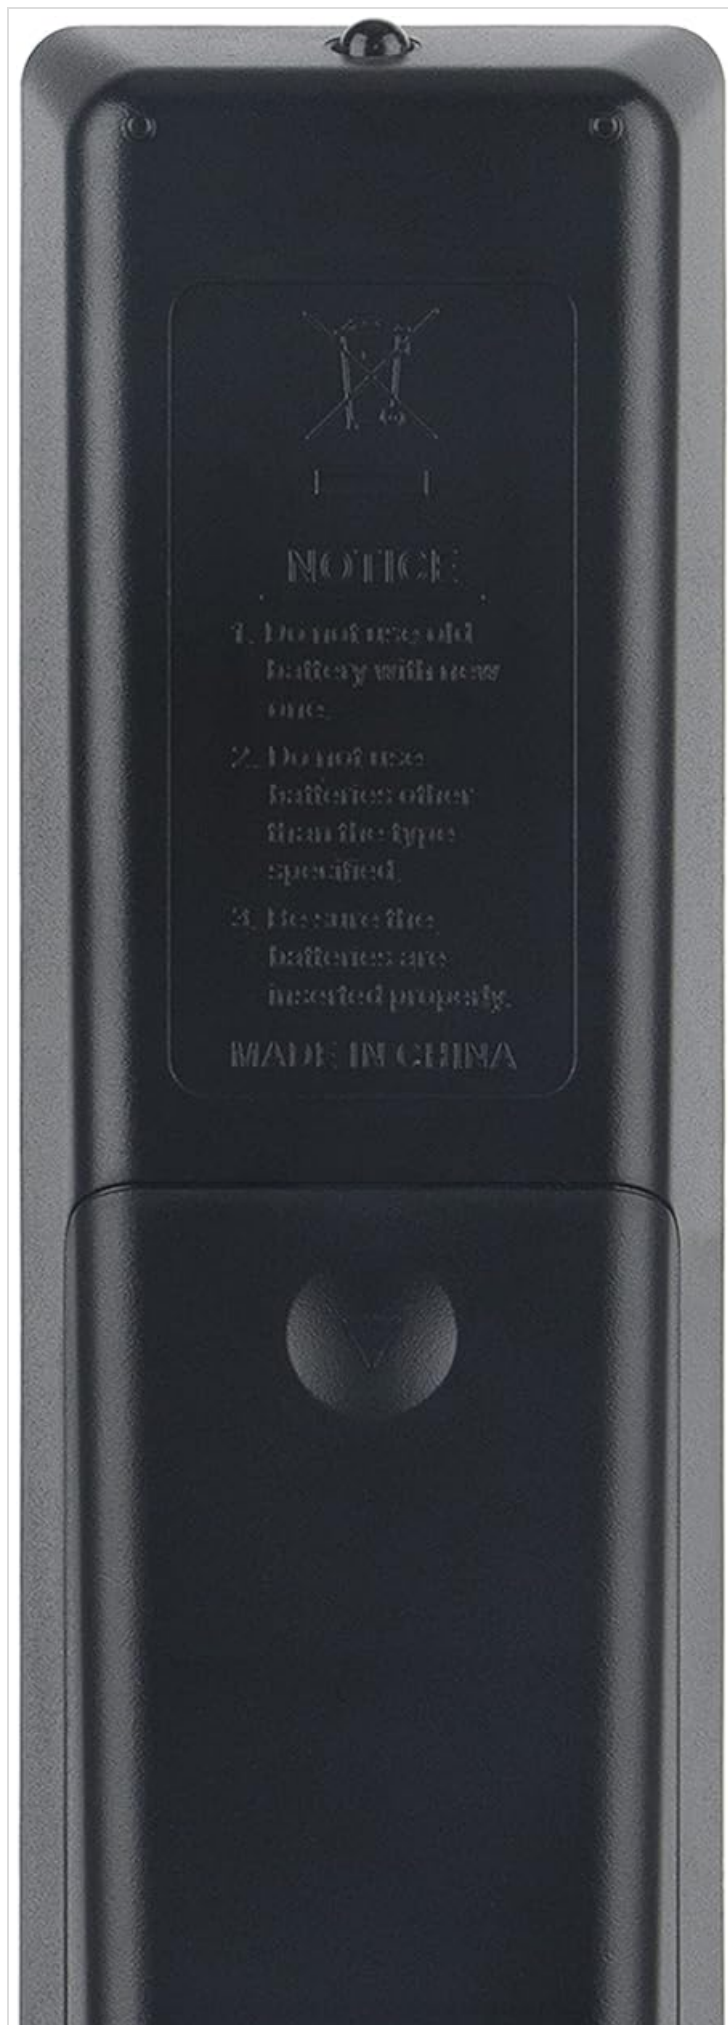




Image: Back of the NH304UD remote control, illustrating the battery compartment location and the notice regarding battery usage.

2.2 Initial Setup

This remote control is an infrared (IR) replacement and does not require any programming. Once the batteries are correctly installed, it is ready to operate your compatible MAGNAVOX TV.

3. OPERATING INSTRUCTIONS

Point the remote control directly at your MAGNAVOX TV's IR receiver. Ensure there are no obstructions between the remote and the TV.





Image: Front view of the NH304UD remote control, displaying all functional buttons.

3.1 Button Functions

| Button | Function |
|-----------------------|--|
| POWER (●) | Turns the TV On or Off. |
| SOURCE | Selects input sources (HDMI, AV, Component, etc.). |
| PIC/SOUND MODE | Cycles through picture and sound modes. |
| FREEZE | Freezes the current image on screen. |
| SLEEP | Sets the sleep timer for automatic TV shutdown. |
| PICTURE SIZE | Adjusts the aspect ratio or picture size. |
| 0-9 | Direct channel selection. |
| PREV.CH | Returns to the previously viewed channel. |
| VOL +/- | Adjusts the volume level up or down. |

| Button | Function |
|-----------------------------|--|
| CH +/- | Changes channels up or down. |
| SAP | Selects Secondary Audio Program (SAP) or audio language. |
| MUTE () | Mutes or unmutes the TV sound. |
| BACK | Returns to the previous menu or screen. |
| MENU | Opens the TV's main menu. |
| INFO | Displays current channel information or program details. |
| Navigation Arrows (▲ ◀ ▼ ▶) | Navigates through menus and options. |
| OK | Confirms selections in menus. |

4. MAINTENANCE

4.1 Cleaning the Remote

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials, as they may damage the remote's surface or buttons.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new 1.5V AAA batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent potential leakage and damage to the remote.

5. TROUBLESHOOTING

5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with fresh AAA batteries if needed.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's IR receiver.
- **Distance:** Ensure you are within the effective operating range of the remote (typically up to 8 meters or 25 feet).
- **TV Power:** Confirm that the TV is powered on and not in standby mode.

5.2 Specific Buttons Not Working

- **Clean Buttons:** Dirt or debris might be interfering with button contacts. Gently clean around the unresponsive button.
- **Battery Check:** Even if some buttons work, low battery power can affect others. Replace batteries.

6. SPECIFICATIONS

| Feature | Detail |
|-------------------------|--|
| Model Number | NH304UD |
| Brand | Vinabty |
| Connectivity Technology | Infrared (IR) |
| Power Source | 2 x 1.5V AAA Batteries (not included) |
| Programming Required | No |
| Product Dimensions | Approx. 18.29 x 5.08 x 1.91 cm (7.2 x 2.0 x 0.75 inches) |
| Product Weight | Approx. 73.71 g (2.6 oz) |





Image: NH304UD remote control with approximate dimensions indicated.

7. WARRANTY AND SUPPORT

This product is typically covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the seller's return policy or contact the point of purchase for specific warranty details and support options. For technical assistance or further inquiries, please contact the seller or manufacturer directly. Keep your purchase receipt as proof of purchase for any warranty claims.