

ZOKOP HD-1857-A

ZOKOP HD-1857-A 1.8L Electric Glass Kettle User Manual

Model: HD-1857-A

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the kettle.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and personal injury, do not immerse cord, plugs, or power base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact the manufacturer for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the heating cycle.
- Ensure the lid is securely closed before operating.
- This appliance is for household use only.

PRODUCT OVERVIEW

The ZOKOP HD-1857-A Electric Glass Kettle features a durable borosilicate glass body, a comfortable handle, and a stainless steel heating base. It includes a blue LED light indicator that illuminates during the boiling process and an automatic shut-off function for safety.

304 FOOD GRADE STAINLESS STEEL



Glass Spout



Blue LED Light



Heating Base



Image: Key components of the ZOKOP HD-1857-A Electric Glass Kettle, highlighting the glass spout, the blue LED light feature, and the stainless steel heating base.

SETUP

Before First Use

1. Remove all packaging materials from the kettle and its base.
2. Wipe the exterior of the kettle with a damp cloth. Do not immerse the kettle or power base in water.
3. Fill the kettle with water to the maximum fill line (1.8L).
4. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues and ensure the kettle is clean for use.

Placement

- Place the power base on a dry, flat, stable, and heat-resistant surface.

- Ensure the power cord is not dangling or in contact with hot surfaces.



Image: The ZOKOP HD-1857-A Electric Glass Kettle positioned on a kitchen counter, ready for use.

OPERATING INSTRUCTIONS

Filling the Kettle

1. Remove the kettle from its power base.
2. Press the lid release button to open the lid.
3. Fill the kettle with the desired amount of fresh water. Do not fill below the minimum (0.5L) or above the maximum (1.8L) fill lines indicated on the glass body. Overfilling may cause boiling water to spill out.
4. Close the lid securely until it clicks into place.

Boiling Water

1. Place the filled kettle back onto its power base, ensuring it is properly seated. The kettle features a 360° rotation base for easy placement.
2. Plug the power cord into a standard 110V US electrical outlet.
3. Press the ON/OFF switch located on the handle downwards. The blue LED light will illuminate,

indicating that the kettle is heating.

4. Once the water reaches a rolling boil, the kettle will automatically shut off, and the blue LED light will extinguish.
5. Carefully lift the kettle from the base and pour the hot water. Exercise caution as the kettle body and steam are hot.

GLASS KETTLE BODY, Easy to Clean



LARGE HOLDING SPACE, Easy to Pour



Image: Demonstrates the ease of filling the ZOKOP HD-1857-A Electric Glass Kettle and its large holding space for pouring.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will extend the life of your ZOKOP Electric Glass Kettle.

General Cleaning

1. Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
2. Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the glass or stainless steel finish.
3. The interior of the kettle can be cleaned by hand. Use a soft brush or sponge with mild dish soap if necessary. Rinse thoroughly.

4. Do not immerse the kettle or its power base in water or any other liquid.

Descaling (Removing Mineral Deposits)

Mineral deposits (limescale) can build up inside the kettle, especially in hard water areas. Descaling regularly will ensure optimal performance.

1. Fill the kettle with 1 part white vinegar and 2 parts water. Alternatively, use a commercial descaling solution following its instructions.
2. Bring the mixture to a boil.
3. Allow the solution to soak in the kettle for at least 30 minutes, or longer for heavy deposits.
4. Pour out the solution and rinse the interior of the kettle thoroughly with fresh water several times.
5. If necessary, boil fresh water in the kettle and discard it to remove any residual vinegar smell or taste.



Image: A top-down view of the ZOKOP HD-1857-A Electric Glass Kettle with its lid open, showing the interior for cleaning and descaling.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	No power supply. Kettle not properly seated on base.	Check if the plug is securely inserted into the outlet. Ensure the kettle is correctly placed on the power base.
Water is not boiling.	Kettle not switched on. Lid not closed properly.	Press the ON/OFF switch downwards. Ensure the lid is securely closed.
Kettle leaks water.	Kettle overfilled. Lid not closed properly.	Do not fill above the maximum fill line. Ensure the lid is securely closed.
Blue LED light does not illuminate.	Kettle not switched on. Power issue.	Ensure the ON/OFF switch is pressed down. Check power supply.
Mineral deposits inside kettle.	Hard water usage.	Descale the kettle as per the 'Descaling' instructions in the Maintenance section.

SPECIFICATIONS

- Model:** HD-1857-A
- Capacity:** 1.8 Liters
- Material:** High-Grade Stainless Steel, High Quality Borosilicate Glass, BPA-Free Plastic
- Voltage:** 110V, 50-60Hz
- Power:** 1500W
- Plug Type:** US Standard
- Thermostat:** Double Metal Temperature Control
- Heating Elements:** 304 Stainless Steel Heating Plate
- LED Illuminated Color:** Blue
- Dimensions:** 9.1 x 9.1 x 9.5 inches (23 x 23 x 24 cm) (L x W x H)
- Weight:** 3.31 lbs (1.5 kg)
- Product Care Instructions:** Hand wash, Wipe clean

SAFE & DURABLE



200°C High Temperature Resistance



Visual Boiling Water



No Precipitation



Solid Durable



Image: The ZOKOP HD-1857-A Electric Glass Kettle, emphasizing its safe and durable construction with features like 200°C high temperature resistance and visual boiling water.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact ZOKOP customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Please visit the official ZOKOP website or contact their customer support for the most up-to-date warranty terms and service options.