

Manuals.plus /

› Braun /

› Braun TexStyle 1 SI 1019 Steam Iron User Manual

Braun SI 1019

Braun TexStyle 1 SI 1019 Steam Iron User Manual

MODEL: SI 1019 (SI1019RD)

Brand: Braun

1. Introduction

Thank you for choosing the Braun TexStyle 1 SI 1019 Steam Iron. This manual provides essential information for the safe and efficient use of your new appliance. Please read these instructions carefully before first use and keep them for future reference.

The TexStyle 1 SI 1019 is engineered for light and fast ironing, making your tasks easier and quicker. It combines 1900W of power with strong steam emission for excellent results on various fabrics.

2. Safety Instructions

- Always ensure the voltage indicated on the rating label corresponds to your mains voltage.
- Do not immerse the iron, power cord, or plug in water or other liquids.
- Unplug the iron from the electrical outlet when filling with water, emptying, or when not in use.
- Do not leave the iron unattended while it is switched on or connected to the mains.
- Keep the iron and its cord out of reach of children and pets when it is switched on or cooling down.
- Use the iron only for its intended household purpose.
- Do not operate the iron if it has been dropped, if there are visible signs of damage, or if it is leaking.
- Place the iron on a stable, heat-resistant surface when resting.
- Do not use chemical descaling products in the iron's water tank.

3. Product Overview

Familiarize yourself with the components of your Braun TexStyle 1 SI 1019 steam iron:

1. **Soleplate:** High-quality non-stick coating for smooth gliding.
2. **Precision Tip:** Triangular shape for reaching difficult areas like collars and seams.

3. **Water Tank:** 220 ml capacity for steam generation.
4. **Temperature Dial:** To select the appropriate temperature for different fabrics.
5. **Steam Button/Slider:** To control continuous steam and steam shot functions.
6. **Spray Nozzle:** For moistening stubborn creases.
7. **Self-Clean Button:** For maintaining the iron's performance.



Front view of the Braun TexStyle 1 SI 1019 Steam Iron, showcasing its red and white design and controls.



View of the iron's soleplate, highlighting its non-stick surface and steam vents.



Side profile of the iron, showing its ergonomic handle and water tank.

4. Setup

Before using your iron for the first time, remove any protective film or stickers from the soleplate.

4.1 Filling the Water Tank


1. Ensure the iron is unplugged from the power outlet.
2. Open the water tank inlet cover.
3. Fill the water tank with tap water up to the 'MAX' mark (220 ml capacity). For areas with very hard water, it is recommended to use a mixture of 50% tap water and 50% distilled water.
4. Close the water tank inlet cover securely.



Illustration of the easy refill process for the 220 ml water tank.

4.2 Connecting to Power

Plug the iron into a suitable electrical outlet. The iron is ready to iron the most difficult fabrics at maximum temperature in just 35 seconds.

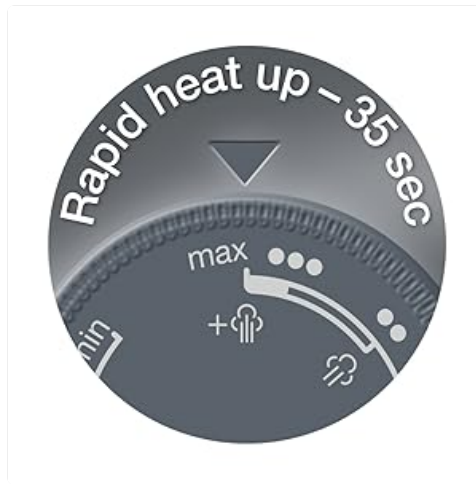

The temperature dial indicating rapid heat-up in 35 seconds.

5. Operating Instructions

5.1 Temperature Selection

Turn the temperature dial to select the appropriate heat setting for your fabric. Always check the garment's care label. Start with lower temperatures for delicate fabrics and increase for heavier materials.

5.2 Steam Ironing

For steam ironing, ensure the water tank is filled and the temperature dial is set to a steam-suitable setting (usually indicated by steam symbols on the dial). The iron provides a continuous steam of 25 g/min.

5.3 Steam Shot (Turbo Mode)

For stubborn creases, press the steam shot button. This delivers a powerful burst of steam (120 g/min). Wait a few seconds between shots to allow the iron to reheat.

5.4 Dry Ironing

For dry ironing, ensure the steam slider is set to the 'no steam' position and the water tank is empty or the temperature is set below the steam range.

5.5 Using the Precision Tip

The triangular precision tip allows you to easily remove creases from hard-to-reach areas such as collars, cuffs, and seams.



A hand demonstrating the use of the Braun TexStyle 1 SI 1019 steam iron on fabric.

6. Maintenance and Cleaning

6.1 Self-Clean Function

To maintain optimal performance and prevent mineral build-up, use the self-clean function regularly, especially if you use tap water frequently. Refer to the specific instructions for activating the self-clean cycle in your iron's full manual.



Icon representing the self-clean function of the iron.

6.2 Cleaning the Soleplate

Allow the iron to cool completely. Wipe the soleplate with a damp cloth and a non-abrasive liquid cleaner if necessary. Do not use abrasive pads or harsh chemicals as they can damage the non-stick coating.

6.3 Storage

After use, unplug the iron and empty any remaining water from the tank. Allow the iron to cool down completely before storing it in an upright position to protect the soleplate.

7. Troubleshooting

| Problem | Possible Cause | Solution |
|---------------------------------------------|-------------------------------------------------------------------------|----------------------------------------------------------------------------|
| Iron does not heat up. | Not plugged in; power outage; faulty outlet. | Check power connection; check circuit breaker; try a different outlet. |
| No steam or insufficient steam. | Water tank empty; temperature too low for steam; steam vents clogged. | Fill water tank; set temperature to steam range; perform self-clean cycle. |
| Water leaking from soleplate. | Temperature too low for steam; overfilled water tank; mineral deposits. | Increase temperature; do not overfill; perform self-clean cycle. |
| Soleplate sticking or not gliding smoothly. | Residue on soleplate; incorrect temperature for fabric. | Clean soleplate; adjust temperature setting. |

8. Specifications

| Feature | Detail |
|--------------------------------|---------------------------------|
| Brand | Braun |
| Model Name | TexStyle 1 |
| Model Number | SI1019RD (127407010) |
| Power | 1900 Watts |
| Voltage | 240 Volts |
| Water Tank Capacity | 220 Milliliters |
| Continuous Steam Output | 25 g/min |
| Steam Shot Output | 120 g/min |
| Heat-up Time | 35 seconds (to max temperature) |
| Soleplate Material | Non-stick coating |
| Color | Red |
| Item Weight | 1 Kilogram |
| Product Dimensions (L x W x H) | 28 x 12 x 0.1 cm |
| Country of Origin | China |

9. Warranty and Support

Braun products are known for their German reliability and quality. Your Braun TexStyle 1 SI 1019 Steam Iron comes with a 5-year warranty. This includes an additional 3-year extension beyond the standard legal warranty. This offer is valid until June 30, 2025. For full terms and conditions, please refer to [Braunhousehold.com](https://www.braunhousehold.com).



Visual representation of the 5-year warranty offered by Braun.

For further assistance, troubleshooting not covered in this manual, or warranty claims, please contact Braun customer support or visit their official website. Keep your proof of purchase for warranty purposes.