

[manuals.plus](#) /

› [PHILCO](#) /

› [Philco PLS11T 10kg Inverter Washer and Dryer Instruction Manual](#)

## **PHILCO PLS11T**

# **Philco PLS11T 10kg Inverter Washer and Dryer Instruction Manual**

Model: PLS11T | Brand: PHILCO

## **1. PRODUCT OVERVIEW**

The Philco PLS11T Inverter Washer and Dryer is designed for efficient and quiet laundry care. It features a washing capacity of 10kg and a drying capacity of 7kg, making it suitable for various household needs. The appliance incorporates advanced technologies to ensure optimal performance and fabric protection.



Front view of the Philco PLS11T Washer and Dryer with the door open, revealing the stainless steel drum.



A close-up view of the stainless steel drum interior, highlighting the Optimuwash technology design.

- **Inverterplus Motor:** Equipped with a BLDC inverter motor for energy efficiency, quiet operation, and extended lifespan.
- **Optimuwash Technology:** The drum's surface design optimizes washing, ensuring effective cleaning without damaging fabrics.
- **16 Operating Programs:** Offers diverse options for various fabric types and soil levels, including delicate, wool, and intimate wear.
- **Power Off Memory:** Automatically saves current settings and resumes operation after a power interruption.
- **Reload Function:** Allows adding clothes during an active wash cycle.
- **Adjustable Settings:** Customize wash time, rinse cycles, spin speed (400, 800, 1200, 1400 rpm), and wash temperature (cold, 30°C, 40°C, 60°C, 96°C).
- **Drying Options:** Includes Extra Dry, Normal Dry, and Delicate Dry.
- **Safety Lock:** Panel and door lock system prevents accidental activation or child use.

## 2. WHAT'S INCLUDED

Upon unpacking, ensure all the following items are present:

- 1x Water Inlet Hose
- 4x Transport Bolt Caps
- 1x Adjustment Wrench
- 1x Instruction Manual
- 1x Warranty Certificate

## 3. SETUP AND INSTALLATION

### 3.1 Unpacking and Transport Bolt Removal

Before operating the machine, it is crucial to remove the transport bolts located at the rear of the appliance. These bolts secure the drum during transit and must be removed to prevent damage during operation.

1. Locate the transport bolts on the back of the washer.
2. Use the provided adjustment wrench (or a suitable tool) to loosen and remove all transport bolts.
3. Insert the supplied transport bolt caps into the holes to cover them.

### 3.2 Leveling the Appliance

Proper leveling is essential for stable and quiet operation. Adjust the leveling feet at the bottom of the machine until it is perfectly stable and balanced on the floor.

### 3.3 Water and Drainage Connection

1. Connect the water inlet hose to a 3/4-inch threaded water faucet.
2. Securely attach the other end of the water inlet hose to the designated inlet on the back of the washer.
3. Insert the drainage hose into a suitable drain pipe or use an adapter for a sink. Ensure the hose is properly secured to prevent leaks.

### **3.4 Power Connection**

Plug the power cord into a grounded 220V electrical outlet. Ensure the outlet meets the appliance's power requirements.

## **4. OPERATION**

### **4.1 Loading Clothes**

Open the front door and load your clothes into the drum. Avoid overloading to ensure proper washing and spinning. For best results, mix large and small items to balance the load.



The Philco PLS11T Washer and Dryer positioned next to a laundry basket, illustrating typical use.

### **4.2 Adding Detergent and Softener**

Pull out the dispenser drawer located on the top left of the control panel. Add detergent to the main wash compartment, softener to its designated compartment, and pre-wash detergent if needed to the pre-wash compartment.

#### 4.3 Selecting a Program and Adjusting Settings



A detailed view of the Philco PLS11T control panel, featuring the rotary program selector and digital display.

1. Turn the rotary knob to select your desired wash program (e.g., "Delicate," "Quick Wash," "Synthetics").
2. Use the touch buttons on the digital display to adjust specific settings such as:
  - **Rinse:** Add extra rinse cycles.
  - **Speed:** Adjust spin speed (400, 800, 1200, 1400 rpm).
  - **Temp:** Select wash water temperature (cold, 30°C, 40°C, 60°C, 96°C).
  - **Dry:** Set drying time or select a drying option (Extra Dry, Normal Dry, Delicate Dry).

#### 4.4 Starting and Pausing

Press the "Start/Pause" button to begin the selected cycle. To pause the cycle and add more clothes (if the water level allows), press the "Start/Pause" button again. Press and hold the "Start/Pause" button for 3 seconds to activate the panel lock feature, preventing accidental changes to settings.

### 5. PROGRAMS AND FEATURES

The Philco PLS11T offers 16 programs to cater to various laundry needs:

- **Wash & Dry 60':** Quick wash and dry for small loads in 60 minutes.
- **Dry Wash:** Uses hot air to deodorize and refresh dry clothes, removing odors and wrinkles.
- **Dry:** For drying previously washed and spun clothes, with adjustable time.
- **Wash & Dry:** Complete cycle for washing and drying a small load without interruption.

- **Synthetics:** Specific program for synthetic or mixed fabrics, preventing shrinkage and wear.
- **Quick Wash:** Short wash cycle for lightly soiled clothes or refreshing items.
- **Rinse + Spin:** Removes detergent residues, followed by spinning. Ideal for sensitive skin or softening clothes.
- **Spin:** Removes excess water from clothes after washing.
- **Drum Clean:** Sanitizes the machine's interior, removing soap residue and bacteria.
- **Bulky Items:** For washing large items like comforters, blankets, and curtains.
- **Delicate:** Gentle wash for fine fabrics like silk, wool, and lingerie.
- **Anti-Allergy:** Eliminates allergens and bacteria with high temperature washing and extra rinses.
- **Intensive:** Recommended for heavily soiled and resistant items like jeans and towels, using higher temperatures.
- **Eco 40-60:** Energy and water efficient program for cotton clothes with normal soil at 40°C or 60°C.
- **20°C:** Ideal for daily use, lightly soiled clothes, using low temperature for energy saving and color preservation.
- **Cotton:** Standard program for cotton items.

## 6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your Philco PLS11T Washer and Dryer.

- **Drum Cleaning:** Run the "Drum Clean" cycle every 3 months to prevent odors and maintain hygiene.
- **Detergent Dispenser:** Regularly remove and clean the detergent dispenser drawer to prevent residue buildup.
- **Drain Pump Filter:** Clean the drain pump filter every 2 months to ensure proper drainage and prevent blockages.
- **Door Seal:** After each wash, wipe the rubber door seal to remove lint and moisture, preventing mold and odors.

## 7. SPECIFICATIONS

Feature	Detail
Washing Capacity	10 kg
Drying Capacity	7 kg
Motor Type	Inverter BLDC
Number of Programs	16

Energy Efficiency Class	A
Voltage	220 Volts
Approximate Weight	69.22 kg
Dimensions (H x W x D)	84.5 cm x 59.5 cm x 62 cm
Material	Stainless Steel (drum)
Special Features	High efficiency, Front load

## 8. WARRANTY AND SUPPORT

The Philco PLS11T Washer and Dryer comes with a 12-month product warranty. The Inverter motor is covered by a 10-year warranty. Please refer to the included Warranty Certificate for detailed terms and conditions. For technical assistance or support, contact Philco customer service.