

Spirit Of Gamer PRO-M9

Spirit of Gamer PRO-M9 Wireless Gaming Mouse User Manual

Model: PRO-M9

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Spirit of Gamer PRO-M9 Wireless Gaming Mouse. Please read this manual carefully to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- Spirit of Gamer PRO-M9 Wireless Gaming Mouse
- USB Wireless Receiver

SETUP

Follow these steps to set up your PRO-M9 Wireless Gaming Mouse:

1. **Insert USB Wireless Receiver:** Locate an available USB port on your computer (PC or Laptop). Insert the small USB wireless receiver into the port. Your operating system should automatically detect and install the necessary drivers.
2. **Power On the Mouse:** Locate the power switch on the underside of the mouse. Slide the switch to the 'ON' position. The mouse should now be powered on and attempt to connect to the receiver.
3. **Test Functionality:** Move the mouse and click the buttons to ensure it is working correctly. If the mouse does not respond, ensure the receiver is securely plugged in and the mouse is powered on.



Figure 1: The Spirit of Gamer PRO-M9 Wireless Gaming Mouse shown with its USB wireless receiver. The receiver is a small, black USB dongle designed for easy plug-and-play connectivity with your computer.

OPERATING INSTRUCTIONS

The PRO-M9 mouse features multiple buttons for enhanced gaming and productivity:



Figure 2: Top view of the Spirit of Gamer PRO-M9 Wireless Gaming Mouse, highlighting its various buttons including the left/right click, scroll wheel, DPI button, and additional side buttons.

- **Left Click Button:** Standard primary click function.
- **Right Click Button:** Standard secondary click function, often used for context menus.
- **Scroll Wheel:** Used for vertical scrolling. Can also be pressed for a middle-click function.
- **DPI Button:** Located below the scroll wheel. Press this button to cycle through different DPI (Dots Per Inch)

sensitivity settings. This allows you to adjust cursor speed on the fly, which is beneficial for various gaming scenarios or general use.

- **"DOUBLE CLICK" Button:** Located on the left side of the left click button. This button performs a double-click action with a single press, useful in certain applications or games.
- **"FORWARD" and "BACK" Side Buttons:** Located on the left side of the mouse. These buttons typically function as navigation controls in web browsers and file explorers, moving forward or backward through pages/folders. In games, they can often be programmed for specific actions.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your mouse:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the mouse. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid using harsh chemicals or abrasive materials.
- **Sensor Cleaning:** Occasionally inspect the optical sensor on the underside of the mouse for dust or debris. Use a cotton swab or compressed air to gently clean the sensor area.
- **Storage:** When not in use for extended periods, store the mouse in a clean, dry environment away from direct sunlight and extreme temperatures.
- **Battery Care:** While the specific battery type is not detailed, if your mouse uses replaceable batteries, ensure to replace them with new ones when performance degrades. If it has a built-in rechargeable battery, avoid fully discharging it frequently to prolong its lifespan.

TROUBLESHOOTING

If you encounter issues with your PRO-M9 mouse, refer to the following common problems and solutions:

- **Mouse Not Responding:**
 - Ensure the USB wireless receiver is securely plugged into a working USB port on your computer.
 - Verify the mouse is powered on (check the switch on the underside).
 - If using replaceable batteries, replace them with fresh ones. If rechargeable, ensure it is charged.
 - Try plugging the receiver into a different USB port.
 - Restart your computer.
- **Erratic Cursor Movement:**
 - Clean the optical sensor on the underside of the mouse.
 - Ensure you are using the mouse on a suitable surface (e.g., a mouse pad). Avoid highly reflective or transparent surfaces.
 - Check for interference from other wireless devices.
- **Buttons Not Functioning:**
 - Ensure the mouse is properly connected and powered on.
 - Test the mouse on another computer to rule out software or operating system issues.

SPECIFICATIONS

Brand	Spirit Of Gamer
Model	PRO-M9
Connectivity	Wireless
Movement Detection	Optical
Button Quantity	6
Hand Orientation	Ambidextrous
Recommended Uses	Gaming
Compatible Devices	Personal Computer
Operating System	Linux, Windows XP
Color	Black
Package Dimensions	22.8 x 19.8 x 6.7 cm
Weight	240 g

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Spirit Of Gamer website. Specific warranty terms may vary by region and retailer.