

Bosch BGL35MOV27

Bosch BGL35MOV27 Bagged Vacuum Cleaner Instruction Manual

Model: BGL35MOV27 | Brand: Bosch

1. INTRODUCTION

Welcome to your new Bosch BGL35MOV27 Bagged Vacuum Cleaner. This manual provides essential information for safe and efficient use, assembly, operation, maintenance, and troubleshooting. Please read it thoroughly before using the appliance and keep it for future reference.


2. IMPORTANT SAFETY INFORMATION

To prevent injury or damage, always observe the following safety precautions:

- Always ensure the power supply matches the voltage specified on the appliance's rating label.
- Do not use the vacuum cleaner without the dust bag and all filters correctly installed.
- Keep children and pets away from the appliance during operation.
- Unplug the appliance from the power outlet before cleaning or performing any maintenance.
- Do not vacuum liquids, hot ashes, burning cigarettes, or sharp objects.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Do not operate the appliance if it is visibly damaged.

3. PRODUCT OVERVIEW

The Bosch BGL35MOV27 is a powerful 2400W bagged canister vacuum cleaner designed for effective cleaning on various floor types, particularly carpets. It features HEPA filtration for improved air quality and variable suction control for versatile cleaning.

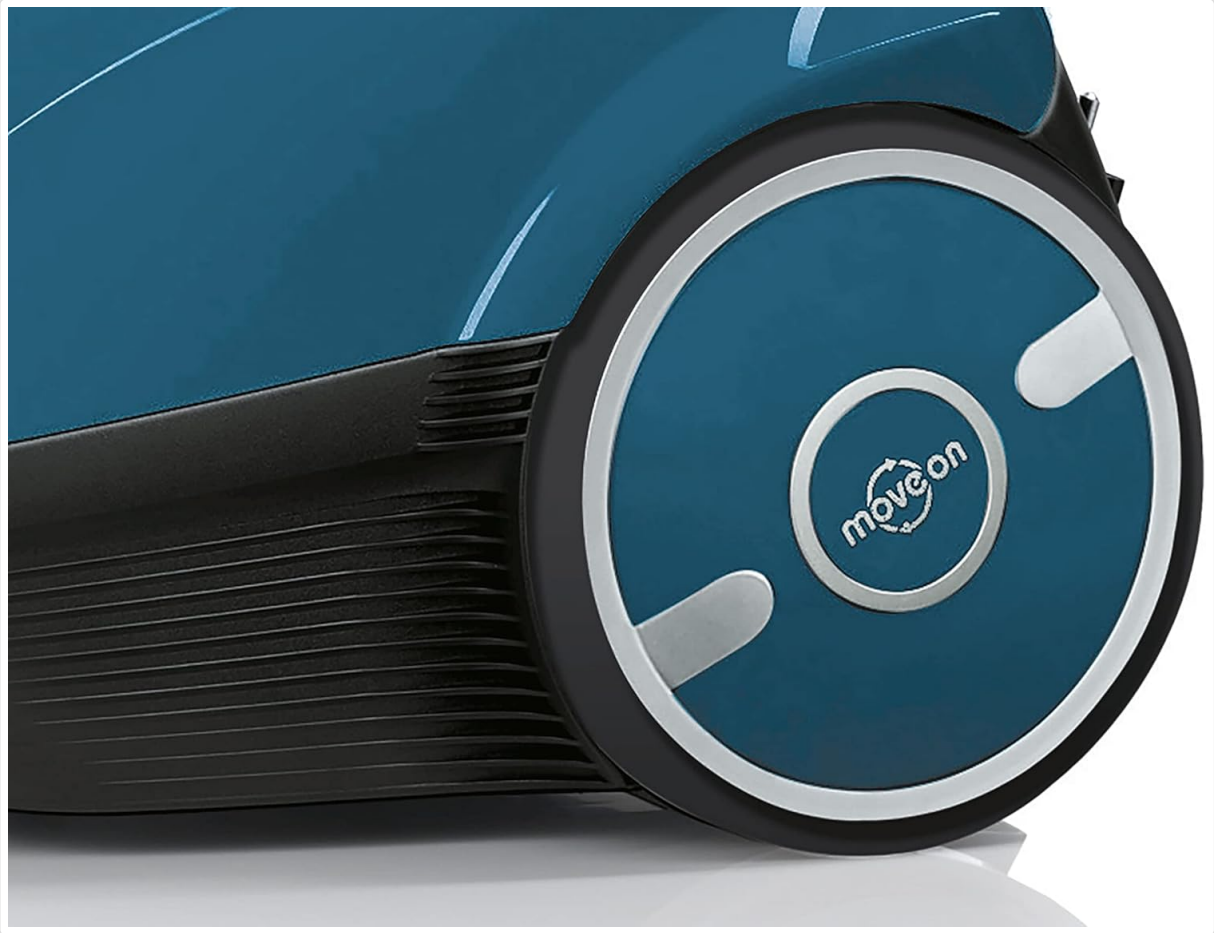

An image showing the complete Bosch BGL35MOV27 bagged vacuum cleaner with its hose, telescopic tube, and floor nozzle attached. The unit is blue with black and silver accents.



A side view of the Bosch BGL35MOV27 vacuum cleaner, highlighting the flexible hose connection and the 'MoveOn' branding on the wheel.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your vacuum cleaner before first use:

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts are present and undamaged.
2. **Attaching the Hose:** Insert the hose connector into the suction opening on the main unit until it clicks securely into place.
3. **Assembling the Telescopic Tube:** Connect the telescopic tube to the hose handle. Adjust the length of the tube by pressing the release button and sliding it to the desired position for comfortable use.
4. **Attaching the Floor Nozzle:** Attach the floor nozzle to the end of the telescopic tube. Ensure it is securely fitted.
5. **Power Connection:** Extend the power cord to its full length and plug it into a suitable electrical outlet (220-240V).



Bagged vacuum cleaner, MoveOn, Blue BGL35MOV27



Move on. More flexibility, more power, more fun

Technical data

| | |
|---|---------------------------------|
| Dimensions of the product (mm) : | 270 x 318 x 395 |
| Dimensions of the packed product (HxWxD) (mm) : | 325 x 325 x 485 |
| Pallet dimensions : | 205.0 x 80.0 x 120.0 |
| Standard number of units per pallet : | 30 |
| Net weight (kg) : | 6.000 |
| Gross weight (kg) : | 6.7 |
| Maximum Power (W) : | 2400 |
| Voltage (V) : | 220-240 |
| Frequency (Hz) : | 50/60 |
| Length electrical supply cord (cm) : | 700.0 |
| Plug type : | Gardy plug without earthing |
| Approval certificates : | Eurasian, Morocco, Ukraine, VDE |



This image displays the Bosch BGL35MOV27 vacuum cleaner fully assembled with the hose, telescopic tube, and floor nozzle ready for use.

5. OPERATING INSTRUCTIONS

Once assembled, your vacuum cleaner is ready for operation:

1. **Power On/Off:** Press the power button located on the main unit to switch the vacuum cleaner on or off.
2. **Adjusting Suction Power:** Rotate the suction control dial on the main unit to adjust the suction power according to the surface being cleaned.



A close-up of the suction control dial on the vacuum cleaner, showing settings from 'min' to 'max' and icons for different surfaces like curtains, upholstery, and carpets.

- **Min setting:** Suitable for delicate fabrics like curtains or light upholstery.
- **Medium setting:** Ideal for general cleaning of hard floors and low-pile carpets.
- **Max setting:** For heavily soiled carpets and robust surfaces.

3. **Using Attachments:** The vacuum cleaner comes with various attachments (e.g., crevice tool,

upholstery nozzle) for specialized cleaning tasks. Attach them directly to the hose handle or the telescopic tube as needed.

4. **Cable Rewind:** After use, gently pull the power cord to activate the automatic cable rewind function.

6. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

1. Changing the Dust Bag:

- The dust bag change indicator will illuminate when the dust bag is full and needs replacement.
- Open the dust bag compartment.
- Remove the full dust bag and dispose of it properly.
- Insert a new Bosch TYP GALL dust bag, ensuring it is correctly seated.
- Close the compartment securely.

2. Cleaning the HEPA Filter:

- The HEPA filter should be checked regularly and cleaned or replaced as per the instructions in the full manual.
- Refer to the appliance's specific instructions for filter access and cleaning frequency.

3. Cleaning the Appliance:

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners.
- Clean the floor nozzle and attachments regularly to remove tangled hair or debris.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the table below for common problems and solutions.

| Problem | Possible Cause | Solution |
|-------------------------------|------------------------------------|--|
| Low Suction Power | Full dust bag | Replace dust bag |
| | Clogged filter | Clean or replace filter |
| | Blockage in hose or nozzle | Check and clear blockages |
| Vacuum Cleaner Does Not Start | No power supply | Check power cord and outlet |
| | Power button not pressed | Press the power button firmly |
| Unusual Noise | Object stuck in brush roll or hose | Turn off, unplug, and inspect for obstructions |

If the problem persists after attempting these solutions, please contact customer support.

8. TECHNICAL SPECIFICATIONS

Detailed specifications for the Bosch BGL35MOV27 vacuum cleaner:

| Feature | Detail |
|------------------------|---------------|
| Brand | Bosch |
| Model Number | BGL35MOV27 |
| Power Consumption | 2400 Watts |
| Voltage | 240 Volts |
| Filter Type | HEPA Filter |
| Dust Collection | Bagged |
| Surface Recommendation | All floors |
| Cord Type | Corded |
| Noise Level | 77 dB |
| Item Weight | 6300 grams |
| Number of Handles | 2 |
| Control Method | Touch |
| Control Device Type | Push Button |
| Recommended Uses | All floors |
| Form Factor | Canister |
| Indoor/Outdoor Use | Indoor |
| Included Components | Box |
| Manufacturer | Bosch |
| Number of Items | 1 |

Bagged vacuum cleaner, MoveOn, Blue BGL35MOV27

Move on. More flexibility, more power, more fun

Performance

- Power: 2400 W


Hygiene

- HEPA filtration
- Replacement dust bags: TYP GALL

Comfort

- Variable suction control
- Easy Follow System: 360° ball connection for maximum hose flexibility ensures that the vacuum cleaner follows perfectly.
- extra large soft wheels to protect hard floors
- Extra sturdy textile hose for highest demands
- Ergo grip handle
- Adjustable floor tool (width 260 mm)
- Crevice tool and upholstery nozzle
- Dust bag change indicator
- Dust bag capacity: XL
- 2 large fixed wheels / 1 swivel wheel
- Automatic cable rewind
- Operating radius: 10 m
- Parking and storage aids
- Weight: 4.6 kg (cylinder only)

A technical data sheet for the Bosch BGL35MOV27 vacuum cleaner, detailing dimensions, weight, maximum power (2400W), voltage, frequency, cord length, plug type, and approval certificates.

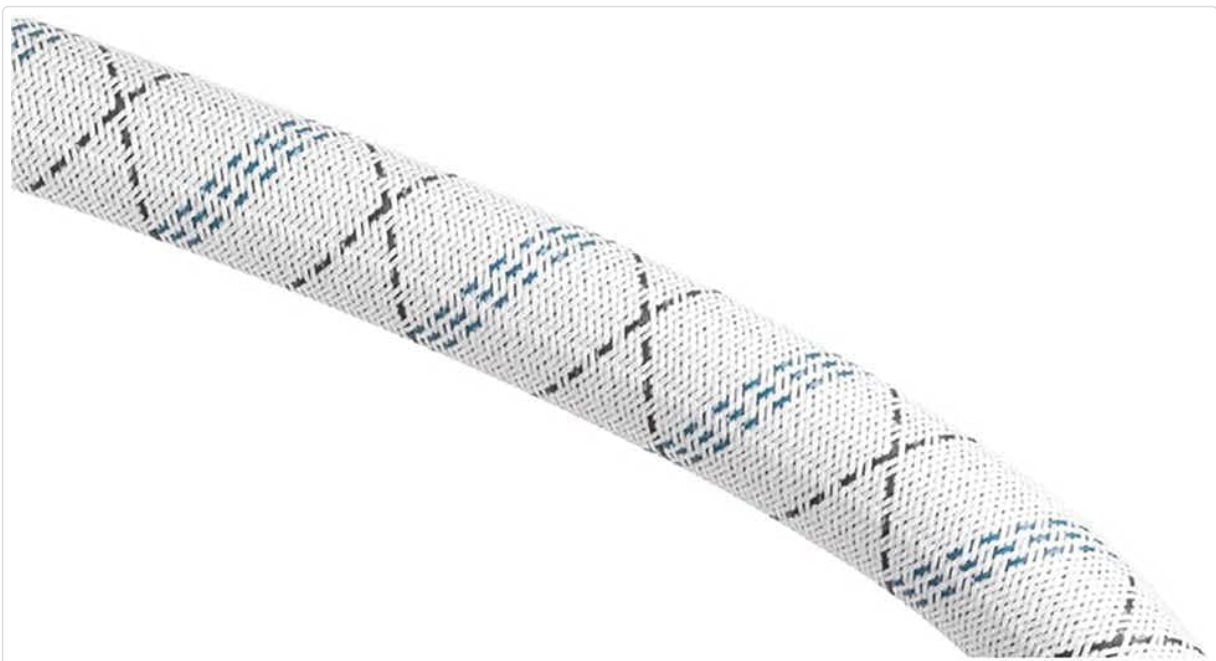

A document outlining the performance (2400W), hygiene (HEPA filtration, replacement dust bags TYP GALL), and comfort features (variable suction control, 360° ball connection, soft wheels, textile hose, Ergo grip handle, adjustable floor tool, crevice tool, upholstery nozzle, dust bag indicator, XL dust bag capacity, fixed wheels, swivel wheel, automatic cable

rewind, 10m operating radius, parking and storage aids, 4.6 kg cylinder weight) of the Bosch BGL35MOV27 vacuum cleaner.

9. WARRANTY AND CUSTOMER SUPPORT

Your Bosch BGL35MOV27 Bagged Vacuum Cleaner comes with a **5-year warranty**.

For warranty claims, technical assistance, or spare parts, please contact Bosch customer support. Refer to your purchase documentation or the official Bosch website for regional contact details.

Online resources and FAQs may also be available on the official Bosch website to help you with common queries.