

## ipega PG-9076

# iPega PG-9076 Wireless Bluetooth Gamepad User Manual

Model: PG-9076

## 1. INTRODUCTION

---

Thank you for choosing the iPega PG-9076 Wireless Bluetooth Gamepad. This versatile controller is designed to provide an immersive gaming experience across multiple platforms. It supports both Bluetooth and 2.4GHz wireless connections, making it compatible with Android smartphones, tablets, Smart TVs, TV boxes, and Windows PCs (XP/7/8/10). Please read this manual carefully before using the product to ensure proper operation and to maximize your gaming enjoyment.

## 2. PACKAGE CONTENTS

---

- 1 x iPega PG-9076 Wireless Bluetooth Gamepad
- 1 x USB Charging Cable
- 1 x 2.4G Wireless Receiver (USB Dongle)
- 1 x User Manual

## 3. PRODUCT OVERVIEW

---

Familiarize yourself with the layout and functions of your gamepad.



**Figure 3.1:** Top-down view of the iPega PG-9076 Gamepad. This image displays the directional pad (D-pad) on the left, two analog joysticks, action buttons (A, B, X, Y) on the right, and central function buttons including TURBO, START, SELECT, NEW, iCADE, and ANDROID mode buttons.



**Figure 3.2:** Angled view of the iPega PG-9076 Gamepad. This perspective emphasizes the ergonomic grips and the overall shape of the controller, designed for comfortable handling during extended gaming sessions.

- **D-Pad:** Directional Pad for precise movement.
- **Left/Right Analog Sticks:** For 360-degree movement and camera control.
- **Action Buttons (A, B, X, Y):** For in-game actions.
- **L1/L2/R1/R2 Triggers/Shoulder Buttons:** Located on the top of the gamepad.
- **START/SELECT Buttons:** Standard game control buttons.
- **TURBO Button:** Activates continuous firing for assigned buttons.
- **Mode Buttons (NEW, iCADE, ANDROID):** Used to switch between different operating modes.
- **Home Button:** Central button for system functions.
- **Phone Holder:** Integrated adjustable holder for smartphones.

## 4. SETUP

---

### 4.1. Charging the Gamepad

Before first use, fully charge the gamepad. Connect the supplied USB charging cable to the gamepad's charging port and the other end to a USB power source (e.g., computer USB port, USB wall adapter).

- The LED indicator will typically show charging status (e.g., red light on while charging, off when fully charged).

- A full charge usually takes approximately 2-3 hours.

## 4.2. Connection Modes

The PG-9076 supports multiple connection modes for various devices.

### 4.2.1. Bluetooth Connection (for Android/iOS/Smart TV/TV Box)

1. Ensure the gamepad is powered off.
2. Press and hold the **ANDROID** button (or relevant mode button for your device, e.g., iCADE for iOS if supported) and the **HOME** button simultaneously until the LED indicator flashes rapidly. This puts the gamepad into pairing mode.
3. On your device (smartphone, tablet, Smart TV, TV Box), go to Bluetooth settings and turn Bluetooth on.
4. Search for available devices. You should see "PG-9076" or a similar name appear in the list.
5. Select "PG-9076" to pair. The LED indicator on the gamepad will become solid once successfully connected.
6. For iOS devices, some games may require specific iCADE mode. Refer to game instructions.



**Figure 4.1:** The iPega PG-9076 Gamepad with a smartphone securely mounted in its integrated holder, ready for mobile gaming. This image demonstrates the convenience of playing on a phone with a physical controller.

### 4.2.2. 2.4G Wireless Connection (for PC/Smart TV/TV Box)

1. Plug the 2.4G wireless receiver (USB dongle) into an available USB port on your PC, Smart TV, or TV Box.
2. Ensure the gamepad is powered off.
3. Press and hold the **NEW** button (or a specific PC mode button if available) and the **HOME** button simultaneously until the LED indicator flashes rapidly.
4. The gamepad should automatically connect to the receiver. The LED indicator will become solid when connected.
5. Your system may automatically install necessary drivers.



**Figure 4.2:** The iPega PG-9076 Gamepad with a smartphone attached, and the 2.4G USB wireless receiver prominently displayed in the foreground. This illustrates the wireless connectivity option for devices like PCs and TV boxes.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Power On/Off

- **Power On:** Press the **HOME** button. The gamepad will attempt to connect to the last paired device.
- **Power Off:** Press and hold the **HOME** button for approximately 3 seconds until the LED indicator turns off. The gamepad will also automatically power off after a period of inactivity.

### 5.2. Gamepad Modes

The PG-9076 supports different modes to ensure compatibility with various games and platforms. Switch modes by holding the corresponding button (e.g., ANDROID, NEW, iCADE) and then pressing the HOME button to power on.



- **Android Standard Mode:** For most Android games.
- **PC X-Input Mode:** For Windows PC games that support X-Input (common for modern PC games).
- **iCADE Mode:** For some older iOS games that specifically support iCADE protocol.

### 5.3. TURBO Function

The TURBO function allows a button to continuously fire when held down, useful for certain games.

1. Press the button you wish to set to TURBO (e.g., A button).
2. While holding that button, press the **TURBO** button once. The LED indicator may flash to confirm.
3. To cancel TURBO for that button, repeat the process.

## 6. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the gamepad. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the gamepad in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the gamepad regularly, even if not in use for extended periods (e.g., once every three months).
- **Avoid Drops:** Do not drop or subject the gamepad to strong impacts, as this can damage internal components.

## 7. TROUBLESHOOTING

---

### 7.1. Gamepad Not Connecting

- **Check Power:** Ensure the gamepad is charged and powered on.
- **Correct Mode:** Verify you are in the correct connection mode (Bluetooth for mobile/TV, 2.4G for PC with dongle).
- **Re-pair:** Delete the gamepad from your device's Bluetooth list and attempt to re-pair.
- **Interference:** Move closer to your device and away from other wireless devices that might cause interference.
- **Dongle Check:** If using 2.4G, ensure the USB dongle is securely plugged in and recognized by your device.

### 7.2. Buttons Not Responding

- **Battery Level:** Low battery can cause erratic behavior. Charge the gamepad.
- **Restart:** Power off the gamepad and your device, then restart both and try connecting again.
- **Game Compatibility:** Some games may not fully support external controllers or may require specific mapping. Check game settings.

### 7.3. Charging Issues

- **Cable/Port:** Try a different USB cable or charging port.
- **Power Source:** Ensure the USB power source is functioning correctly.

## 8. SPECIFICATIONS

---

Feature	Detail
Model	PG-9076
Connectivity	Bluetooth, 2.4G Wireless

Compatibility	Android (Phones, Tablets, Smart TV, TV Box), Windows (XP/7/8/10)
Dimensions (Shipping)	17.8 x 13.4 x 6.8 cm
Weight (Shipping)	302 grams
Manufacturer Reference	2724709426067

## 9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package or contact your retailer for specific warranty terms and conditions.

For technical support or further assistance, please contact the customer service department of your place of purchase or visit the official iPega website for support resources.



© 2024 iPega. All rights reserved.

### Related Documents - PG-9076

	<p><a href="#">iPega Batman Bluetooth Gamepad User Manual PG-9076</a></p> <p>Comprehensive user manual for the iPega PG-9076 Batman Bluetooth Gamepad, detailing setup, usage for Android, PC, PS3, and multimedia functions, including connection guides and troubleshooting.</p>
	<p><a href="#">iPega PG-9076 Bluetooth Gamepad User Manual</a></p> <p>Comprehensive user manual for the iPega PG-9076 Bluetooth Gamepad, detailing connection procedures for Android, iOS, Windows, PS3, Smart TV, and TV boxes. Includes button descriptions, multimedia functions, turbo mode, troubleshooting, and product specifications.</p>
	<p><a href="#">iPega PG-9076 Bluetooth ovládač: Návod na použitie</a></p> <p>Používateľská príručka pre Bluetooth ovládač iPega PG-9076, kompatibilný so systémami Android, iOS, Windows, PS3, Smart TV a TV boxmi. Obsahuje informácie o pripojení, multimediálnych funkciách, režime Turbo a riešení problémov.</p>

