

Motorola PANX0001US

Motorola Edge (2021) User Manual

Model: PANX0001US

1. SETUP

1.1. What's in the Box

Upon unboxing your Motorola Edge (2021), verify that all components are present:

- Motorola Edge (2021) Smartphone
- 10W Rapid Charger (Adapter)
- USB Cable
- SIM Tray Ejector Tool
- Guides (Documentation)

1.2. SIM Card Installation

To install your SIM card:

1. Locate the SIM tray on the side of the device.
2. Insert the SIM tray ejector tool into the small hole next to the tray and press firmly until the tray pops out.
3. Place your Nano-SIM card(s) into the tray with the gold contacts facing down. Ensure proper orientation as indicated on the tray.
4. Carefully push the tray back into the device until it is flush.

The Motorola Edge (2021) is designed for use with major US carriers, supporting 4G, VoLTE, and 5G Sub6 NSA (via software update) on networks like AT&T, Verizon, and T-Mobile. Please consult your carrier for specific compatibility details.

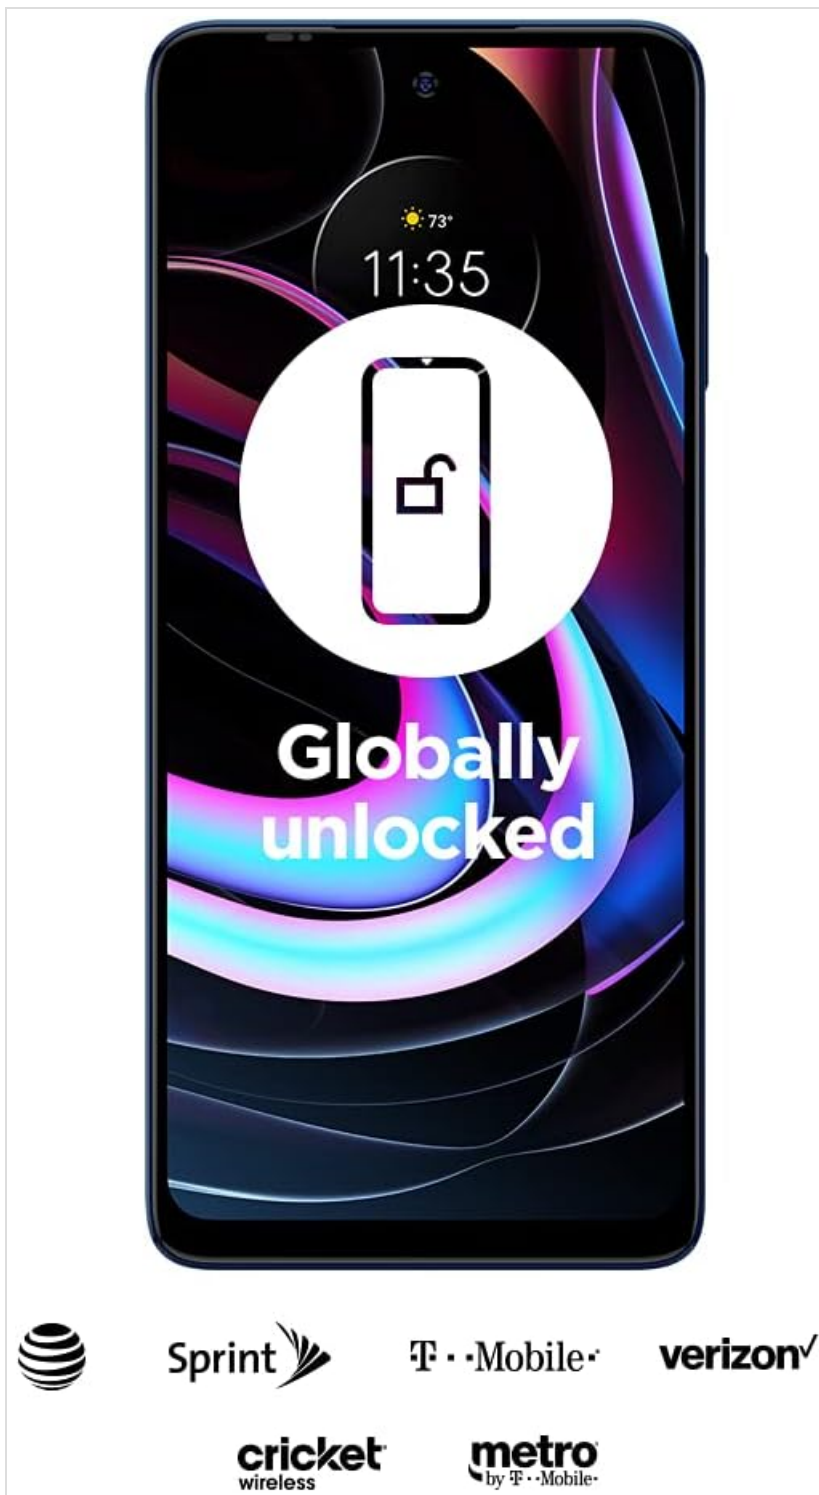


Image: Front view of the Motorola Edge (2021) displaying a 'Globally Unlocked' graphic and logos of compatible carriers such as AT&T, Sprint, T-Mobile, Verizon, Cricket Wireless, Metro by T-Mobile, and Google Fi, indicating broad network compatibility.

1.3. Initial Power On

Press and hold the power button located on the side of the device until the Motorola logo appears. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account sign-in.

2. OPERATING YOUR DEVICE

2.1. Display Features

The Motorola Edge (2021) features an ultra-smooth 6.8-inch HDR10 IPS display with a 144Hz refresh rate. This high refresh rate provides fluid scrolling and responsive interactions, enhancing the visual experience for gaming and general navigation.





Image: The Motorola Edge (2021) showcasing its vibrant display with a scenic image, highlighting the phone's ultra-smooth 144Hz refresh rate for an enhanced visual experience.

2.2. Camera System

Equipped with a 108 MP ultra high-resolution camera system, the device captures detailed photos and supports 4K video recording. The camera utilizes Ultra Pixel technology for improved low-light performance. For selfies, a 32 MP high-resolution front camera is included, offering 4x low-light sensitivity.

The camera app allows seamless switching between front and rear cameras during video recording, useful for vlogging and dynamic content creation.



Image: A close-up view of the Motorola Edge (2021)'s rear camera module, emphasizing its 108 MP ultra high-resolution camera system, designed for capturing detailed images and videos.

2.3. Battery and Charging

The Motorola Edge (2021) is powered by a long-lasting 5000mAh battery, providing up to two days of usage on a single charge. It supports TurboPower 30 charging, allowing for hours of power in just minutes.



Image: The Motorola Edge (2021) screen displaying a split image of a landscape, transitioning from night to day, illustrating the phone's extended battery life of over 40 hours.

2.4. Connectivity

Experience superfast 5G and Wi-Fi 6E connectivity for rapid downloads and seamless online experiences. The device also includes Bluetooth 5.2 and NFC for wireless connections and mobile payments. Wi-Fi Hotspot capability is available in both 2.4 GHz and 5 GHz bands.

2.5. Ready For Platform

Unleash your phone's capabilities with the Ready For platform. This feature allows you to wirelessly connect your Motorola Edge (2021) to a compatible TV or monitor to play mobile games, make video calls, and use your phone's applications on a larger screen.





Image: The Motorola Edge (2021) screen displaying the 'Ready For' interface, which offers options to connect the phone wirelessly to a TV for gaming, video calls, and using apps on a larger display.

3. MAINTENANCE

3.1. Cleaning Your Device

To clean your Motorola Edge (2021), use a soft, lint-free cloth. Avoid abrasive materials or harsh chemicals that could damage the screen or finish. For stubborn smudges, lightly dampen the cloth with water or a screen-safe cleaning solution.

3.2. Software Updates

Ensure your device is running the latest software version for optimal performance and security. Navigate to **Settings > System > System updates** to check for and install available updates. Keep your device charged and connected to Wi-Fi during updates.

3.3. Battery Care

To prolong battery life, avoid exposing the device to extreme temperatures. It is recommended to keep the battery charge between 20% and 80% for long-term health. While the device supports fast charging, occasional slower

charging can also benefit battery longevity.

3.4. Water Resistance

The Motorola Edge (2021) is designed with water-resistant features. While it can withstand splashes and light rain, it is not fully waterproof. Avoid submerging the device in water or exposing it to pressurized water.

4. TROUBLESHOOTING

4.1. Common Issues

- **Device not turning on:** Ensure the battery is charged. Connect the device to the charger for at least 15 minutes before attempting to power on.
- **Network connectivity issues:** Check if your SIM card is properly inserted. Toggle Airplane Mode on and off. Restart the device. Verify your carrier's network status.
- **Apps crashing or freezing:** Close and reopen the app. Clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache). Restart the device.
- **Slow performance:** Close unused apps. Clear cached data. Check available storage. Consider a factory reset if issues persist.

4.2. Factory Reset

A factory reset will erase all data from your device and restore it to its original factory settings. This can resolve persistent software issues. **Backup all important data before proceeding.**

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your decision and enter your PIN/password if prompted.
4. The device will restart and begin the reset process.

5. SPECIFICATIONS

Feature	Detail
Model Name	Edge
Item Model Number	PANX0001US
Operating System	Android 11.0
RAM	8 GB
Memory Storage Capacity	256 GB
Screen Size	6.8 Inches
Resolution	1080 x 2460

Refresh Rate	144 Hz
CPU Model	Qualcomm Snapdragon MSM8260A
CPU Speed	2.4 GHz
Battery Capacity	5000 Milliamp Hours
Product Dimensions	6.36 x 2.8 x 0.37 inches
Item Weight	7.1 ounces (200 Grams)
Color	Nebula Blue
Connectivity Technologies	Bluetooth, NFC, USB, Wi-Fi
Special Features	4K Video Recording, Bluetooth Enabled, Built-In GPS, Camera, Expandable Memory, Fast Charging Support, Fingerprint Sensor, Mobile Hotspot Capability, Smartphone, Text/Messaging, Video Calling, Water Resistant

6. WARRANTY AND SUPPORT

For detailed warranty information and support, please refer to the official user guide provided with your product or visit the Motorola support website. A digital version of the user guide is available [here](#). You can also visit the official Motorola store on Amazon for additional product information and accessories [Motorola Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question