

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VGR](#) /

> [VGR V-180 Men's Dry Clipper and Trimmer User Manual](#)

VGR V-180

VGR V-180 Men's Dry Clipper and Trimmer User Manual

Model: V-180

1. INTRODUCTION

Thank you for choosing the VGR V-180 Men's Dry Clipper and Trimmer. This device is designed for precise grooming, offering a comfortable and efficient experience. Please read this manual thoroughly before using the product to ensure safe and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Keep the appliance away from water. Do not use it near bathtubs, showers, basins, or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning.
- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or has been dropped or damaged.
- This appliance is for household use only.
- Keep out of reach of children.
- Use only attachments supplied by the manufacturer.

3. PACKAGE CONTENTS

The VGR V-180 package typically includes:

- VGR V-180 Clipper and Trimmer unit

- 3 Trimmer Heads/Combs (various sizes)
- Charging Cable
- Cleaning Brush
- Lubricating Oil
- User Manual

4. PRODUCT FEATURES

- **Model:** V-180
- **Targeted Group:** Men
- **Type:** Clipper and Trimmer
- **Power Source:** Battery Operated
- **Operating Function:** Dry
- **Number of Heads:** 3
- **Number of Speed Settings:** 1
- **Materials:** Plastic



Image: Front view of the VGR V-180 trimmer, showing the power indicator lights.

5. SETUP

5.1 Charging the Trimmer

1. Ensure the trimmer is turned off.
2. Locate the charging port on the bottom of the trimmer.
3. Connect the charging cable to the trimmer and plug the other end into a suitable power adapter (not included) or USB port.
4. The indicator lights on the trimmer will illuminate to show charging status. Allow the trimmer to charge fully before first use.



Image: Bottom view of the VGR V-180 trimmer, highlighting the charging port.

5.2 Attaching/Detaching Trimmer Heads

1. Ensure the trimmer is turned off.
2. To attach a head, align the head with the trimmer body and gently push until it clicks into place.
3. To detach a head, hold the trimmer firmly and gently pull the head upwards or press the release button (if available) to remove it.

6. OPERATING INSTRUCTIONS

6.1 Turning On/Off

- To turn on the trimmer, slide the power switch to the 'ON' position.
- To turn off the trimmer, slide the power switch to the 'OFF' position.

6.2 Trimming and Clipping

1. Ensure your hair or beard is clean and dry before trimming.
2. Select the desired trimmer head/comb and attach it securely.
3. Turn on the trimmer.
4. Hold the trimmer at a comfortable angle and move it against the direction of hair growth for an even trim.
5. For detailed styling or edging, remove the comb attachment and use the bare blade carefully.
6. After use, turn off the trimmer.



Image: Angled view of the VGR V-180 trimmer, showing the blade and power switch.

7. MAINTENANCE

7.1 Cleaning the Trimmer

1. Ensure the trimmer is turned off and unplugged.
2. Remove the trimmer head.
3. Use the provided cleaning brush to remove any loose hairs from the blades and inside the trimmer body.
4. Do not rinse the trimmer body under water as it is designed for dry operation.
5. Wipe the exterior of the trimmer with a soft, dry cloth.

7.2 Oiling the Blades

1. After cleaning, apply a small drop of lubricating oil (provided) to the blades.
2. Turn on the trimmer for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil. Regular oiling helps maintain blade sharpness and prolongs the life of the trimmer.

7.3 Storage

Store the trimmer in a cool, dry place, away from direct sunlight and moisture. Keep it out of reach of children.

8. TROUBLESHOOTING

If you encounter issues with your VGR V-180 trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Trimmer pulls hair or cuts poorly.	Blades are dull or clogged with hair.	Clean and oil the blades. Ensure blades are properly aligned.
Trimmer makes unusual noise.	Blades need lubrication.	Apply lubricating oil to the blades.

If the problem persists, please contact customer support.

9. SPECIFICATIONS

Feature	Detail
Model Number	V-180
Brand	VGR
Power Source	Battery Operated
Operating Function	Dry
Number of Speed Settings	1
Number of Heads	3
Target Audience	Men
Materials	Plastic
Recommended Uses	Head, Trimming
Batteries Required	Yes
Package Dimensions	18.8 x 9 x 5.5 cm
Item Weight	310 grams
First Available Date	July 7, 2021

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer where the product was acquired. Keep your proof of purchase for any warranty claims.