

VGR V-171

VGR V-171 Hair Trimmer User Manual

Model: V-171

1. INTRODUCTION

Welcome to the VGR V-171 Hair Trimmer user manual. This guide provides essential information for the safe and effective use, maintenance, and troubleshooting of your new grooming device. Please read all instructions carefully before operating the trimmer and retain this manual for future reference.

2. SAFETY INSTRUCTIONS

To reduce the risk of electric shock, injury, or damage to the appliance, always follow these basic safety precautions:

- **Keep away from water:** Do not use this appliance near bathtubs, showers, basins, or other vessels containing water. Never immerse the trimmer in water.
- **Dry use only:** This trimmer is designed for dry use. Do not use it on wet hair or skin.
- **Children and infants:** Keep the appliance out of reach of children. Do not use on infants or children.
- **Eye and skin contact:** Avoid direct contact of the blades with eyes or sensitive skin areas.
- **Damage inspection:** Do not operate the trimmer if it has a damaged cord, plug, or if it is not working properly, has been dropped, or damaged.
- **Intended use:** Use this appliance only for its intended household use as described in this manual.
- **Charging:** Use only the provided charging cable. Ensure the voltage is compatible before charging.
- **Cleaning:** Always unplug the trimmer before cleaning.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- VGR V-171 Hair Trimmer
- 4 Guide Combs (various lengths)
- Cleaning Brush
- Lubricating Oil
- USB Charging Cable
- User Manual



Image: The VGR V-171 hair trimmer shown alongside its complete set of accessories, including four guide combs, a small cleaning brush, a bottle of lubricating oil, and a USB charging cable, all packaged with the user manual.

4. SETUP

4.1 Charging the Trimmer

1. Ensure the trimmer is switched off.
2. Insert the small end of the USB charging cable into the charging port at the bottom of the trimmer.
3. Plug the larger end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
4. The indicator light on the trimmer will illuminate to show that it is charging.
5. Allow the trimmer to charge fully before first use. Charging time may vary.

4.2 Attaching and Detaching Guide Combs

1. Select the desired guide comb for your preferred hair length.
2. Align the guide comb with the trimmer blade and slide it firmly onto the blade until it clicks into place.

3. To remove a guide comb, gently push it upwards and away from the blade.



Image: A full view of the VGR V-171 hair trimmer, highlighting its ergonomic design, power button, and battery indicator lights.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- To turn on the trimmer, press the power button once.
- To turn off the trimmer, press the power button again.

5.2 Trimming Hair

1. Ensure your hair is clean and dry before trimming.

2. Attach the desired guide comb for the length you wish to achieve. For a closer trim, use without a guide comb.
3. Hold the trimmer with the blades facing the area you want to trim.
4. Move the trimmer against the direction of hair growth for best results.
5. Use slow, controlled movements. Do not press too hard against the skin.
6. Regularly clear accumulated hair from the guide comb and blades during use.



Image: A detailed close-up of the VGR V-171 hair trimmer's stainless steel T-blade, designed for precise trimming.

6. MAINTENANCE

6.1 Cleaning the Blades

1. Ensure the trimmer is switched off and unplugged before cleaning.
2. Use the provided cleaning brush to remove any loose hairs from the blades and the trimmer head.
3. For a more thorough clean, you may carefully detach the blade head (refer to specific instructions if provided with your model for blade removal).
4. Do not rinse the trimmer head or blades under water, as this model is for dry use only.

6.2 Lubricating the Blades

1. After cleaning, apply 1-2 drops of the lubricating oil (provided) onto the blades.
2. Turn on the trimmer for a few seconds to allow the oil to distribute evenly across the blades.
3. Wipe off any excess oil with a soft cloth. Regular oiling helps maintain blade sharpness and prolongs the life of the trimmer.

6.3 Storage

- Store the trimmer in a cool, dry place, away from direct sunlight and moisture.
- Keep the guide combs and accessories together with the trimmer to prevent loss.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Trimmer does not turn on.	Power button not pressed correctly.	Press the power button firmly.
Poor trimming performance.	Blades are dull or clogged with hair.	Clean and lubricate the blades. If blades are dull, consider replacement if available.
Trimmer makes unusual noise.	Blades require lubrication.	Apply lubricating oil to the blades.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

- **Model Number:** V-171
- **Brand:** VGR
- **Power Source:** Battery Operated (Rechargeable)
- **Number of Speed Settings:** 1
- **Target Group:** Men
- **Number of Heads:** 4
- **Operation Function:** Dry
- **Type:** Clipper & Trimmer
- **Blade Material:** Stainless Steel
- **Special Features:** Rechargeable
- **Item Weight:** 500 grams

- **Shipping Dimensions:** 18.6 x 10.6 x 6.8 cm
- **Color:** Black

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or contact the retailer where the product was bought. For technical support or service inquiries, please contact the manufacturer or your local distributor. Keep your proof of purchase for any warranty claims.