

[Manuals.plus](#) /

> [Kemei](#) /

> Kemei KM-720 Hair Clipper and Trimmer User Manual

Kemei KM-720

Kemei KM-720 Hair Clipper and Trimmer User Manual

Model: KM-720 | Brand: Kemei

1. INTRODUCTION

Thank you for choosing the Kemei KM-720 Hair Clipper and Trimmer. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your device. Please read these instructions carefully before first use and keep them for future reference.

2. SAFETY INSTRUCTIONS

To reduce the risk of electric shock, injury, or fire, always follow these basic safety precautions:

- Do not immerse the appliance in water or use it near water. This device is designed for dry use only.
- Keep the appliance away from children.
- Always inspect the appliance for damage before use. Do not use if the blades are damaged or broken.
- Use only the charging cable provided with the device.
- Unplug the appliance from the power outlet immediately after charging and before cleaning.
- Do not attempt to repair the appliance yourself. Contact qualified service personnel for repairs.
- Avoid prolonged charging to prevent battery damage.

3. PACKAGE CONTENTS

Carefully unpack your Kemei KM-720 and check for the following items:

- Kemei KM-720 Hair Clipper and Trimmer
- 4 Guide Combs (3mm, 6mm, 9mm, 12mm)
- Cleaning Brush
- Lubricating Oil Bottle
- Charging Cable



Image 1: All components included in the Kemei KM-720 package.

4. PRODUCT FEATURES

The Kemei KM-720 is designed for efficient and precise grooming:

- **Model:** KM-720
- **Blade Material:** Durable Stainless Steel
- **Power Source:** Electric (corded) and Rechargeable Battery (cordless operation)
- **Operating Function:** Dry Use Only
- **Target Group:** Men
- **Cutting Lengths:** Adjustable with 4 guide combs (3mm, 6mm, 9mm, 12mm)
- **Special Feature:** Zero-cut shaving capability for precise edging.



5. SETUP AND CHARGING

5.1 Initial Charging

1. Before first use, ensure the device is fully charged.
2. Connect the charging cable to the trimmer and plug the adapter into a suitable power outlet.
3. The charging indicator light (if present) will illuminate. Charge for approximately 8 hours for a full charge.
4. Once fully charged, unplug the device. Do not leave it charging for extended periods after the battery is full.

5.2 Attaching Guide Combs

1. Ensure the trimmer is turned off before attaching or removing guide combs.
2. Select the desired guide comb (3mm, 6mm, 9mm, or 12mm) for your preferred hair length.
3. Align the comb with the trimmer blade and push it firmly until it clicks into place.
4. To remove, gently pull the comb away from the blade.

6. OPERATING INSTRUCTIONS

6.1 Basic Operation

1. Ensure your hair or beard is clean and dry before trimming.
2. Press the power button to turn the trimmer on.
3. For general trimming, attach the appropriate guide comb. Hold the trimmer with the comb flat against the skin and move it against the direction of hair growth.
4. For precise edging or a zero-cut finish, remove the guide comb. Use the bare blade carefully to define lines and edges.
5. After use, press the power button to turn the trimmer off.

6.2 Trimming Tips

- Start with a longer guide comb if you are unsure of the desired length, then switch to shorter combs if needed.
- Move the trimmer slowly and steadily for an even cut.
- Stretch the skin taut in difficult areas to ensure a smooth pass.
- Regularly clean hair clippings from the blade during use to maintain performance.

7. MAINTENANCE

7.1 Cleaning the Blades

1. Ensure the trimmer is turned off and unplugged before cleaning.
2. Use the provided cleaning brush to remove any loose hair clippings from the blades and the trimmer head.
3. Do not rinse the blades or the trimmer under water, as this device is not waterproof.

7.2 Oiling the Blades

1. After cleaning, apply a small drop of the lubricating oil (provided) to the teeth of the blades.
2. Turn the trimmer on for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth. Regular oiling ensures optimal cutting performance and blade longevity.

7.3 Storage

Store the trimmer in a cool, dry place, away from direct sunlight and moisture. Keep it out of reach of children.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Poor cutting performance.	Blades are dull or clogged with hair.	Clean and oil the blades. If blades are dull, consider replacement (contact support).
Trimmer makes unusual noise.	Blades require lubrication.	Apply lubricating oil to the blades.
Battery life is short.	Battery not fully charged or aging battery.	Ensure full charge. If problem persists, battery may need replacement (contact support).

9. SPECIFICATIONS

- **Model Number:** KM-720
- **Manufacturer Part Number:** 720
- **Brand:** Kemei
- **Power Source:** Electric (Corded) / Battery (Cordless)
- **Battery:** Rechargeable (Included)
- **Blade Material:** Stainless Steel
- **Speed Settings:** 1
- **Number of Heads:** 1
- **Operating Function:** Dry
- **Target Audience:** Men
- **Color:** Silver
- **Item Weight:** Approximately 11 grams (Note: This weight seems unusually low and might be a data entry error. Actual product weight may vary.)

10. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or contact your retailer. If you experience any issues not covered in this manual, or require further assistance, please contact the Kemei customer support or your point of purchase.

