Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Franke /
- > Franke FCR 925 TC BK/XS Wall-Mounted Canopy Hood Instruction Manual

Franke FCR 925 TC BK/XS

Franke FCR 925 TC BK/XS Wall-Mounted Canopy Hood Instruction Manual

Model: FCR 925 TC BK/XS | Brand: Franke

1. Introduction

This instruction manual provides essential information for the safe and efficient installation, operation, and maintenance of your Franke FCR 925 TC BK/XS Wall-Mounted Canopy Hood. Please read this manual thoroughly before using the appliance and keep it for future reference. Proper use and care will ensure optimal performance and extend the lifespan of your hood.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, observe the following basic precautions:

- Ensure the electrical installation complies with all local codes and ordinances.
- Always disconnect the power supply before servicing or cleaning the hood.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not flambé under the range hood.
- Clean grease filters regularly to prevent grease accumulation, which can be a fire hazard.
- Ensure adequate ventilation in the room when the range hood is used simultaneously with appliances burning gas or other fuels.
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon unpacking:

- Franke FCR 925 TC BK/XS Hood Unit
- Mounting Hardware (screws, wall plugs, brackets)

- Grease Filters (pre-installed)
- LED Lights (pre-installed)
- Ducting Adapter (Ø 150 mm to Ø 120 mm reduction supplied)
- Instruction Manual

4. Installation and Setup


Installation should be performed by a qualified technician in accordance with local regulations. Ensure the mounting surface is strong enough to support the hood's weight.

4.1 Mounting the Hood

The Franke FCR 925 TC BK/XS is designed for wall-mounted installation. Refer to the provided technical drawing for precise measurements and clearances required for proper installation above your cooking surface.



Image of the Franke FCR 925 TC BK/XS wall-mounted canopy hood, featuring a silver and black finish with integrated LED lighting and touch controls.

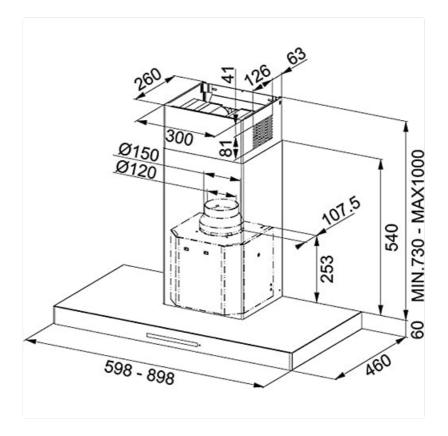

Technical drawing illustrating the dimensions and mounting specifications for the Franke FCR 925 TC BK/XS hood, including pipe outlet diameters (Ø 150 mm, Ø 120 mm reduction) and overall unit measurements.

4.2 Electrical Connection

Connect the hood to a suitable electrical outlet according to local electrical codes. The hood operates on an electric power source. Ensure the voltage and frequency match the specifications listed in this manual.

4.3 Ducting Options

This hood supports both recirculating (ductless) and external (ducted) ventilation. For external venting, connect the hood to a suitable ducting system with a Ø 150 mm pipe outlet (a Ø 120 mm reduction is supplied if needed). For recirculating mode, charcoal filters (not included) must be installed to filter the air before it is returned to the kitchen.

5. OPERATING INSTRUCTIONS

The Franke FCR 925 TC BK/XS hood features intuitive touch controls for ease of use.

5.1 Control Panel

The control panel is located on the front of the hood and consists of touch-sensitive buttons for various functions.

5.2 Fan Speed Settings

Press the fan speed buttons to cycle through the available extraction levels:

- Minimum Speed: For light cooking odors and general air circulation.
- Medium Speed: For moderate cooking tasks.
- Maximum Speed: For heavy cooking, frying, or strong odors.
- Intensive Speed: Provides maximum extraction for a limited time, ideal for very strong fumes. The fan will automatically revert to a lower speed after a set period.

5.3 Lighting

Press the light button to turn the integrated LED lights on or off. The LED lights provide illumination for your cooking area.

6. CARE AND MAINTENANCE

Regular cleaning and maintenance are crucial for the hood's performance and longevity.

6.1 Cleaning the Exterior

Clean the exterior surfaces with a soft cloth dampened with mild detergent and water. Avoid abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish. For stainless steel parts, use a specialized stainless steel cleaner and polish in the direction of the grain.

6.2 Cleaning/Replacing Grease Filters

The metal grease filters should be cleaned regularly (approximately every 2-4 weeks, depending on usage) to maintain optimal performance. They can be washed by hand in hot soapy water or in a dishwasher. Ensure they are completely dry before re-installing. If using recirculating mode, charcoal filters should be replaced every 3-6 months.

6.3 Replacing LED Lights

The hood is equipped with long-lasting LED lights. If replacement is necessary, contact a qualified technician or Franke customer support for assistance, as specialized tools or knowledge may be required.

7. TROUBLESHOOTING GUIDE

Before contacting customer service, consult the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Hood does not turn on.	No power supply.	Check if the hood is plugged in and the circuit breaker is not tripped.
Poor extraction performance.	Clogged grease filters or incorrect ducting.	Clean or replace grease filters. Ensure ducting is correctly installed and not obstructed.
Excessive noise during operation.	Loose components or improper installation.	Check for loose screws or parts. Ensure the hood is securely mounted.
Lights not working.	Faulty LED module.	Contact Franke customer support for LED replacement.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	FCR 925 TC BK/XS (110.0361.046)
Brand	Franke
Mounting Type	Wall Mount

Feature	Specification
Ventilation Type	Recirculating & External
Control Type	Touch Control
Energy Class	А
Air Flow Capacity (Int.)	690 m³/h (IEC 61591)
Air Flow Capacity (Max.)	560 m³/h (IEC 61591)
Air Flow Capacity (Min.)	290 m³/h (IEC 61591)
Intensive Noise Level	69 dB(A)
Maximum Noise Level	65 dB(A)
Minimum Noise Level	51 dB(A)
Power	270 W
Pressure	550 Pa
Lighting	2 x 1W LED
Pipe Outlet Diameter	Ø 150 mm (Ø 120 mm reduction supplied)
Product Dimensions (L x W x H)	97.2 x 41.5 x 59 cm
Item Weight	19.6 kg
Special Features	Touch Control

9. WARRANTY AND CUSTOMER SUPPORT

Your Franke FCR 925 TC BK/XS Hood is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical assistance, spare parts, or to report a fault, please contact your retailer or Franke customer support. Ensure you have your model number and purchase date available when contacting support.

For further information, you may visit the official Franke website or contact their authorized service centers.

Related Documents - FCR 925 TC BK/XS

