

HUAYU RM-L1575

HUAYU RM-L1575 Universal Remote Control Instruction Manual

For Hisense Televisions

1. INTRODUCTION

Thank you for choosing the HUAYU RM-L1575 Universal Remote Control. This remote is designed to operate various Hisense television models, providing convenient access to essential TV functions and popular streaming services like Netflix and YouTube. Please read this manual carefully before use to ensure proper setup and operation.

2. PRODUCT OVERVIEW

The RM-L1575 remote control features a standard layout with dedicated buttons for quick access to common functions and streaming applications.

2.1 Key Features

- Model Number: RM-L1575
- External Product ID: 6972401110135 (EAN-13)
- Brand: HUAYU
- Color: Black
- Compatible with: Televisions (specifically Hisense models)
- Dedicated buttons for Netflix, YouTube, Tikilive, and Claro video.

2.2 Remote Control Layout



Figure 1: Front view of the HUAYU RM-L1575 remote control, showing all buttons including power, input, number pad, volume, channel, navigation, and dedicated streaming service buttons.





Figure 2: Front and back view of the HUAYU RM-L1575 remote control, illustrating the ergonomic design and battery compartment on the rear.

3. SETUP

3.1 Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.

3. Insert two AAA alkaline batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery cover, ensuring it clicks securely into place.

The remote control is an infrared (IR) device and typically does not require pairing. It should work directly with compatible Hisense TVs once batteries are installed.

4. OPERATING INSTRUCTIONS

Point the remote control directly at your Hisense TV's IR receiver. Ensure there are no obstructions between the remote and the TV.

4.1 Basic Functions

- **Power ()**: Turns the TV on or off.
- **Input**: Cycles through available input sources (HDMI, AV, etc.).
- **Number Pad (0-9)**: Enters channel numbers directly.
- **VOL (+/-)**: Adjusts the volume level.
- **CH (▲/▼)**: Changes TV channels up or down.
- **Mute ()**: Mutes or unmutes the TV sound.
- **Menu**: Opens the TV's main menu.
- **Navigation (◀/▶/▲/▼)**: Navigates through menus and options.
- **OK**: Confirms selections.
- **Back**: Returns to the previous screen or menu.
- **Exit**: Exits the current menu or application.

4.2 Streaming Service Buttons

- **Netflix**: Directly launches the Netflix application.
- **YouTube**: Directly launches the YouTube application.
- **Tikilive**: Directly launches the Tikilive application.
- **Claro video**: Directly launches the Claro video application.

Note: For streaming service buttons to function, your Hisense TV must be a smart TV with these applications installed and connected to the internet.

5. MAINTENANCE

5.1 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote's surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new alkaline batteries of the same type (AAA). Remove batteries if the remote will not be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote and the TV's IR sensor.
- Confirm the remote is pointed directly at the TV.

- **Specific buttons not working:**

- Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
- If streaming buttons (Netflix, YouTube) are not working, ensure your smart TV is connected to the internet and the applications are installed and updated.

- **Remote does not work with Hisense TV:**

- While designed for Hisense TVs, universal remotes may not be compatible with all models. Verify your TV model's compatibility with universal IR remotes.
- Some Hisense TVs may require a specific remote or have unique IR codes not fully supported by this universal model.

7. SPECIFICATIONS

Feature	Specification
Brand Name	HUAYU
Model Number	RM-L1575
Part Number	RM-L1575
Special Features	Universal
Color	Black
Compatible Devices	Television
Connectivity Technology	Infrared
Controller Type	Button Control
Maximum Range	10 Meters
Battery Description	Alkaline (AAA)

8. WARRANTY AND SUPPORT

Warranty information and specific customer support details for the HUAYU RM-L1575 remote control are not provided in the product description. Please refer to your retailer or the product packaging for any available warranty or support contact information.

