

Homlee 1508

Homlee 1800W Stand Mixer Model 1508 User Manual

Your guide to safe and efficient operation

1. INTRODUCTION

Thank you for choosing the Homlee 1800W Stand Mixer Model 1508. This appliance is designed to simplify your baking and cooking tasks with its powerful motor and versatile attachments. Please read this manual carefully before first use to ensure safe operation and optimal performance. Keep this manual for future reference.



Image 1.1: The Homlee 1800W Stand Mixer, showcasing its design and planetary mixing action.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before operating the appliance.
- Do not immerse the motor unit in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from moving beaters during operation to prevent injury and damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of accessories not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use the appliance outdoors.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Avoid contact with moving parts.
- Do not let the cord hang over the edge of a table or counter.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

3. PRODUCT OVERVIEW

The Homlee Stand Mixer Model 1508 includes the main unit, a 7.2-liter stainless steel mixing bowl, and three primary attachments: a dough hook, a flat beater, and a wire whisk. Additional accessories such as a splash guard, spatula, and egg separator are also provided.

Dough Hook (Level 1 - 3)



Flat Beater (Level 2 - 4)



Wire Whisk (Level 5 - 6 P)



Image 3.1: Key components and accessories of the Homlee Stand Mixer.

Components:

- **Main Unit:** Houses the 1800W motor, speed control dial, and tilt-head mechanism.
- **7.2L Stainless Steel Mixing Bowl:** Large capacity bowl with a handle for easy handling.
- **Dough Hook:** Used for kneading heavy mixtures like bread dough, pizza dough, and pasta.
- **Flat Beater:** Ideal for medium-heavy mixtures such as cake batter, cookie dough, and mashed potatoes.
- **Wire Whisk:** Designed for light mixtures like whipping cream, egg whites, and light batters.
- **Splash Guard:** Prevents ingredients from splashing out of the bowl during mixing.
- **Spatula:** For scraping down the sides of the bowl.
- **Egg Separator:** Assists in separating egg yolks from whites.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the mixing bowl, dough hook, flat beater, wire whisk, splash guard, spatula, and egg separator in warm soapy water. Rinse thoroughly and dry. Wipe the main unit with a damp cloth.
3. **Placement:** Place the mixer on a clean, dry, and stable surface. Ensure the non-slip feet are securely gripping the countertop.
4. **Attach Bowl:** Place the stainless steel mixing bowl onto the base of the mixer and turn it clockwise until it locks into place.
5. **Install Attachment:**
 - Press the tilt-head release button and lift the motor head.
 - Insert the desired attachment (dough hook, flat beater, or wire whisk) into the attachment shaft. Push upwards and turn counter-clockwise until it locks into place.

- Lower the motor head by pressing the tilt-head release button again and gently pushing the head down until it clicks into position.

6. **Attach Splash Guard:** If desired, slide the splash guard onto the mixing bowl after the attachment is installed and the head is lowered.


5. OPERATING INSTRUCTIONS

The Homlee Stand Mixer features a 6-speed control dial and a pulse function for precise mixing.

1. **Add Ingredients:** Place your ingredients into the mixing bowl.
2. **Select Attachment:** Choose the appropriate attachment for your recipe (refer to the guide below).
3. **Set Speed:** Turn the speed control dial to the desired setting. The blue LED light indicates the current speed.
4. **Start Mixing:** Begin mixing at a low speed and gradually increase as needed to prevent splashing.
5. **Pulse Function:** For short bursts of power, turn the dial to the 'P' (Pulse) setting and hold. Release to stop.
6. **Stop Mixing:** Turn the speed dial to '0' (Off) to stop the mixer.
7. **Remove Bowl and Attachment:** Press the tilt-head release button to lift the motor head. Turn the attachment clockwise to release it, then remove the mixing bowl by turning it counter-clockwise.

Attachment and Speed Guide:

Attachment	Recommended Use	Speed Setting
Dough Hook	Heavy mixtures (e.g., bread dough, pizza dough, pasta)	1 - 3
Flat Beater	Medium-heavy mixtures (e.g., cake batter, cookie dough, salads)	2 - 4
Wire Whisk	Light mixtures (e.g., whipping cream, egg whites, light batters)	5 - 6 (or P for pulse)

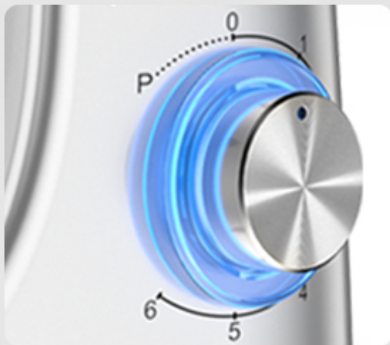

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your Homlee Stand Mixer.

- **Always unplug the mixer before cleaning.**
- **Mixing Bowl and Attachments:** The stainless steel mixing bowl, dough hook, flat beater, and wire whisk are dishwasher safe. Alternatively, they can be washed by hand in warm soapy water, rinsed, and dried thoroughly.
- **Main Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or scourers. Never immerse the motor unit in water or any other liquid.
- **Storage:** Store the mixer and its accessories in a dry place, away from direct sunlight and out of reach of children.

7. TROUBLESHOOTING

If you encounter any issues with your mixer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mixer does not start	Not plugged in; power outlet not working; speed dial not set to a speed.	Ensure the mixer is properly plugged into a working outlet. Turn the speed dial to a setting other than '0'.
Attachment not mixing ingredients at the bottom of the bowl	Attachment not fully engaged or bowl not properly seated.	Ensure the mixing bowl is locked into place and the attachment is securely installed.
Mixer stops during operation	Overload protection activated; power interruption.	Unplug the mixer, remove some ingredients if overloaded, and let it cool down for 15-20 minutes before restarting. Check power supply.
Unusual noise or smell	Motor strain; new appliance smell; foreign object.	Reduce load if motor sounds strained. A slight odor is normal for new motors. If persistent or strong, discontinue use and contact customer support.

If the problem persists after attempting these solutions, please contact Homlee customer support.

8. SPECIFICATIONS

Detailed technical specifications for the Homlee Stand Mixer Model 1508:



Image 8.1: Dimensions and weight of the Homlee Stand Mixer.

Feature	Specification
Brand	Homlee
Model Number	1508
Power	1800 Watts
Capacity	7.2 Liters
Voltage	220 Volts
Number of Speeds	6 + Pulse Function
Material	Acrylonitrile Butadiene Styrene (ABS) for housing, Stainless Steel for bowl and some attachments
Noise Level	70 Decibels
Product Dimensions (L x W x H)	26.7 x 42.2 x 36 cm
Item Weight	5.6 Kilograms
Special Features	Pure copper high-performance motor, planetary mixing system, splash guard, non-slip feet, tilt-head design
Certifications	ITS GS / CE / CB / LFGB / ROHS / REACH

9. WARRANTY AND SUPPORT

Homlee products are manufactured to high-quality standards and have passed various certifications including ITS GS / CE / CB / LFGB / ROHS / REACH.

If you encounter any issues with the use of your Homlee Stand Mixer, please contact our customer service department immediately. Customer satisfaction is our priority.

Please refer to your purchase documentation for specific warranty terms and contact information.

© 2025 Homlee. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question