

Genius A17179

DR-HO'S MotionCiser Foot Massager User Manual

Model: A17179

INTRODUCTION

Thank you for choosing the DR-HO'S MotionCiser. This innovative foot massager combines vibration and heat functions to provide a soothing and relaxing experience. This manual provides important information on how to set up, operate, and maintain your MotionCiser for optimal performance and longevity. Please read it thoroughly before first use.



Image: The DR-HO'S MotionCiser foot massager unit with its accompanying remote control, showcasing its compact design and user-friendly interface.

PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x DR-HO'S MotionCiser Main Unit
- 1 x Power Adapter
- 1 x Remote Control
- 1 x User Manual (this document)

Im Set enthalten:

1 x Hauptgerät
1 x Ladekabel
1 x Fernbedienung



Image: A visual representation of the MotionCiser package contents, including the main unit, power adapter, and remote control.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain the packaging for future storage or transport.

2. **Placement:** Place the MotionCiser on a flat, stable surface in a comfortable seating area. Ensure there is enough space around the unit for proper ventilation.
3. **Power Connection:** Insert the power adapter cable into the DC input port located on the side of the MotionCiser unit. Plug the other end of the power adapter into a standard electrical outlet.
4. **Remote Control:** Ensure the remote control has batteries installed (if not pre-installed, refer to the battery compartment on the back of the remote).

OPERATING INSTRUCTIONS

Getting Started

Once the unit is plugged in, you can begin using your MotionCiser.

- Sit comfortably in a chair with your feet placed flat on the footpads of the MotionCiser.
- Press the **ON/OFF** button on the remote control or the main unit to power on the device. The display will illuminate.

Using the Remote Control

The remote control allows for convenient adjustment of settings:

- **Vibration Speed:** Use the + and - buttons under "Speed" to increase or decrease the vibration intensity. There are 10 speed levels available.
- **Heat Function:** Use the + and - buttons under "Degree of heat" to activate and adjust the heat therapy. The heat function operates between 30°C and 50°C.
- To turn off the device, press the **ON/OFF** button again.

Die praktische Fernbedienung des Motion Ciser Fußmassagegeräts erlaubt Ihnen eine komfortable Steuerung.

- ✓ Beim Fernsehen
- ✓ Beim Arbeiten
- ✓ Beim Zeitung lesen



Image: A user's feet resting on the MotionCiser footpads, demonstrating the proper usage position for the device.

Wellness und Fitness in einem Gerät!



Image: A close-up view of the MotionCiser's control panel and footpads, highlighting the heat function (30°C-50°C) and speed levels (1-10).



Image: Detailed view of the MotionCiser's control interface, showing the digital display and buttons for adjusting heat and speed settings.

MAINTENANCE

Cleaning

- Always unplug the MotionCiser from the power outlet before cleaning.
- Wipe the surface of the unit with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- Do not immerse the unit in water or any other liquid.

Storage

- Store the MotionCiser in a cool, dry place, away from direct sunlight and extreme temperatures.
- If storing for an extended period, it is recommended to place the unit back in its original packaging to protect it from dust and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Not plugged in correctly; Power outlet issue; Remote control batteries low.	Ensure power adapter is securely plugged into the unit and outlet. Test the outlet with another device. Replace remote control batteries.
No vibration.	Speed setting is too low or off; Internal malfunction.	Increase the vibration speed using the remote control. If the issue persists, contact customer support.
No heat.	Heat function is off; Internal malfunction.	Activate and increase the heat setting using the remote control. If the issue persists, contact customer support.
Remote control not responding.	Batteries are dead or incorrectly inserted; Obstruction between remote and unit.	Replace batteries, ensuring correct polarity. Remove any obstructions. Point remote directly at the unit.

SPECIFICATIONS

Feature	Detail
Model Number	A17179
Brand	Genius
Dimensions (L x W x H)	41 x 18 x 38 cm (16.1 x 7.1 x 15 inches)
Weight	3.75 kg (8.27 lbs)
Power Source	Electric
Material	Metal
Color	White (as per product image, though spec says Blanc.)
Special Feature	Easy to use, remote temperature adjustment
Heat Function Range	30°C - 50°C
Vibration Speed Levels	1-10



Image: Diagram illustrating the dimensions of the MotionCiser unit: 36 cm length, 33 cm width, and 12.5 cm height.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase documentation or visit the official Genius product website. Keep your proof of purchase for any warranty claims.

If you encounter any issues not covered in the troubleshooting section, please contact our customer service team for assistance.

