

[Manuals.plus](#) /

› [WINFLIKE](#) /

› WINFLIKE RM-C3231 Replacement Remote Control User Manual

WINFLIKE RM-C3231

User Manual: WINFLIKE RM-C3231 Replacement Remote Control

PRODUCT OVERVIEW

This manual provides comprehensive instructions for the WINFLIKE RM-C3231 Replacement Remote Control, specifically designed for various JVC LED TV models. This remote offers direct functionality without the need for complex programming, ensuring ease of use and immediate operation upon battery installation.





The RM-C3231 remote control features a standard layout with dedicated buttons for power, channel, volume, navigation, and streaming services like Netflix and YouTube.

SETUP GUIDE

Battery Installation

The RM-C3231 remote control requires two AAA batteries (not included). Follow these steps for proper installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.





The rear of the remote control houses the battery compartment, designed for easy access to insert or replace AAA batteries.

OPERATING INSTRUCTIONS

The RM-C3231 remote control is pre-programmed for compatible JVC LED TV models. No additional setup or programming is required. Simply insert batteries and begin operation.

Basic Functions

Button	Function
Power Button	Turns the television on or off.
Number Buttons (0-9)	Directly select channels.
Volume Up/Down (+/-)	Adjusts the television's volume level.
Channel Up/Down (P+/-)	Changes the television channel sequentially.
Mute Button	Silences or restores the television's audio.
Navigation Pad (Up/Down/Left/Right/OK)	Navigates through menus and confirms selections.
Menu Button	Accesses the television's main menu.
Back Button	Returns to the previous screen or menu.
Exit Button	Exits the current menu or application.
Netflix Button	Directly launches the Netflix application.
YouTube Button	Directly launches the YouTube application.
Colored Buttons (Red, Green, Yellow, Blue)	Perform specific functions depending on the television's current mode or application.





RM-C3231



The remote control features a clear layout of buttons, including a numeric keypad, volume and channel controls, navigation pad, and dedicated buttons for streaming services.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

Battery Care

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the device. Replace batteries when the remote's responsiveness decreases or it stops functioning.

TROUBLESHOOTING

Common Issues and Solutions

- **Remote not responding:**

Check if the batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with new AAA alkaline batteries.

Ensure there are no obstructions between the remote control and the television's infrared (IR) receiver.

Verify that the remote control is pointed directly at the television's IR receiver.

- **Buttons not working:**

Clean the remote control's surface, especially around the buttons, to remove any dirt or debris that might be obstructing them.

If only specific buttons are not working, the remote might be damaged. Consider replacing the remote.

- **Intermittent functionality:**

This often indicates low battery power. Replace the batteries.

Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the IR signal.

If issues persist after attempting these solutions, please refer to the Customer Support section.

TECHNICAL SPECIFICATIONS

Feature	Detail
Model Number	RM-C3231 (WL-RM-C3231-S1-210710)
Brand	WINFLIKE
Connectivity Technology	Infrared (IR)
Compatible Devices	JVC LED Televisions (Specific models listed below)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	8.7 x 2 x 0.6 inches (approx.)
Item Weight	2.11 ounces (approx.)
Special Features	Ergonomic, Lightweight, No Programming Required
Max Number of Supported Devices	1 (Designed for specific JVC TVs)

Compatible JVC TV Models

- LT-32C660
- LT-32C661(A)
- LT-32C670
- LT-43C870
- LT-43C775
- LT-40C755(C)
- LT-32C671
- LT-49C860
- LT-24C660(C)
- LT-24C661(C)
- LT-24C656
- LT-24C661
- LT-32C661
- LT-32C666
- LT-40C860
- LT-43C860
- LT-43C862
- LT-49C760
- LT-49C862
- LT-55C760
- LT-55C860
- LT-40C680
- LT-43C680
- LT-49C770

CUSTOMER SUPPORT

For any questions, concerns, or issues regarding your WINFLIKE RM-C3231 Replacement Remote Control, please contact our customer support team. We are committed to providing assistance and ensuring your satisfaction.

Please refer to the seller's contact information on the platform where the product was purchased for direct support.

While this product is designed for durability, please note that physical damage or misuse is not covered under standard support. Always ensure proper battery installation and storage.