

[Manuals.plus](#) /

> [EWO'S](#) /

> EWO'S XRT140 Universal Remote Control User Manual

## EWO'S XRT140

# EWO'S XRT140 Universal Remote Control User Manual

For All VIZIO Smart TV Remote Replacement

### Product Overview

The EWO'S XRT140 Universal Remote Control is designed as a direct replacement for various VIZIO Smart TV remotes. This product has been professionally inspected and tested to ensure it functions and appears like new. It offers seamless control over your VIZIO Smart TV, providing a reliable and user-friendly experience.





Image: Front and side view of the EWO'S XRT140 Universal Remote Control, showcasing its ergonomic design and button layout.

## Setup Guide

The EWO'S XRT140 remote control is designed for immediate use with compatible VIZIO Smart TVs. No pairing or programming is required.

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) 1.5V AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.

4. Close the battery compartment cover securely.

Once batteries are installed, the remote is ready to operate your VIZIO Smart TV.

## Operating Your Remote

This section details the functions of the buttons on your EWO'S XRT140 Universal Remote Control.



Image: Detailed diagram of the EWO'S XRT140 remote control, labeling each button with its corresponding function.

### Button Functions:

- **INPUT**: Change the currently displayed input source.
- **POWER ( )**: Turn the television ON or OFF.
- **VUDU**: Access VUDU channels.
- **NETFLIX**: Access Netflix channels.

- **prime video:** Access Prime Video channels.
- **XUMO:** Access XUMO channels.
- **hulu:** Access Hulu channels.
- **redbox:** Access Redbox channels.
- **MENU:** Display the settings menu.
- **WatchFree:** Access WatchFree channels (Note: May not be available in all regions, e.g., Canada).
- **INFO:** Display the info window.
- **OK / Play / Pause:** Select the highlighted menu option and play or pause content.
- **Navigation Buttons (Up/Down/Left/Right):** Navigate the on-screen menus.
- **Home Button (△):** Launch SmartCast Home or return to the SmartCast Home Screen.
- **BACK:** Go to the previous on-screen menu.
- **CC (Closed Caption):** Enable or disable closed captions. Long press to open Accessibility menu featuring captions, talkback, speech rate, and zoom mode.
- **VOL +/- (Volume Up/Down):** Increase or decrease the loudness of the audio.
- **PREV:** Return to the channel last viewed.
- **CH +/- (Channel Up/Down):** Change the channel.
- **MUTE ( ):** Turn the audio ON or OFF.
- **Number Pad (0-9):** Manually enter a channel number.
- **PIC:** Cycle through different picture setting modes. Long press to enable/disable talk back feature.
- **DASH (-):** Use with the number pad to manually enter a digital sub-channel (e.g., 18-4 or 18-5).

## Key Features

- **Instant Response:** This remote control boasts a quick transmission and response time of 0.2 seconds, ensuring minimal delay between your command and the TV's action.
- **Durable Buttons:** The buttons are rigorously tested to support over 150,000 clicks, providing long-lasting reliability.
- **Extended Range:** The remote transmits a signal effectively over long distances, up to 12 meters (40 feet), allowing for flexible viewing positions.
- **Premium Design:** Upgraded with a high-end glossy finish, the remote is made from durable ABS material, making it safe for use by children.
- **Dedicated Shortcut Buttons:** Features 7 convenient shortcut buttons for popular streaming services like VUDU, Netflix, Prime Video, XUMO, Hulu, and Redbox, plus a WatchFree button for quick access.

## KEY FEATURES

The EWO'S VIZIO TV Remote features 7 shortcut buttons for extra convenience.



Image: The EWO'S XRT140 remote control with its 7 shortcut buttons for streaming services highlighted, emphasizing convenience.

## High Flexibility

Fastest Response, the time is less than 0.5 second, and more than 11,000 clicks are available.



Image: A hand holding the EWO'S XRT140 remote, with text indicating its fast response time and high click durability.

## Long Distances

Our remote has been upgraded to give you a greater transmitting distance (over 40 ft) and a more stable performance.



Image: An illustration demonstrating the EWO'S XRT140 remote's ability to transmit signals over 40 feet, highlighting its long-distance capability.

## Compatibility

The EWO'S XRT140 Universal Remote Control is designed for broad compatibility with VIZIO Smart TVs and various VIZIO remote models.

### Compatible VIZIO TV Series:

- All VIZIO LED LCD HD UHD HDR Smartcast 4K 3D Smart TVs
- Including D-Series, E-Series, M-Series, P-Series, PX-Series, V-Series, and OLED-Series.

## Works with All VIZIO SmartCast TV models

### Including:

(D-Series, E-Series, M-Series, P-Series, PX-Series, V-Series, OLED-Series.)



Image: The EWO'S XRT140 remote alongside various VIZIO SmartCast TV models, illustrating its broad compatibility.

### Compatible VIZIO Remote Models:

The XRT140 is a universal remote control compatible with, but not limited to, the following VIZIO remote models:

- XRT112
- XRT122
- XRT302
- XRT135
- XRT510
- XRT500
- XRT100
- XRT136
- VR1
- VR2
- VR10



Image: The EWO'S XRT140 remote displayed next to several other VIZIO remote models, indicating its universal compatibility.

## Maintenance

Proper care and maintenance will extend the life of your remote control.

### Cleaning:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

### Battery Care:

- Replace batteries when the remote's performance degrades or it stops responding.
- Always replace both batteries at the same time with new ones of the same type (AAA).
- If the remote will not be used for an extended period (e.g., several weeks or months), remove the batteries to prevent leakage and potential damage to the remote.

## Troubleshooting

If you encounter issues with your remote control, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly inserted batteries	Replace batteries with new 1.5V AAA batteries, ensuring correct polarity.
Remote works intermittently	Low battery power; Obstruction between remote and TV; Remote sensor on TV is blocked.	Replace batteries. Ensure a clear line of sight between the remote and the TV's IR sensor. Remove any objects blocking the TV's sensor.
Specific buttons not working	Dirt or debris under the button; Button malfunction.	Clean the remote surface around the button. If the issue persists, the button may be faulty.
Remote range is reduced	Low battery power; Interference from other electronic devices.	Replace batteries. Move other electronic devices away from the TV or remote.

## Product Specifications

Specification	Detail
Brand	EWOS
Model	XRT140
Compatible Devices	Television (VIZIO Smart TVs)
Maximum Range	40 Feet (approx. 12 meters)
Battery Type	2 x AAA (not included)
Item Weight	2.39 ounces
Package Dimensions	8.19 x 3.66 x 0.83 inches
ASIN	B098YWCB68

Specification	Detail
UPC	656942198109
Date First Available	July 8, 2021

## Warranty and Support

As an Amazon Renewed product, the EWO'S XRT140 Universal Remote Control is backed by the Amazon Renewed Guarantee. This ensures that the product has been professionally inspected and tested to work and look like new. If you are not satisfied with your purchase, renewed products are eligible for replacement or refund under the Amazon Renewed Guarantee. Please refer to the Amazon Renewed program terms and conditions for specific details regarding returns, replacements, and refunds.

For further assistance or inquiries, please contact Amazon customer support or refer to the Amazon Renewed Store for more information.

**Amazon Renewed Store Link:** [Visit the Amazon Renewed Store](#)