

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FurReal](#) /

› [FurReal GoGo My Dancin' Pup Interactive Toy User Manual \(Model F1971\)](#)

FurReal F1971

FurReal GoGo My Dancin' Pup Interactive Toy User Manual

Model: F1971

INTRODUCTION

Welcome to the world of FurReal GoGo My Dancin' Pup! This interactive electronic pet is designed to provide engaging play with its dancing capabilities, sounds, and walking features. Please read this manual carefully to ensure proper setup and operation of your new companion.

SAFETY INFORMATION

- **WARNING:** Small parts may be generated. Not for children under 3 years.
- Always supervise children during play.
- Do not immerse the toy in water or other liquids.
- Use only the specified batteries. Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the toy will not be used for an extended period.

SETUP

Before your FurReal GoGo My Dancin' Pup can begin its adventures, follow these steps for initial setup:

1. **Battery Installation:** The toy requires 4 AA batteries, which are included. Locate the battery compartment on the underside of the pup. Use a Phillips head screwdriver to open the compartment, insert the batteries according to the polarity markings, and securely close the compartment.
2. **Switching On:** Locate the power switch near the battery compartment. Slide the switch to the 'ON' position. Ensure the toy is not in 'Try Me' mode, which may limit functionality.
3. **Attach Leash:** Connect the automatic leash accessory to the designated port on the pup's collar.



Image: FurReal GoGo My Dancin' Pup with its automatic leash accessory. The pup is white with blue eyes and a pink bow, sitting on a tiled floor.

OPERATING INSTRUCTIONS

Your FurReal GoGo My Dancin' Pup offers two primary modes of interaction via its leash:

- **Dancing Mode:** Press the **star button** on the leash. GoGo will stand up and perform various dance moves while playing one of its 5 different songs. Release the button to stop dancing.
- **Walking Mode:** Press the **paw print button** on the leash. GoGo will make happy pup sounds and walk forward with a bobbling head motion. Release the button to stop walking.
- **Sounds and Reactions:** GoGo features over 50 unique sounds and reactions, responding to interactions and button presses.



Image: A child's hand holds the turquoise leash controller, which has a purple star button and a pink paw print button, connected to the white FurReal GoGo pup.

Official Product Video



Video: An official product video from Hasbro Toys - Domestic, titled "furReal Friends - GoGo My Dancin' Pup". This video demonstrates the pup's dancing and walking features, showcasing its interactive capabilities and various sounds.

MAINTENANCE

- **Cleaning:** To clean your FurReal GoGo My Dancin' Pup, gently wipe the surface with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Do not submerge the toy in water.
- **Battery Replacement:** When the toy's functions become erratic or stop working, it's time to replace the batteries. Follow the battery installation steps in the Setup section.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use. Remove batteries if storing for an extended period.

TROUBLESHOOTING

If your FurReal GoGo My Dancin' Pup is not functioning as expected, please refer to the following common issues

and solutions:

Problem	Solution
Toy does not turn on or respond.	Check if the power switch is in the 'ON' position. Ensure batteries are correctly installed and are not depleted. Replace with fresh AA batteries if necessary.
Toy only performs limited actions or sounds.	Verify that the power switch is fully in the 'ON' position and not in 'Try Me' mode. Replace batteries if they are low.
Leash controller is not working.	Ensure the leash is securely connected to the pup's collar. Check if the pup itself has power.

SPECIFICATIONS

Feature	Detail
Product Dimensions	7.5 x 12 x 14 inches
Item Weight	3.41 pounds
Model Number	F1971
Recommended Age	4 years and up
Batteries	4 AA batteries (included)
Manufacturer	Hasbro
Sounds & Reactions	50+
Songs	5 Different Songs

WHAT'S IN THE BOX

- FurReal GoGo My Dancin' Pup
- Automatic Leash Accessory
- Instructions Manual

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Hasbro customer service. Details can typically be found on the product packaging or the official Hasbro website. Keep your purchase receipt as proof of purchase.