

Easytry123 Display Celsius Remote Control

Easytry123 Replacement Remote Control User Manual

For GREE Air Conditioners: GWC09KF-K3DNA5A, GWH12MB-K3DNA5I, GWH09MB-K3DNC8K, GWH12MB-K3DNA2K, GWH12MB-K3DNA3K, GWH12MB-K3DNA4K

[Setup](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

INTRODUCTION

This manual provides essential information for the proper use and care of your Easytry123 replacement remote control. This remote is designed to be compatible with specific GREE air conditioner models. Please ensure your air conditioner model is listed in the product title for proper functionality.

Important Note:

- This is a replacement remote control. It may not offer all functions present on your original remote.
- Batteries are not included with this product.
- Always verify compatibility with your air conditioner model before use.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating the correct orientation for inserting two AAA batteries (1.5V each).

Caution:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the remote control will not be used for an extended period.

OPERATING INSTRUCTIONS

This remote control is designed for ease of use. Once batteries are installed, point the remote control directly at the infrared receiver on your GREE air conditioner unit.

Basic Functions:

- **Power On/Off:** Press the **POWER** button to turn the air conditioner on or off.
- **Temperature Adjustment:** Use the **TEMP UP** (▲) and **TEMP DOWN** (▼) buttons to adjust the desired temperature. The display will show the set temperature in Celsius.
- **Mode Selection:** Press the **MODE** button to cycle through available operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **Fan Speed:** Use the **FAN** button to adjust the fan speed (e.g., Low, Medium, High, Auto).
- **Swing Function:** If available on your air conditioner model, the **SWING** button controls the louver movement.

Refer to your GREE air conditioner's original manual for detailed explanations of specific functions and modes.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote control's range decreases or it stops responding. Always replace both batteries at the same time.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote control from drops and impacts, which can damage its internal circuitry.

TROUBLESHOOTING

If you experience issues with your remote control, try the following steps:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote has short range.	Weak batteries. Obstruction between remote and AC unit.	Replace batteries. Ensure a clear line of sight to the AC unit's receiver.
Certain functions do not work.	This is a replacement remote; some advanced functions may not be supported. Incompatibility with AC model.	Verify your AC model is listed as compatible. Understand that some original functions may not be available.
Display is dim or blank.	Low batteries.	Replace batteries.

SPECIFICATIONS

- **Brand:** Easytry123
- **Model:** Replacement Remote Control
- **Compatible Devices:** GREE Air Conditioners (GWC09KF-K3DNA5A, GWH12MB-K3DNA5I, GWH09MB-K3DNC8K, GWH12MB-K3DNA2K, GWH12MB-K3DNA3K, GWH12MB-K3DNA4K)
- **Connectivity Technology:** Infrared
- **Power Source:** 2 x AAA Batteries (not included)
- **ASIN:** B0991S3RM3

SUPPORT AND WARRANTY

For further assistance or inquiries regarding your Easytry123 replacement remote control, please contact the seller directly through the platform where the purchase was made.

Warranty Information:

This product is typically covered by a standard return policy. Please refer to the specific return and refund policy of the retailer from whom you purchased this item for details on warranty coverage and returns.

Date First Available: July 9, 2021