

[Manuals.plus](#) /

› [Easytry123](#) /

› Easytry123 Universal Remote Control for Toyotomi Air Conditioners User Manual

Easytry123 Universal Remote Control

Easytry123 Universal Remote Control for Toyotomi Air Conditioners User Manual

Model Compatibility: HTN-12IV, KTN-09IV, KTN-12IV, KTN-18IV, GAN-A128GVR-T3, KTN-24IV, TAD-129E, HTN/HTG-09IV, HTN/HTG-12IV

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Easytry123 Universal Remote Control. This remote is designed as a replacement for various Toyotomi portable air conditioner models. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your remote control.

Important Note: This replacement remote may not support all advanced functions of your original unit. Verify compatibility with your specific air conditioner model before use.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the "OPEN" tab and lift to remove it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 2.1: Rear view of the remote control with the battery compartment open, illustrating the correct orientation for inserting two AAA batteries. The "OPEN" tab is visible on the cover.

2.2 Initial Use

After installing the batteries, the remote control is ready for use. Point the remote directly at the infrared receiver on your Toyotomi air conditioner unit.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control. Below is a general guide to common functions:



Figure 3.1: Front view of the Easytry123 universal remote control, showing the LCD display and an array of control buttons for various air conditioner functions.

Table 3.1: Remote Control Button Functions

Button	Function
OFF/ON	Powers the air conditioner unit on or off.
MODE	Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
+ / -	Adjusts temperature settings, timer settings, or other numerical values.
FAN	Adjusts fan speed (e.g., Low, Medium, High, Auto).
HEALTH	Activates or deactivates health-related functions (if supported by AC unit).
BLOW	Controls the air blow direction or swing function.
HUMIDITY	Activates or adjusts dehumidification settings.
TIME	Sets or adjusts the timer for automatic on/off operations.
TURBO	Activates maximum cooling/heating for rapid temperature change.
SLEEP	Activates sleep mode, which adjusts temperature for comfortable sleep.
Light/Display Icon	Toggles the display light or unit's indicator lights.

4. MAINTENANCE

4.1 Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these can damage the remote's finish or internal components.

4.2 Battery Replacement

Replace batteries when the remote's range decreases or the display becomes dim. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

5. TROUBLESHOOTING

Table 5.1: Common Issues and Solutions

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new ones, ensuring correct polarity.
Remote has short range or intermittent response.	Weak batteries; obstruction between remote and AC unit; remote not pointed correctly.	Replace batteries. Ensure clear line of sight to the AC unit's receiver. Point the remote directly at the unit.

Problem	Possible Cause	Solution
AC unit does not perform a specific function.	Function not supported by this replacement remote or the AC unit itself.	Confirm if the function was available with the original remote. This replacement remote may not support all advanced features.

6. SPECIFICATIONS

- **Model:** Universal Remote Control
- **Brand:** Easytry123
- **Compatible AC Brands:** Toyotomi
- **Compatible AC Models:** HTN-12IV, KTN-09IV, KTN-12IV, KTN-18IV, GAN-A128GVR-T3, KTN-24IV, TAD-129E, HTN/HTG-09IV, HTN/HTG-12IV
- **Power Source:** 2 x AAA Batteries (not included)
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic design

7. WARRANTY AND SUPPORT

For warranty information and customer support regarding your Easytry123 Universal Remote Control, please refer to the terms and conditions provided by your original retailer or contact the seller directly. This manual does not include specific warranty details or direct support contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question