

**XTREME DIGITAL LIFESTYLE ACCESSORIES MHV1-1050-BLK**

# Monster Image Mini Small Format LCD Projector

## USER MANUAL

### INTRODUCTION

The Monster Image Mini Small Format LCD Projector is designed for versatile projection needs, offering a compact and portable solution for home entertainment, business presentations, and educational purposes. With its ability to project up to 8 feet away and support screen sizes from 20 to 80 inches, this projector delivers a clear viewing experience. It supports a maximum resolution of 1920x1080 HD from a native 320x240 resolution, and features universal connectivity including HDMI, AV, USB, and SD inputs.

### WHAT'S IN THE Box

Carefully unpack all items from the box and ensure all components are present. If any items are missing or damaged, please contact customer support.

- Monster Image Mini Projector
- HDMI Cable
- Remote Control (batteries not included)
- Power Adapter
- User Manual (this document)



Image: The Monster Image Mini Projector packaging, showing the projector, remote, and included HDMI cable.

## PRODUCT OVERVIEW

The Monster Image Mini Projector is designed for portability and ease of use. Its compact form factor allows for easy transportation and setup in various environments.



Image: The Monster Image Mini Projector held in a person's hand, highlighting its small and portable size. The front lens and side vents are visible.



Image: The Monster Image Mini Projector positioned next to its remote control, showcasing the compact design of both devices.



Image: The Monster Image Mini Projector displayed with its various input ports (AV, USB, SD, HDMI) and an overview of its key specifications, including projection screen size (20"-80"), brightness (1000 lumens), and max display resolution (1080P).

## INITIAL SETUP

- Placement:** Position the projector on a stable, flat surface. Ensure there is adequate ventilation around the device. For optimal image quality, place the projector directly in front of your projection surface (wall or screen).
- Power Connection:** Connect the power adapter to the projector's DC IN port and then plug it into a power outlet. The power indicator light should illuminate.
- Connecting Input Devices:**
  - HDMI:** Connect the included HDMI cable from your source device (laptop, gaming console, streaming stick) to the projector's HDMI port.
  - USB/SD:** Insert a USB drive or SD card into the respective ports for media playback.
  - AV:** Use an AV cable (not included) to connect older devices to the AV port.

4. **Power On:** Press the power button on the projector or the remote control to turn on the device.
5. **Focus Adjustment:** Rotate the focus ring on the projector lens until the projected image appears clear and sharp.

## OPERATING INSTRUCTIONS

### Powering On/Off

- To power on, press the **Power** button on the projector or the remote control.
- To power off, press the **Power** button again. Confirm shutdown if prompted.

### Input Source Selection

After powering on, select your desired input source:

1. Press the **Source** button on the remote control or the projector's control panel.
2. Use the arrow keys to navigate through the input options (HDMI, AV, USB, SD).
3. Press **OK** to confirm your selection.

### Adjusting Projection

- **Focus:** Adjust the focus ring on the lens for a clear image.
- **Keystone Correction:** If the image appears trapezoidal, use the keystone correction feature (if available via menu settings) to square the image.
- **Image Size:** The projection size is determined by the distance between the projector and the screen. Move the projector closer or further away to achieve the desired screen size (20-80 inches).



Image: The Monster Image Mini Projector set up in a living room, projecting an image onto a wall, demonstrating its use in an indoor home environment.



Image: A group of people gathered outdoors at night, watching a movie projected onto a large screen, illustrating the projector's versatility for outdoor entertainment.

## Maintenance and Care

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for optical lenses to gently wipe the projector lens. Do not use abrasive cleaners or solvents.
- **Cleaning the Casing:** Wipe the projector's exterior with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth.
- **Ventilation:** Ensure the projector's ventilation openings are clear and not obstructed. Blocked vents can lead to overheating and affect performance.
- **Storage:** When not in use for extended periods, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to use the original packaging or a protective case.

## Troubleshooting

Problem	Possible Cause	Solution
No image projected	Power not connected; Incorrect input source; Lens cap on	Check power connection; Select correct input source; Remove lens cap
Image is blurry	Focus not adjusted; Projector too far/close	Adjust focus ring; Adjust projector distance
No sound	Volume too low; Incorrect audio output; Source device audio issue	Increase projector volume; Check source device audio settings; Ensure external speakers are connected if used
Remote control not working	Batteries low/dead; Obstruction between remote and projector	Replace batteries; Ensure clear line of sight to IR receiver
Projector overheats and shuts down	Blocked ventilation; Prolonged use	Ensure vents are clear; Allow projector to cool down; Use in a well-ventilated area

## TECHNICAL SPECIFICATIONS

Feature	Detail
Model Number	MHV1-1050-BLK
Display Resolution (Native)	320 x 240 pixels
Display Resolution (Max Supported)	1920 x 1080 HD pixels
Projection Screen Size	20 - 80 inches
Projection Distance	Up to 8 feet
Connectivity Technology	HDMI, USB, SD, AV
Item Weight	1.17 pounds
Color	Black
Special Feature	Lightweight

## WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, troubleshooting assistance, or warranty claims, please contact XTREME DIGITAL LIFESTYLE ACCESSORIES customer service. Contact information can typically be found on the product packaging or the brand's official website.

