

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Wahl](#) /

› [Wahl Manscaper® Total Body Grooming and Your Hair Down There Rechargeable Deluxe Hair Trimmer and Shaver with Safe-Touch Detachable Stainless Steel Precision Blades - Model 5708](#)

Wahl 5708

Wahl Manscaper® Total Body Grooming and Shaver Instruction Manual

Model: 5708

PRODUCT OVERVIEW

The Wahl Manscaper® is a versatile, rechargeable deluxe hair trimmer and shaver designed for total body grooming. It features Safe-Touch detachable stainless steel precision blades for gentle and effective hair removal. The device is waterproof, allowing for convenient wet or dry use, and includes an adjustable length dial for precise trimming.



Image: The Wahl Manscaper® trimmer shown with its main body, two trimming guards, and a shaver head, highlighting its versatility.

- **Safe-Touch Detachable Blades:** Engineered with ballpoint stainless steel blades that cut hair effectively while remaining gentle on the skin. Blades are detachable for easy cleaning and hygiene.
- **Wrap Around Safety Guards:** Includes two safety trimming guards that provide an extra layer of protection against nicks and cuts.
- **Adjustable Length Dial:** The guide comb features an adjustable dial, offering up to 39 total cutting lengths for customized grooming.
- **Dual Foil Shaver Head:** Equipped with dual flexible foils for light and detail shaving, designed to contour to the body's shape.
- **Waterproof Design:** Suitable for both wet and dry grooming, making it convenient for use in the shower and easy to clean.
- **Rechargeable Lithium-Ion Battery:** Provides long battery life for multiple grooming sessions and features an LED fuel gauge to indicate the current charge level.

Kit Contents

Your Wahl Manscaper® kit includes the following components:



Image: All components included in the Wahl Manscaper® kit, neatly arranged.

- Trimmer Head
- Short Wrap-Around Trimmer Guard
- Long Wrap-Around Trimmer Guard
- Shaver Head
- Shaver Head Guard
- Beard Brush
- Cleaning Brush
- Oil
- Charger

- Storage Pouch
- Instruction Book with Safety Sheet

SAFETY INFORMATION

Please read all safety instructions carefully before using the Wahl Manscaper® to ensure safe operation and prevent injury or damage to the device.

- Avoid submerging the device in water for extended periods. While waterproof for wet use, it is not designed for full submersion.
- Wipe off any remaining particles from the testing process before first use.
- Always clean and dry the device after use and store it in a dry place.
- Keep the device away from infants and children.
- Do not use the device on broken skin or irritated areas.
- Always follow the recommended cleaning and maintenance procedures outlined in this manual.
- Ensure the device is turned off before attaching or removing any guards or blades.

SETUP

Before first use, and periodically thereafter, follow these steps to set up your Manscaper®:

1. **Initial Charge:** Fully charge the device before using it for the first time. Connect the charger to the trimmer and plug it into a suitable power outlet. The LED fuel gauge will indicate charging progress.
2. **Attach Blades/Guards:** Ensure the device is turned off. Select the desired head (trimmer or shaver) and attach it securely. For trimming, choose either the short or long wrap-around trimmer guard and slide it onto the trimmer head.
3. **Adjust Length (Trimmer Head):** If using the trimmer head with a guard, adjust the length dial to your desired cutting length. The dial allows for 39 total cutting lengths.



Image: The trimmer's LED fuel gauge and charging port, indicating battery status and charging connection.

OPERATING INSTRUCTIONS

The Wahl Manscaper® is designed for efficient and comfortable grooming. Follow these steps for optimal results:

- 1. Preparation:** Decide whether you prefer wet or dry grooming. The Manscaper® is suitable for both. If wet grooming, you may wet the area to be groomed.
- 2. Power On:** Press the power button to turn on the device.
- 3. Trimming:**
 - For general body hair, attach the trimmer head with the appropriate guard and adjust the length dial.
 - For closer trimming or detailing, use the trimmer head without a guard or attach the detail trimmer head (if included).
 - Gently move the trimmer against the direction of hair growth for best results.

4. Shaving:

- Attach the dual foil shaver head for a close shave.
- Move the shaver gently over the skin, allowing the flexible foils to contour to your body.

5. **Waterproof Use:** The Manscaper® can be rinsed under running water for easy cleaning during or after use.

6. **Power Off:** After use, press the power button to turn off the device.



2 WRAP AROUND SAFETY TRIMMING GUARDS

the added guide provides a layer of protection of the skin from nicks & cuts. no pull, no pain guaranteed*

ADJUSTABLE LENGTH DIAL

each turn of the dial adjusts the guide comb to achieve up to 39 cutting lengths

cutting sizes between 0.5 - 20 mm

WAHL®
WET / DRY

10

*IF YOUR TRIMMER BLADES NICK, PULL, SNAG OR DON'T TRIM YOUR HAIR BETTER WITHIN THE FIRST YEAR, SIMPLY RETURN THE WAHL TRIMMER TO US WITH THE ORIGINAL RECEIPT FOR A REFUND.

Image: Close-up of the Manscaper® showing the adjustable length dial and the two wrap-around safety trimming guards.



WATERPROOF TRIMMER

MANSCAPER can be rinsed in the shower or at the sink for wet/dry grooming & easy clean-up

The Brand Used
By Professionals®

Image: The Manscaper® being rinsed under a faucet, demonstrating its waterproof capability for easy cleaning.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your Wahl Manscaper®:

1. **Cleaning Blades:** After each use, remove the trimmer or shaver head. Rinse the blades under running water to remove hair and debris. Use the cleaning brush to remove any stubborn particles.
2. **Oiling Blades:** To maintain blade sharpness and extend the life of your trimmer, apply a few drops of the included Wahl clipper oil to the blades after every few uses, especially after wet cleaning. Turn the trimmer on for a few seconds to distribute the oil.
3. **Cleaning the Unit:** Wipe the body of the trimmer with a clean, damp cloth. Do not use abrasive cleaners or solvents.
4. **Storage:** Ensure the trimmer is dry before storing. Store the Manscaper® and all its accessories in the

provided storage pouch in a cool, dry place, away from direct sunlight and extreme temperatures.

SAFE-TOUCH BALLPOINT STAINLESS STEEL BLADES

MANSCAPER blades easily cut through hair while gentle on your skin



Image: The detachable blades of the Manscaper®, illustrating the ease of removal for cleaning and maintenance.

TROUBLESHOOTING

If you encounter issues with your Wahl Manscaper®, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on or has low power.	Battery is not charged or is low.	Ensure the trimmer is fully charged. Check the LED fuel gauge. If the issue persists after charging, contact customer support.

Problem	Possible Cause	Solution
Blades pull hair or do not cut effectively.	Blades are dull, dirty, or not properly oiled.	Clean the blades thoroughly and apply a few drops of Wahl clipper oil. If blades are dull, they may need replacement.
Trimmer makes unusual noise.	Blades are not properly aligned or there is debris.	Turn off the trimmer, remove and reattach the blade head to ensure it is seated correctly. Clean any debris from the blade area.
Trimmer gets hot during use.	Extended use or lack of lubrication.	Allow the trimmer to cool down. Ensure blades are clean and properly oiled. Avoid continuous long grooming sessions.

If the problem persists after attempting these solutions, please refer to the Warranty and Support section for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Wahl
Model Number	5708
Power Source	Rechargeable Lithium Ion Battery (1 included)
Blade Material	Stainless Steel
Waterproof	Yes (Wet/Dry use)
Item Weight	0.54 Kilograms (1.19 Pounds)
Color	Black with Blue Accents
Recommended Use	Body Grooming
UPC	043917112978

WARRANTY AND SUPPORT

Wahl is committed to providing quality products and customer satisfaction. For any issues or support needs, please refer to the following:

- **Product Issues:** If you experience any issues with your Wahl Manscaper®, please reach out to Wahl directly. Contact information can typically be found on the product packaging and within the included instruction book.

- **Protection Plans:** Extended protection plans may be available for purchase. Please refer to your purchase details for more information on available plans.
- **Product Tutorials:** For additional guidance and "How To" tutorials, visit the official Wahl website: wahlusa.com. Navigate to the relevant product category for specific instructions and tips.
- **Manufacturer Information:** Wahl Clipper Corp. is a USA-based company dedicated to providing high-quality products and service.