

[Manuals.plus](#) /

› [Hape](#) /

› Hape DJ Mix & Spin Studio Musical Toy Instruction Manual

Hape E8621

Hape DJ Mix & Spin Studio Instruction Manual

Model: E8621

INTRODUCTION

This manual provides essential information for the safe and effective use of your Hape DJ Mix & Spin Studio Musical Toy. Please read it thoroughly before use and retain it for future reference.



Image: The Hape DJ Mix & Spin Studio Musical Toy in blue, showcasing its compact design and various interactive elements.

SAFETY INFORMATION

Before allowing a child to play with the toy, ensure all packaging materials are removed. Keep all relevant information, including this manual, for future reference. This toy is designed for children aged 12 months and up.

WHAT'S IN THE BOX

- Hape DJ Mix & Spin Studio Musical Toy



Image: The retail packaging for the Hape DJ Mix & Spin Studio, indicating the product contents.

SETUP

Battery Installation

The Hape DJ Mix & Spin Studio requires 3 AA batteries (not included). To install or replace batteries:

1. Locate the battery compartment on the underside of the toy.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 3 AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Initial Setup

Once batteries are installed, the toy is ready for use. Ensure the power switch is in the "On" position.



Image: The Hape DJ Mix & Spin Studio shown with its accompanying songbook and key stickers, which can be applied to the piano keys for learning.

OPERATING INSTRUCTIONS

The Hape DJ Mix & Spin Studio offers various interactive features for musical exploration.

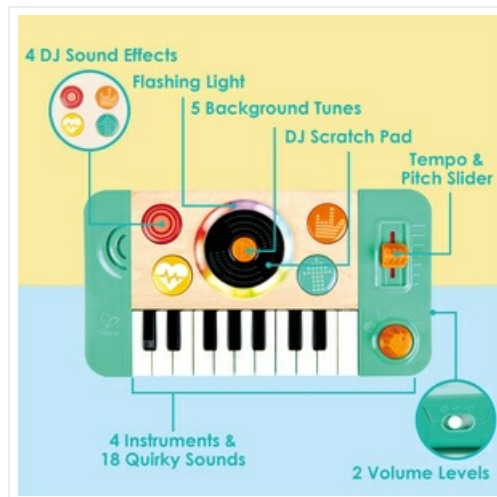


Image: A diagram highlighting the various interactive components of the DJ Mix & Spin Studio, including the keyboard, DJ scratch pad, tempo slider, and sound effect buttons.

Keyboard Play

- **Solo Play:** Play the keyboard keys individually to create melodies.
- **Instrument Sounds:** Turn the designated knob to select one of four different instrument sounds.
- **Sound Effects:** Access 18 fun sound effects by turning the same knob.

Background Tunes and Tempo Control

- **Background Tunes:** Press the button located in the middle of the studio to select one of five pre-recorded background tunes.
- **Tempo Adjustment:** Use the tempo slider to increase or decrease the speed of the background tunes.

DJ Effects

- **DJ Sound Effects:** Press the various buttons on the console to add different DJ sound effects to your music.
- **Scratching:** Utilize the black record pad to create scratching effects, mimicking a real DJ turntable.





Image: A child engaging with the Hape DJ Mix & Spin Studio, demonstrating active play with the toy's features.

MAINTENANCE

- **Cleaning:** Wipe the toy with a soft, damp cloth. Do not immerse in water.
- **Storage:** Store the toy in a dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toy does not turn on or has no sound.	Batteries are low or incorrectly installed.	Check battery polarity. Replace with new AA batteries. Ensure power switch is "On".
Sound is distorted or intermittent.	Low batteries or internal connection issue.	Replace batteries. If problem persists, contact customer support.

SPECIFICATIONS

Model Number: E8621

Product Dimensions: 13.4 x 7.3 x 1.7 inches

Item Weight: 1.79 pounds

Recommended Age: 12 months and up

Batteries: 3 AA batteries (not included)

Manufacturer: Hape

Release Date: July 9, 2021

WARRANTY AND SUPPORT

For warranty information or technical support, please visit the official Hape website or contact their customer service department. Refer to the product packaging for specific contact details or visit [the Hape Store on Amazon](#).

