

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Oster](#) /

› [Oster 4134 3-Speed Chrome Retro Blender User Manual](#)

## Oster 4134

# Oster 4134 3-Speed Chrome Retro Blender User Manual

Model: 4134 | 220-Volt Operation

## IMPORTANT SAFEGUARDS

**Please read all instructions carefully before using this appliance. Failure to follow these safeguards may result in electric shock, fire, or serious injury.**

- This appliance operates on 220-volt AC power only. Do not attempt to use it with 110-volt power sources.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## PRODUCT OVERVIEW

The Oster 4134 Blender features a classic retro design with a powerful motor and durable components for efficient blending.



Image: The Oster 4134 Chrome Retro Blender, showcasing its blue base, chrome accents, and 5-cup glass jar assembled on top of the motor base.

## Components:

- **Motor Base:** Houses the 600-watt motor and 3-speed toggle switch. Features an exclusive all-metal drive system.
- **5-Cup Glass Jar:** Dishwasher safe and scratch resistant.
- **Lid:** Fits securely on the glass jar.
- **Filler Cap:** Removable cap in the lid for adding ingredients during blending.
- **Blade Assembly:** Revolutionary cutting stainless steel blades.
- **Sealing Gasket:** Ensures a leak-proof seal between the blade assembly and the jar.

## SETUP

---

Before first use, wash the glass jar, lid, filler cap, and blade assembly in warm, soapy water. Rinse thoroughly and dry. The glass jar is dishwasher safe.

1. **Assemble the Blade:** Place the sealing gasket onto the blade assembly. Ensure it is seated correctly.
2. **Attach Blade to Jar:** Invert the glass jar and place the blade assembly with the gasket into the opening at the bottom of the jar. Twist the blade assembly clockwise until it is securely tightened.
3. **Place Jar on Base:** Place the assembled glass jar onto the motor base. Ensure it is seated firmly and correctly aligned.
4. **Secure the Lid:** Place the lid onto the glass jar and insert the filler cap into the lid opening.
5. **Connect Power:** Plug the 220-volt power cord into a suitable 220-volt electrical outlet.

## OPERATING INSTRUCTIONS

---

The Oster 4134 Blender features a simple 3-speed toggle switch for easy operation.

1. **Add Ingredients:** Place your desired ingredients into the glass jar. Do not fill past the maximum fill line. For best results, add liquids first, then soft ingredients, and finally harder ingredients or ice.
2. **Secure Lid:** Ensure the lid and filler cap are securely in place before operating.
3. **Select Speed:** Use the toggle switch on the motor base to select your desired speed:
  - **LOW:** For lighter mixing, stirring, or pureeing.
  - **MEDIUM:** For general blending, mixing, and chopping.

- **HIGH:** For heavy blending, crushing ice, or making smoothies.

- Blend:** Toggle the switch to the desired speed. Blend until the desired consistency is achieved.
- Add Ingredients During Blending:** If needed, remove the filler cap and add ingredients while the blender is running on a low speed. Replace the filler cap immediately.
- Stop Blending:** Toggle the switch to the 'OFF' position.
- Remove Jar:** Carefully lift the glass jar from the motor base.
- Pour:** Remove the lid and pour your blended mixture.

## Blending Tips:

- Do not overfill the jar.
- For thick mixtures, use the pulse function (if available, or short bursts on high speed) to prevent motor strain.
- Cut large fruits and vegetables into smaller pieces before blending.
- Avoid blending hot liquids in large quantities, as steam can build up pressure. If blending hot liquids, fill the jar only halfway and hold the lid firmly with a cloth.

## CARE AND MAINTENANCE

---

Proper care ensures the longevity and performance of your Oster blender.

- Unplug:** Always unplug the blender from the electrical outlet before cleaning.
- Disassemble:** Remove the glass jar from the motor base. Unscrew the blade assembly from the bottom of the jar. Remove the lid and filler cap.
- Clean Jar, Lid, and Blade:** Wash the glass jar, lid, filler cap, and blade assembly in warm, soapy water. Rinse thoroughly. The glass jar is dishwasher safe. For stubborn residue, a brush may be used.
- Clean Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
- Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing.
- Storage:** Store the blender in a clean, dry place. You can store it assembled or disassembled.

## TROUBLESHOOTING

---

If you encounter issues with your blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet issue; motor overload.	Ensure the blender is securely plugged into a 220-volt outlet. Check if the outlet is working. Unplug, wait 15 minutes for motor to cool, then try again.
Ingredients are not blending smoothly.	Too little liquid; jar overfilled; ingredients too large.	Add more liquid. Do not overfill the jar. Cut ingredients into smaller pieces. Use a higher speed.
Blender leaks from the bottom of the jar.	Blade assembly not tightened; gasket missing or improperly seated.	Ensure the blade assembly is securely tightened to the jar. Check that the sealing gasket is correctly placed on the blade assembly.
Unusual noise or odor.	Motor strain; foreign object; internal issue.	Stop blending immediately. Unplug the unit. Check for any obstructions. If the issue persists, discontinue use and contact customer support.

## SPECIFICATIONS

---

- **Model Number:** 4134
- **Brand:** Oster
- **Power:** 600 Watts
- **Voltage:** 220 Volts (Not for USA - European Cord)
- **Number of Speeds:** 3
- **Jar Capacity:** 5 Cups
- **Jar Material:** Glass
- **Blade Material:** Stainless Steel
- **Drive System:** All-Metal Drive
- **Product Dimensions:** Approximately 13.5 x 6.5 x 9.5 inches
- **Item Weight:** Approximately 8.58 pounds

## WARRANTY AND SUPPORT

---

Oster products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Oster website for your region.

If you require technical assistance, replacement parts, or have questions not covered in this manual, please contact Oster customer support. Contact details can typically be found on the product packaging or the official brand website.