



[Manuals.plus](#) /

> [APROMOOM](#) /

> APROMOOM Black Shower Head and Faucet Set User Manual

APROMOOM 77B707R

APROMOOM Black Shower Head and Faucet Set User Manual

Model: 77B707R

1. INTRODUCTION

Thank you for purchasing the APROMOOM Black Shower Head and Faucet Set. This manual provides detailed instructions for the proper installation, operation, and maintenance of your new shower system. Please read this manual thoroughly before installation and keep it for future reference.



Image 1.1: Overview of the APROMOOM Black Shower Head and Faucet Set, showing the rain shower head, single lever handle, and the included valve.



Image 1.2: The APROMOOM Black Shower Head and Faucet Set installed in a contemporary bathroom setting, demonstrating its aesthetic integration.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Always turn off the main water supply before beginning any installation or maintenance.
- Wear appropriate personal protective equipment, such as safety glasses and gloves, during installation.
- Ensure all connections are secure and watertight to prevent leaks.
- Do not use abrasive cleaners or harsh chemicals on the finish, as this may damage the product.
- If you are unsure about any part of the installation process, consult a qualified plumber.

3. INCLUDED COMPONENTS

The APROMOOM Black Shower Head and Faucet Set includes the following components:

- 6-inch Stainless Steel Rain Shower Head
- Single Lever Handle Trim Kit
- Brass Rough-in Valve
- Shower Arm
- Mounting Hardware

Note: This kit does not include a bathtub faucet. The APROMOOM shower faucet includes its own valve and is not compatible with handles from other brands such as DELTA, MOEN, or KOHLER. Please verify compatibility before purchase.

APROMOOM shower faucet included its own valve, and it do not fit any other handles from DELTA, MOEN OR KOHLER, please re check before purchase.


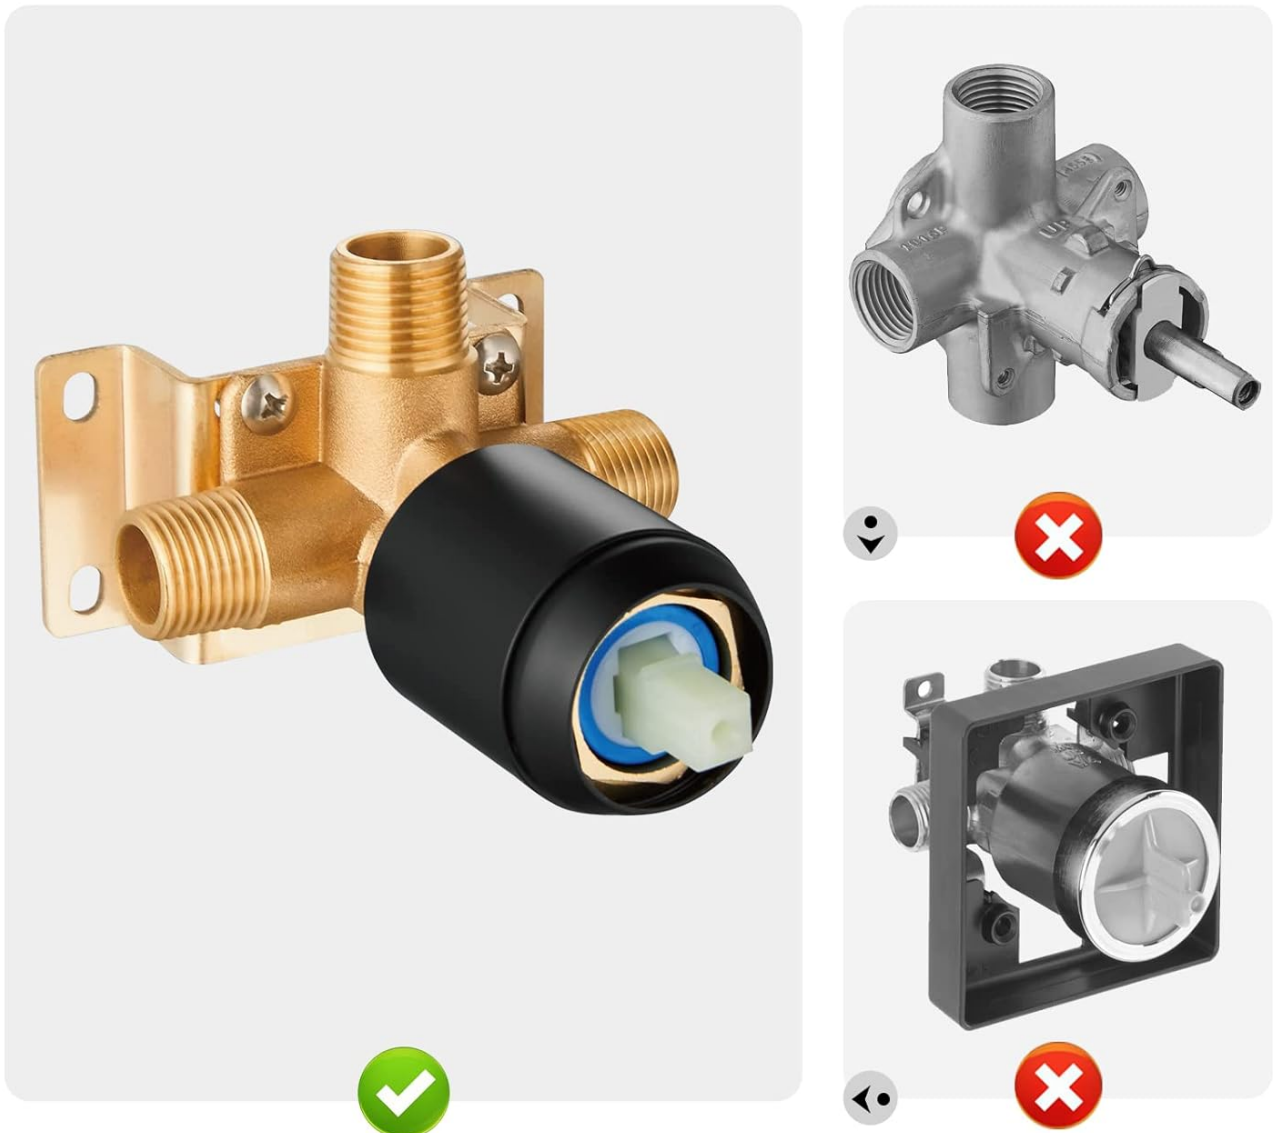


Image 3.1: Diagram illustrating the unique APROMOOM valve and its incompatibility with other brand's handles (e.g., DELTA, MOEN, KOHLER).

4. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	APROMOOM
Model Number	77B707R
Color	Black shower faucet with valve
Material	Metal (Brass body for valve, SUS304 for shower head)
Finish Type	Painted (Matte Black)
Number of Handles	1
Mounting Type	Wall Mount
Head Size	6 inch (Circular)
Product Dimensions	11 x 7.3 x 6 inches
Item Weight	3.01 pounds
Thread Type	1/2" NPT (Standard in USA)

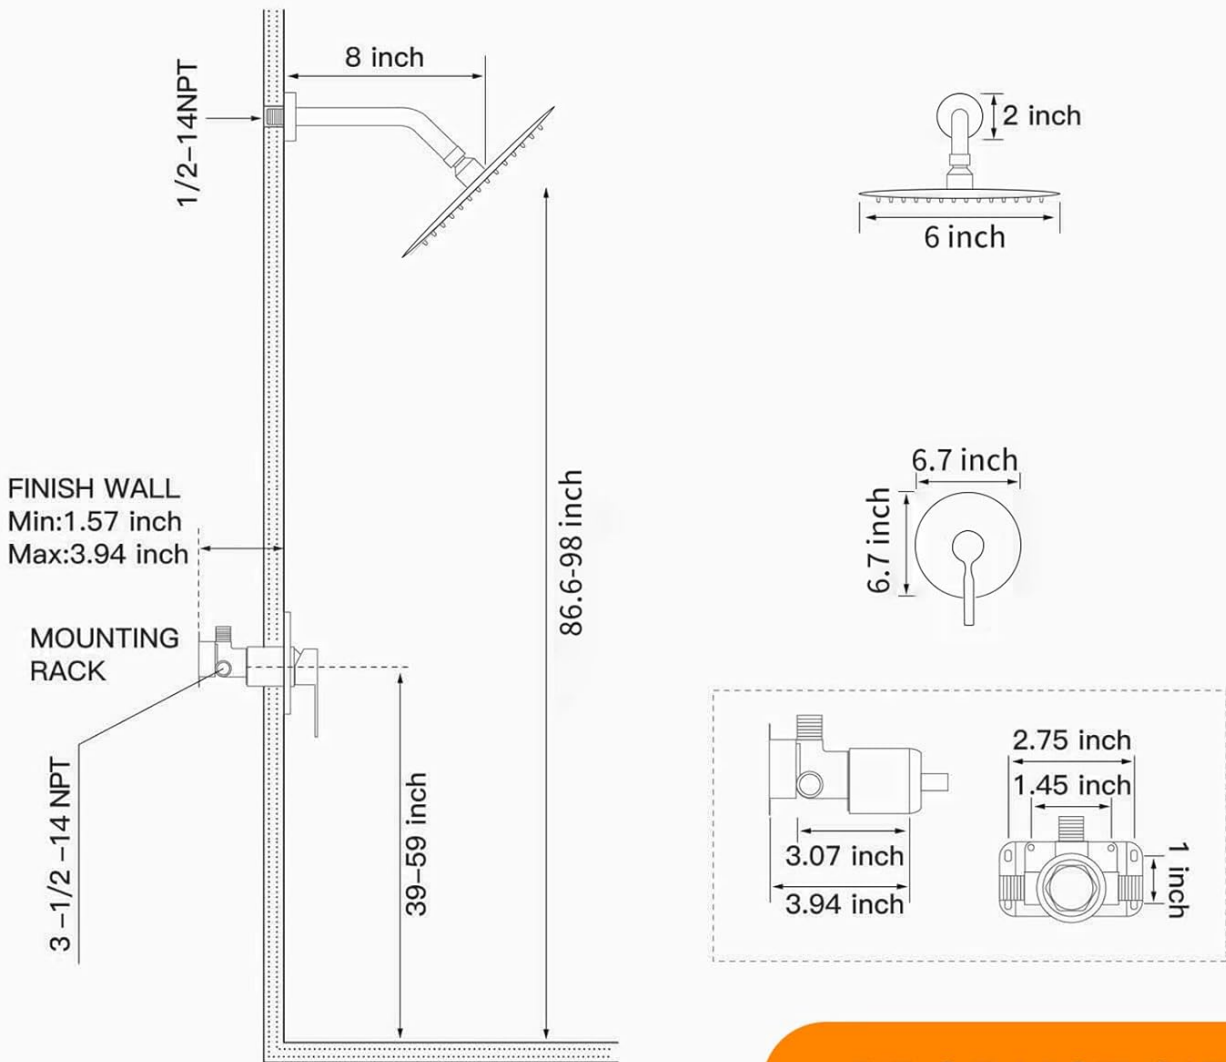

PRODUCT SIZE

Image 4.1: Detailed product dimensions and installation measurements for the APROMOOM shower system components.

5. INSTALLATION INSTRUCTIONS

This shower system is designed for wall-mounted installation with standard 1/2" NPT plumbing connections. Professional installation is recommended.

5.1 Before You Begin

- Ensure all necessary components are present (refer to Section 3).
- Turn off the main water supply to your bathroom.
- Clear the installation area and protect surrounding surfaces.
- Gather necessary tools: adjustable wrench, pipe sealant tape, screwdriver, level, measuring tape.

5.2 Valve Installation

The brass rough-in valve is the core of the system. It can be installed with or without the metal support bracket, affecting

the depth of the buried wall. Ensure the valve is securely mounted and level within the wall cavity.



Image 5.1: Diagram showing installation options for the brass rough-in valve, with and without the metal support bracket, and corresponding wall depth requirements.

1. Connect the hot and cold water lines to the corresponding inlets on the valve (typically marked H for hot, C for cold).
2. Connect the outlet to the shower arm pipe.
3. Use pipe sealant tape on all threaded connections to ensure a watertight seal.
4. Secure the valve to the wall studs or blocking using appropriate fasteners.
5. Perform a leak test by slowly turning on the water supply to the valve and checking for any drips or leaks.

5.3 Shower Head and Handle Trim Installation

1. Screw the shower arm into the wall connection, ensuring it is securely tightened.
2. Attach the 6-inch rain shower head to the shower arm. The shower head is angle adjustable.
3. Install the trim plate and handle onto the valve according to the manufacturer's instructions, ensuring proper alignment and secure fastening.

6. OPERATING INSTRUCTIONS

The APROMOOM shower system features a single lever handle for controlling both water flow and temperature.

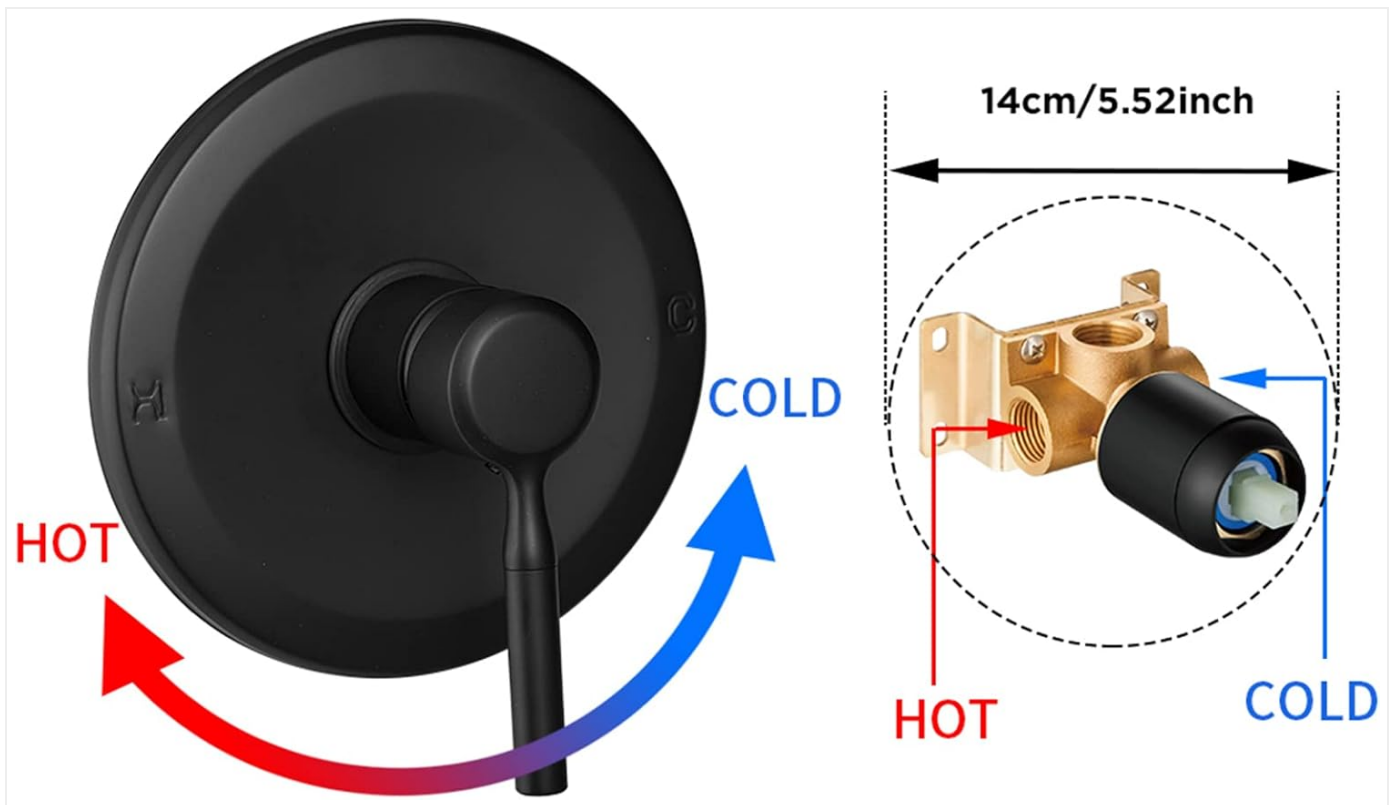


Image 6.1: Illustration of the single lever handle operation, showing movement for hot and cold water control.

- **To Turn On/Off:** Lift the handle upwards to turn on the water flow. Push the handle downwards to turn off the water flow.
- **To Adjust Temperature:** Rotate the handle to the left for hotter water and to the right for colder water.
- **Water Pressure:** The system is designed for high-pressure rain shower experience. Water pressure can be adjusted by the degree to which the handle is lifted.

7. CARE AND MAINTENANCE

Proper care and maintenance will ensure the longevity and performance of your APROMOOM shower system.

7.1 Cleaning the Finish

- Clean the matte black finish with a soft, damp cloth.
- For stubborn spots, use a mild soap and water solution.
- Rinse thoroughly with clean water and dry with a soft cloth to prevent water spots.
- **Do NOT** use abrasive cleaners, harsh chemicals, or scouring pads, as these will damage the finish.

7.2 Cleaning the Shower Head Nozzles

The shower head features self-cleaning silicone nozzles to prevent mineral buildup.



Image 7.1: Close-up of the APROMOOM shower head, highlighting its angle-adjustable and self-cleaning silicone nozzles.

- Periodically rub the silicone nozzles with your finger or a soft brush to dislodge any mineral deposits.
- For heavy buildup, a solution of white vinegar and water can be used. Soak the shower head (if removable) or apply the solution to the nozzles, then scrub and rinse.

8. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Low Water Pressure	Clogged shower head nozzles; partially closed shut-off valve; low household water pressure.	Clean shower head nozzles (refer to Section 7.2); ensure shut-off valves are fully open; consult a plumber if household pressure is consistently low.

Problem	Possible Cause	Solution
Leaking from Shower Head	Loose connection; damaged washer/seal; mineral buildup.	Tighten connection between shower head and arm; inspect and replace any damaged washers/seals; clean mineral buildup from nozzles.
Leaking from Handle/Valve	Loose connections; damaged O-rings or cartridge.	Ensure all valve connections are tight; if leaking persists, the internal cartridge or O-rings may need replacement. Contact customer support.
Water Temperature Issues	Incorrect hot/cold line connection; faulty valve cartridge.	Verify hot and cold lines are connected correctly to the valve; if issues persist, the valve cartridge may need inspection or replacement.

9. WARRANTY INFORMATION

APROMOOM provides a manufacturer's warranty for 90 days from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, misuse, abuse, or normal wear and tear. Please retain your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, require technical assistance, or need to make a warranty claim, please contact APROMOOM customer support. We are committed to ensuring your satisfaction.

For support, please refer to the contact information provided on the product packaging or the official APROMOOM website. You can also send an email to the address provided with your purchase details.

We stand by our product and are ready to assist you at any time.

