

Manuals.plus /

› NKF /

› NKF Replacement Remote Control User Manual for X88 Pro S Android TV Box and H96 Series

NKF X88 Pro S Remote

NKF Replacement Remote Control User Manual

For X88 Pro S Android TV Box and H96 Series Models

1. INTRODUCTION

This manual provides comprehensive instructions for the NKF Replacement Remote Control. This infrared (IR) remote is designed to operate specific Android TV Box models without the need for programming or pairing. Please read this manual carefully to ensure proper setup and operation of your remote control.

2. COMPATIBLE MODELS

This replacement remote control is compatible with the following Android TV Box models:

- X88 Pro S Android TV Box 10.0
- H96 Series: H96 Mini, H96 Max, H96 Max X2, H96 Max X3, H96 Max+, H96 Max Plus RK3318, H6 Allwinne

3. SETUP: BATTERY INSTALLATION

The remote control requires two (2) 1.5V AAA alkaline batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two new 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use. No programming or pairing is required.

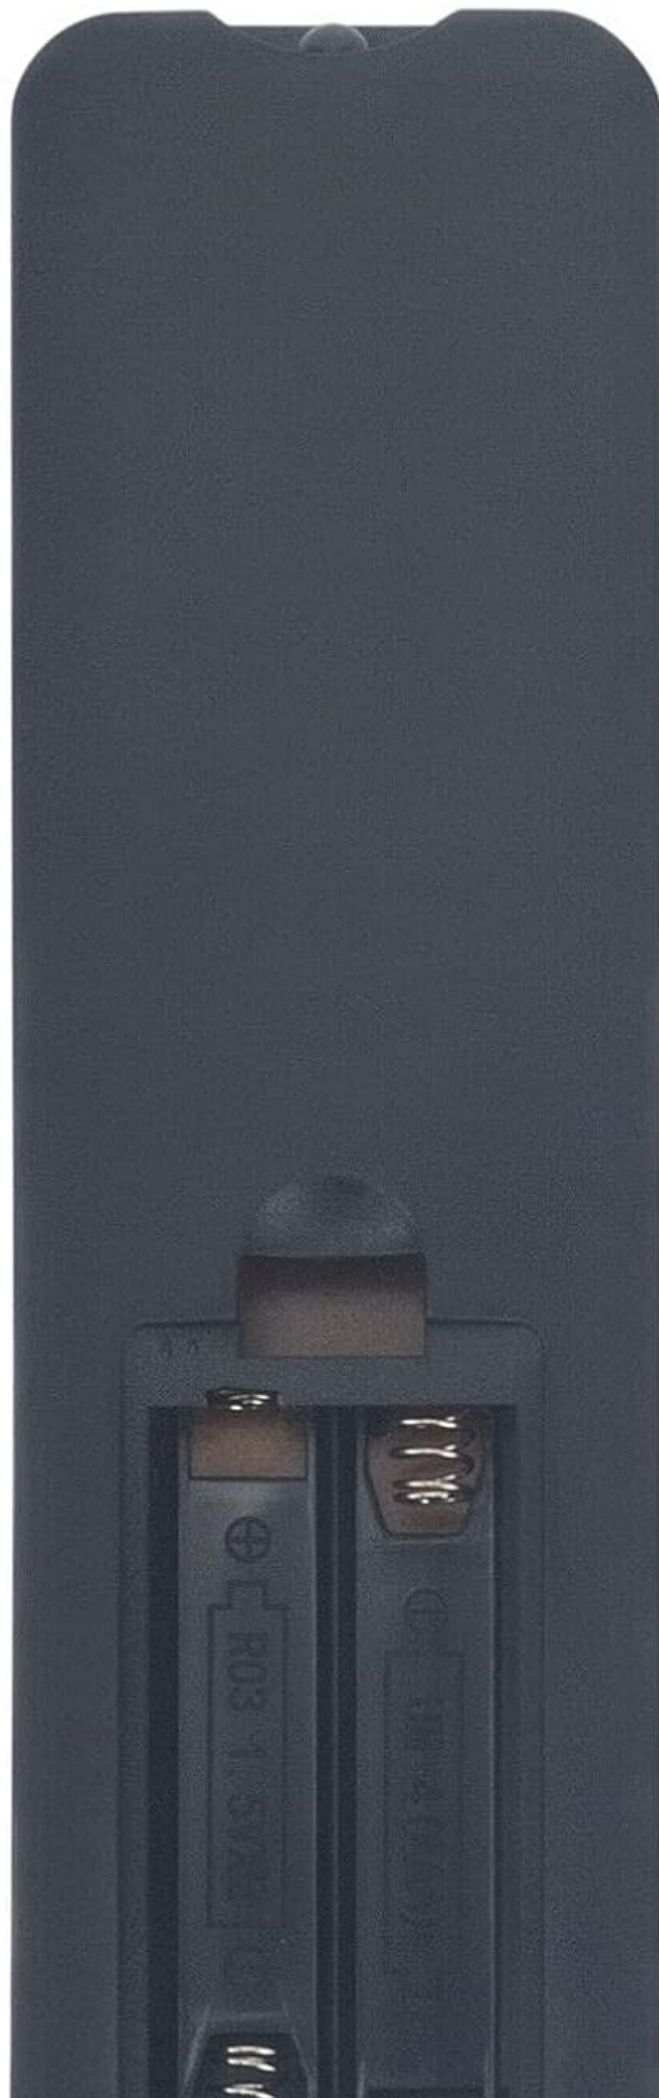




Figure 1: Rear view of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

4. OPERATION

This remote control functions as a direct replacement for your original Android TV Box remote. Point the remote control directly at your TV Box and press the desired buttons.



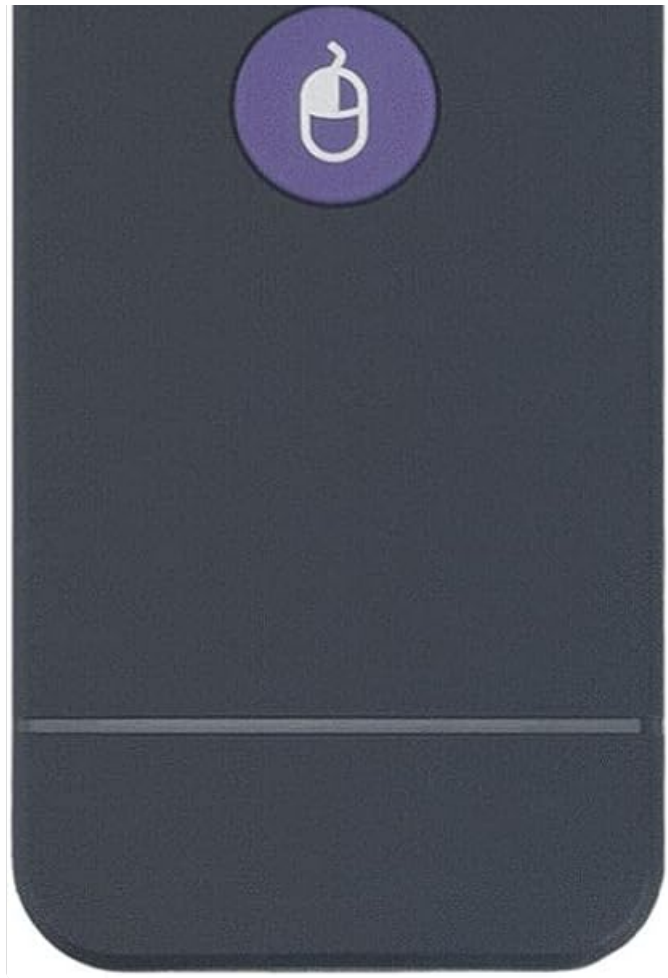


Figure 2: Front view of the remote control, displaying the layout of all functional buttons.

4.1 Button Functions

- **Power Button** (⏻): Turns the TV Box on or off.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Used to navigate menus and select items.
- **Back Button** (⏪): Returns to the previous screen or menu.
- **Home Button** (△): Returns to the main home screen.
- **Menu Button** (☰): Accesses context-sensitive menus or options.
- **Volume Up/Down** (/): Adjusts the volume.
- **Mouse Mode Button** (⌨): Activates/deactivates mouse pointer mode (if supported by the TV Box).

5. MAINTENANCE

5.1 Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely that the batteries need to be replaced. Follow the battery installation steps in Section 3 to replace the old batteries with new 1.5V AAA alkaline batteries.

Note: Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.

5.2 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the remote's surface or internal components.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	<ul style="list-style-type: none">• Dead or incorrectly installed batteries.• Obstruction between remote and TV Box.• Remote is out of range.	<ul style="list-style-type: none">• Replace batteries with new 1.5V AAA alkaline batteries, ensuring correct polarity.• Remove any objects blocking the line of sight between the remote and the TV Box.• Ensure you are within a reasonable operating distance (typically up to 20 feet) and pointing the remote directly at the TV Box.
Some buttons not working.	<ul style="list-style-type: none">• Low battery power.• Button malfunction.	<ul style="list-style-type: none">• Replace batteries.• If problem persists, contact customer support.

7. SPECIFICATIONS

- **Brand:** NKF
- **Model:** X88 Pro S Remote
- **Compatibility:** X88 Pro S Android TV Box 10.0, H96 Series (H96 Mini, H96 Max, H96 Max X2, H96 Max X3, H96 Max+, H96 Max Plus RK3318, H6 Allwinne)
- **Power Supply:** 2 x 1.5V AAA Alkaline Batteries (not included)
- **Dimensions:** 6 x 1.8 x 0.6 inches (approximately)
- **Item Weight:** 2 ounces (approximately)
- **Color:** Black
- **Connectivity Technology:** Infrared (IR)

8. CUSTOMER SUPPORT

For any questions, concerns, or issues regarding your NKF Replacement Remote Control, please contact our customer support team. We are committed to resolving any problems you may encounter. Please refer to your purchase platform or product packaging for specific contact information.