

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Baseus](#) /

› [Baseus Shark One H-505 Cordless Car Vacuum Cleaner User Manual](#)

## Baseus H-505

# Baseus Shark One H-505 Cordless Car Vacuum Cleaner User Manual

Model: H-505

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Baseus Shark One H-505 Cordless Car Vacuum Cleaner. Please read this manual thoroughly before first use and retain it for future reference.

## SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance, including the following:

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust bag and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.

## PACKAGE CONTENTS

---

Verify that all items are present and in good condition upon opening the package.

- Baseus Shark One H-505 Cordless Car Vacuum Cleaner (1 unit)
- Accessory Set (various nozzles and brushes) (1 set)
- Carry Bag (1 unit)
- Wall Charger (1 unit)



Image: The Baseus Shark One H-505 Cordless Car Vacuum Cleaner packaged in its retail box.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your vacuum cleaner.



Image: The Baseus Shark One H-505 vacuum cleaner shown with its various attachments (brush nozzle, crevice tool, extension hose) and the wall charger.

- **Main Unit:** Handheld vacuum body with integrated dustbin and motor.
- **Power Switch:** Located on the handle for turning the unit on/off.
- **Dustbin Release Button:** For detaching the dustbin for emptying.
- **Filter:** Washable filter located inside the dustbin.
- **Charging Port:** For connecting the wall charger.
- **LED Indicator:** Shows charging status.
- **Front Light:** Illuminates the cleaning area.
- **Accessories:** Includes various nozzles (e.g., brush, crevice tool) for different cleaning tasks.

## SETUP

### 1. Initial Charging

1. Before first use, fully charge the vacuum cleaner.
2. Connect the wall charger to the charging port on the vacuum cleaner.
3. Plug the charger into a standard electrical outlet (100-240V, 50Hz).
4. The LED indicator will show the charging status. A full charge typically takes 3-4 hours.
5. Once fully charged, disconnect the charger.

### 2. Attaching Accessories

- Select the appropriate nozzle or brush for your cleaning task.
- Align the accessory with the vacuum's suction opening and push firmly until it clicks into place.
- To remove, pull the accessory straight off.

## OPERATING INSTRUCTIONS

## 1. Power On/Off

- To turn on the vacuum cleaner, slide the power switch to the "ON" position.
- To turn off, slide the power switch to the "OFF" position.

## 2. Cleaning

- Hold the vacuum cleaner by the handle and direct the nozzle towards the area to be cleaned.
- Use the brush attachment for upholstery, carpets, and to dislodge stubborn dirt.
- Use the crevice tool for tight spaces, corners, and between seats.
- The integrated front light can be activated to illuminate dark areas, such as under seats or in footwells.
- The vacuum is designed for dry debris only. Do not attempt to vacuum liquids.

## 3. Battery Runtime

A fully charged battery provides approximately 20-22 minutes of continuous operation. Recharge the unit when suction power decreases or the LED indicator signals low battery.

## MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

### 1. Emptying the Dustbin

1. Ensure the vacuum cleaner is turned off.
2. Press the dustbin release button and detach the dustbin from the main unit.
3. Carefully remove the filter assembly from the dustbin.
4. Empty the contents of the dustbin into a waste receptacle.

### 2. Cleaning the Filter

- The filter is washable. Tap the filter gently to remove loose dust.
- Rinse the filter under cool running water until clean. Do not use detergents.
- Allow the filter to air dry completely before reinserting it into the dustbin. Do not use the vacuum with a wet filter.
- Replace the filter assembly into the dustbin, then reattach the dustbin to the main unit, ensuring it clicks securely.

### 3. Storage

Store the vacuum cleaner and its accessories in the provided carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the vacuum cleaner fully.
	Power switch is off.	Ensure the power switch is in the "ON" position.
Low suction power.	Dustbin is full.	Empty the dustbin.

Problem	Possible Cause	Solution
	Filter is clogged.	Clean or replace the filter. Ensure it is completely dry before reinserting.
	Nozzle or hose is blocked.	Check and clear any obstructions in the nozzle or suction path.
Vacuum stops during use.	Battery is depleted.	Recharge the vacuum cleaner.
Charging indicator not working.	Charger not properly connected.	Ensure charger is securely plugged into both the vacuum and the wall outlet.
	Faulty charger or charging port.	Contact customer support if the issue persists after checking connections.

## SPECIFICATIONS

Feature	Detail
Brand	Baseus
Model Number	H-505 (ACH505-B01)
Color	Black
Power Consumption	65 Watts
Operating Voltage	13.5 Volts
Battery Type	Lithium-Ion
Battery Capacity	2400 mAh
Charging Time	3-4 hours
Operating Time	Approximately 20-22 minutes
Dust Collection	Bagless
Special Features	Cordless, Portable, Integrated Front Light, Washable Filter
Weight	2.6 kg (approx.)

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included in your product packaging or contact Baseus customer service through their official website or the retailer where the product was purchased. Keep your proof of purchase for warranty claims.

