

[Manuals.plus](#) /

> [Ingenuity](#) /

> Ingenuity Soothe 'n Delight Safari Bouncer Instruction Manual

Ingenuity Soothe 'n Delight Safari Bouncer

Ingenuity Soothe 'n Delight Safari Bouncer Instruction Manual

Model: Soothe 'n Delight Safari Bouncer

1. PRODUCT OVERVIEW

The Ingenuity Soothe 'n Delight Safari Bouncer is designed to provide a comfortable and soothing experience for your baby. This bouncer features a plush seat with removable head support, two recline positions, and a removable toy bar with two engaging toys. It also includes soothing sounds, melodies, vibrations, and white noise to help calm your child.



Image 1.1: The Ingenuity Soothe 'n Delight Safari Bouncer, showcasing its design and features.

2. IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Never leave child unattended.
- Always use the restraint system.
- This bouncer is not intended for prolonged periods of sleep.
- Do not use this bouncer once your child can sit up unaided or weighs more than 20 lbs (9 kg).
- Never use this bouncer on an elevated surface (e.g., a table).
- Always place the bouncer on a flat, level floor.
- Never move the bouncer with the child in it.
- Keep away from open flames and other strong heat sources.
- Do not use if any components are broken or missing.
- Adult assembly required.

3. PACKAGE CONTENTS

Please check that all components are present before assembly:

- Bouncer Frame
- Seat Pad
- Removable Head Support
- Toy Bar
- 2 Hanging Toys
- Instruction Manual

4. SETUP AND ASSEMBLY

While the bouncer requires minimal assembly, please follow these steps to ensure proper setup:

1. **Unfold the Frame:** Carefully unfold the bouncer frame until it locks into position. Ensure all legs are securely extended.
2. **Install Batteries:** Locate the battery compartment, usually on the underside of the control unit. Insert 3 C batteries, ensuring correct polarity. Close the battery compartment securely.
3. **Attach Seat Pad:** Drape the seat pad over the frame. Secure the straps and buckles of the seat pad to the corresponding points on the bouncer frame. Ensure the harness straps are accessible.
4. **Insert Head Support:** Place the removable head support into the designated area on the seat pad.
5. **Attach Toy Bar:** Align the toy bar with the slots on either side of the bouncer frame. Press down firmly until it clicks into place. Ensure it is securely attached and cannot be easily dislodged.
6. **Attach Toys:** Hang the two provided toys onto the loops on the toy bar.



Image 4.1: Illustrates the process of attaching the toy bar to the bouncer frame.

5. OPERATING INSTRUCTIONS

5.1 Placing Your Baby

- Gently place your baby into the bouncer seat.
- Always secure your baby with the 3-point harness. Adjust the straps for a snug, comfortable fit.



Image 5.1: A baby secured in the bouncer, demonstrating proper use of the harness.

5.2 Adjusting Recline Positions

The bouncer offers 2 recline positions for your baby's comfort. To adjust, locate the recline adjustment mechanism on the sides of the bouncer frame. Simultaneously press the buttons or levers and move the

seat to the desired position until it locks securely.



Image 5.2: Side view illustrating the bouncer in a reclined position.



Image 5.3: Side view illustrating the bouncer in a more upright position.

5.3 Using Soothing Features

The control panel, located at the front of the bouncer, allows you to activate various soothing features:

- **Vibration:** Press the vibration button to activate gentle vibrations. Press again to cycle through intensity levels or turn off.
- **Sounds & Melodies:** Press the music note button to play various melodies and soothing sounds. Press again to change the sound or turn off.
- **White Noise:** Some models may include a dedicated white noise function. Refer to the specific

button on your control panel.



Image 5.4: Close-up of the control panel, showing buttons for vibration and sound.

5.4 Toy Bar and Toys

- The toy bar can be rotated for easy access to your baby or removed entirely when not needed.
- The hanging toys are designed to engage your baby. Ensure they are securely attached.



Image 5.5: A baby interacting with the hanging toys on the bouncer's toy bar.

6. CARE AND MAINTENANCE

6.1 Cleaning the Seat Pad and Head Support

- The seat pad and head support are removable for cleaning.
- **Care Instructions:** Hand wash with cold water and mild soap. Do not bleach. Air dry flat. Do not iron. Do not dry clean.



Image 6.1: Close-up of the soft fabric of the seat pad and head support.

6.2 Cleaning the Frame and Toys

- Wipe the bouncer frame, plastic components, and toys with a damp cloth and mild soap.
- Do not immerse the control unit in water.
- Allow all parts to air dry completely before reassembly or use.

6.3 Battery Replacement

- When sounds or vibrations weaken, it's time to replace the batteries.
- Always replace all 3 C batteries at the same time.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or vibration	Batteries are dead or incorrectly installed.	Replace all 3 C batteries, ensuring correct polarity.
Toy bar is loose	Not properly attached to the frame.	Ensure the toy bar is fully inserted into the slots and clicks into place.
Seat recline not holding position	Recline mechanism not fully engaged.	Ensure the seat is locked into one of the two recline positions.

8. PRODUCT SPECIFICATIONS

Brand Name	Ingenuity
Type	Baby Bouncer

Color	Grey
Target Gender	Unisex
Age Range Description	Baby (up to 6 months)
Maximum Weight Recommendation	20 lbs (9 kg)
Item Weight	3.48 kg
Shipping Dimensions	55 x 44.4 x 12.4 cm
Material Type	Plastic
Care Instructions	Hand Wash
Portable	Yes
Assembly Required	No
Battery Type	C (3 batteries required)
UPC	074451603899
ASIN	B0993XZ9W1

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or visit the official Ingenuity website. Contact customer service for assistance with any issues not covered in this manual.

Manufacturer: Ingenuity