

[Manuals.plus](#) /

› [Anker](#) /

› Anker Soundcore 2 Portable Bluetooth Speaker User Manual

Anker A3105

Anker Soundcore 2 Portable Bluetooth Speaker User Manual

Model: A3105 | Brand: Anker

1. INTRODUCTION

The Anker Soundcore 2 is a portable Bluetooth speaker designed for high-quality audio playback in various environments. It features dual drivers for clear sound, enhanced bass technology, and a durable, water-resistant design, making it suitable for both indoor and outdoor use. With an extended battery life, it provides continuous music enjoyment for up to 24 hours.



Figure 1.1: Anker Soundcore 2 Portable Bluetooth Speaker (Teal color variant shown).

2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- Anker Soundcore 2 Speaker
- Micro USB Cable
- Quick Start Guide

3. SETUP

3.1 Charging the Speaker

Before first use, fully charge the Soundcore 2 speaker. Connect the supplied Micro USB cable to the charging port on the speaker and the other end to a USB power adapter (not included). The LED indicator will show charging status.

Note: The charging port is not waterproof. Ensure the protective cover is securely closed to prevent water damage when not charging.

3.2 Powering On/Off

Press and hold the power button () located on the top of the speaker for 2 seconds to power on or off. A blue LED indicator will illuminate when the speaker is on.

Intense Bass

Built in Bassup technology

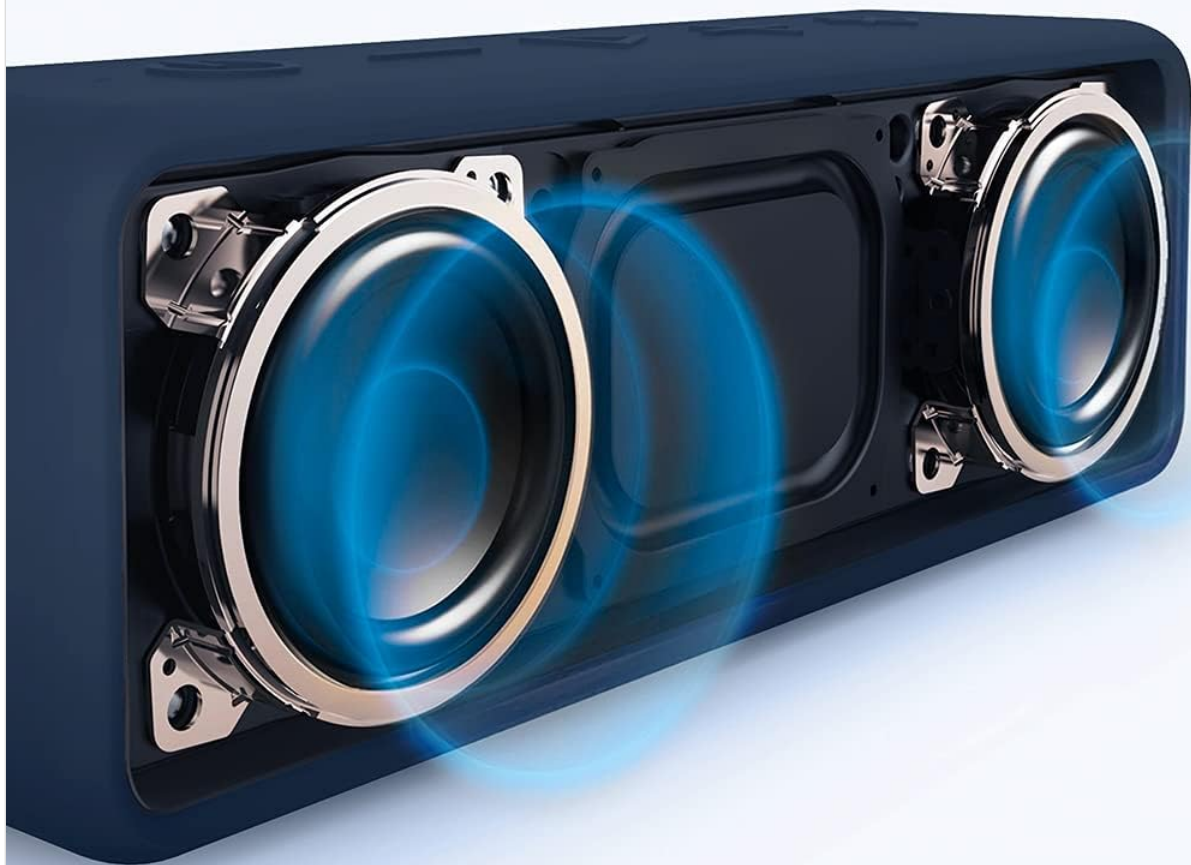


Figure 3.1: Internal view highlighting the dual drivers and BassUp technology for intense bass.

4. OPERATING THE SPEAKER

4.1 Bluetooth Pairing

When powered on, the Soundcore 2 will automatically enter Bluetooth pairing mode. The Bluetooth indicator LED will flash blue.

On your device (smartphone, tablet, etc.), enable Bluetooth and select "Soundcore 2" from the list of available devices. Once connected, the Bluetooth indicator will turn solid blue.

To pair with a new device, press and hold the Bluetooth button () for 2 seconds to enter pairing mode again.

Immersive Sound

12W of pure audio power.



Figure 4.1: Enjoying immersive sound from the portable speaker.

4.2 Basic Controls

- **Volume Up (+) / Volume Down (-):** Press to adjust volume.
- **Play/Pause (▶):** Press to play or pause music. Press twice for next track.
- **Bluetooth Button (⌵):** Press and hold for 2 seconds to enter pairing mode.

4.3 Water Resistance (IPX7)

The Soundcore 2 is IPX7 water-resistant, meaning it can be submerged in up to 1 meter of water for 30 minutes. This makes it suitable for use by the pool, at the beach, or in the shower. Always ensure the charging port cover is sealed when exposed to water.

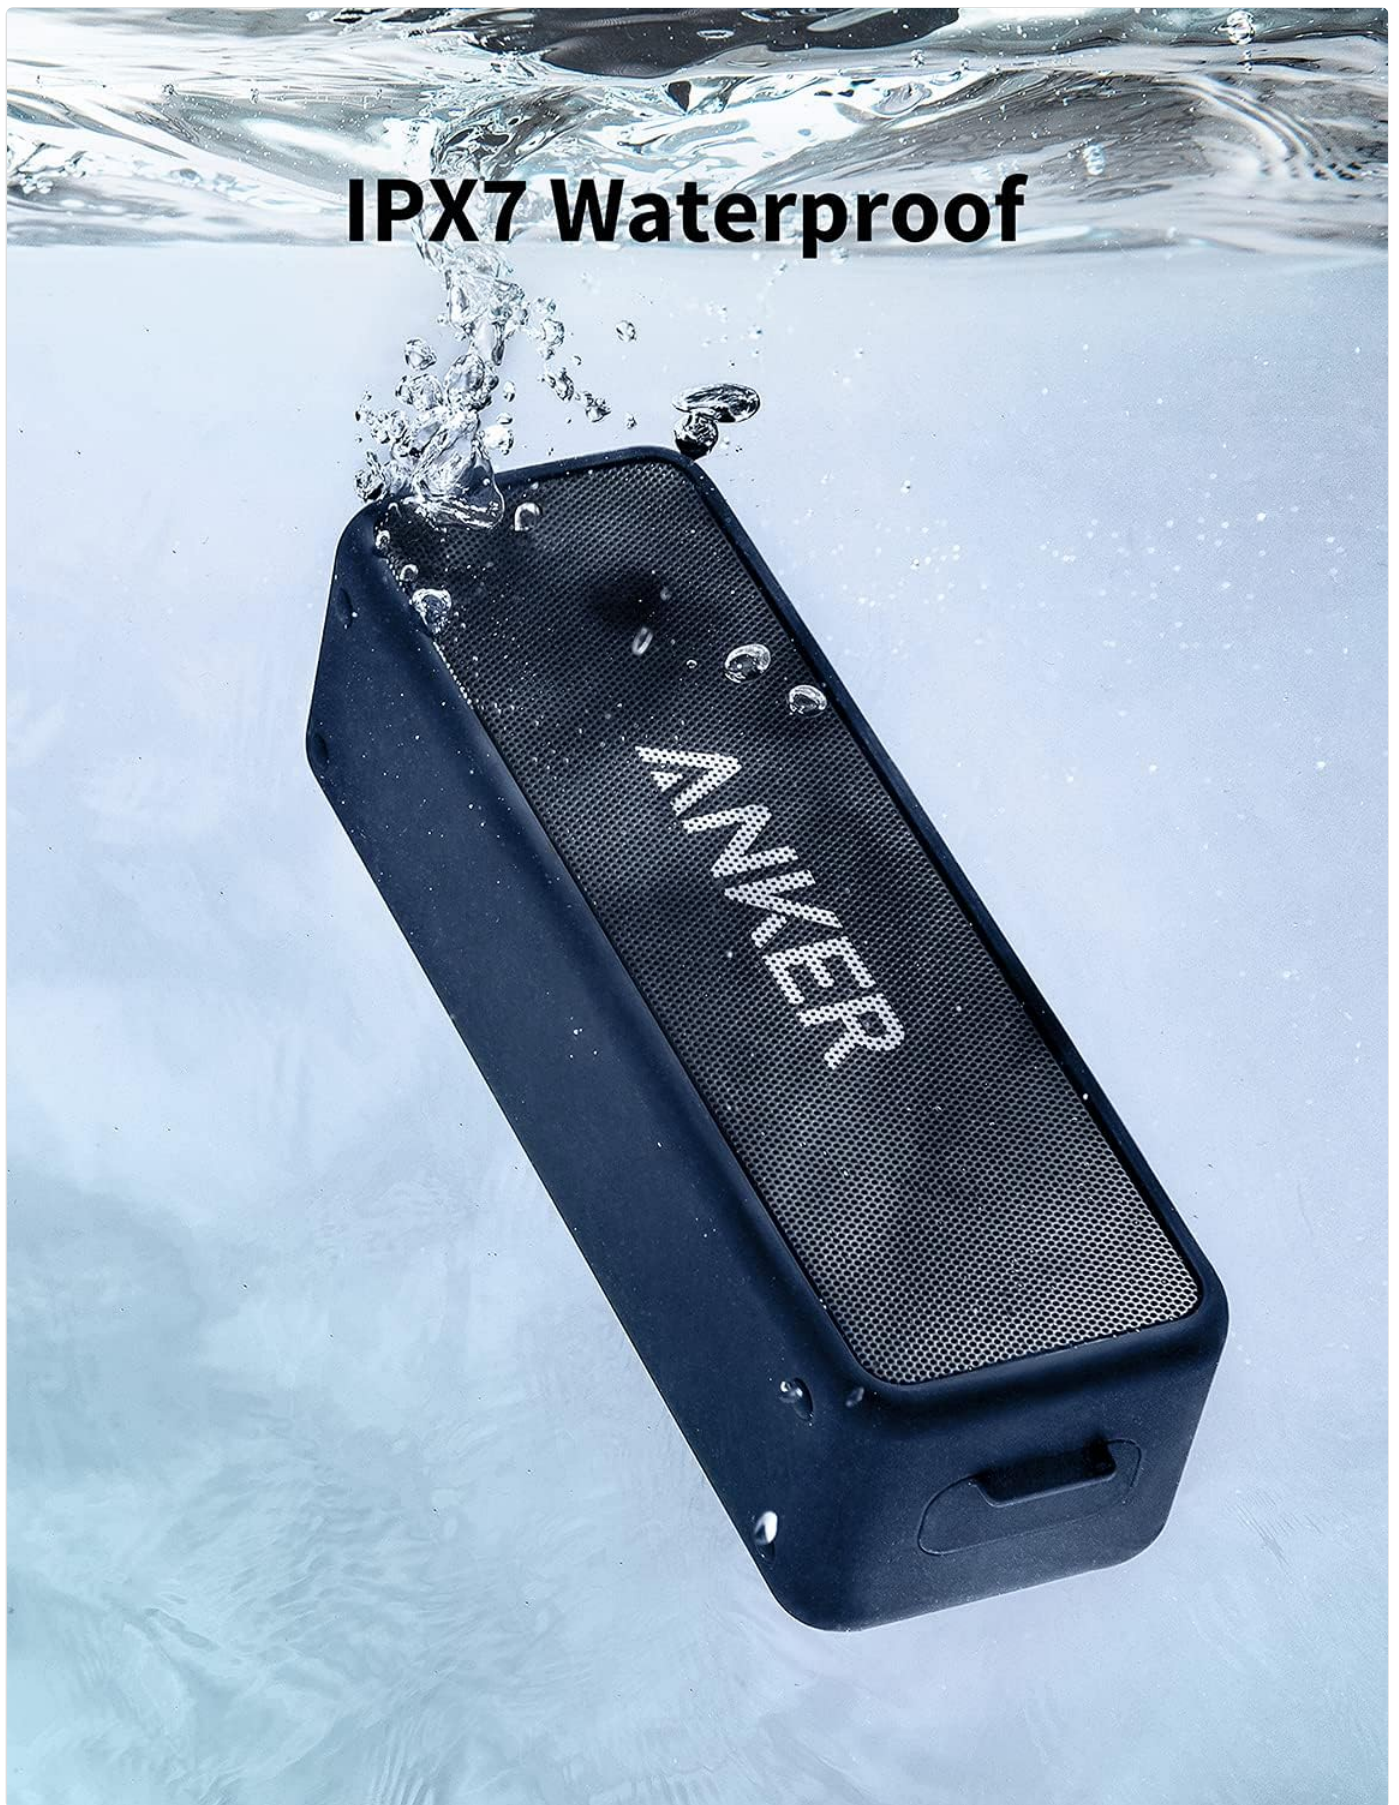


Figure 4.2: The Soundcore 2 demonstrating its IPX7 water resistance.

4.4 Extended Playtime

The speaker provides up to 24 hours of continuous playtime on a single charge, depending on volume levels and audio content.

24-Hour Playtime



Figure 4.3: The Soundcore 2 is designed for extended use, offering up to 24 hours of playtime.

4.5 Wireless Stereo Pairing (TWS)

Two Soundcore 2 speakers can be paired together for a true wireless stereo experience. Power on both speakers. On one speaker, press and hold the Bluetooth button for 2 seconds until the blue LED flashes. Then, on the second speaker, press and hold the Bluetooth button for 2 seconds. The speakers will connect to each other, and then one will connect to your device,

providing left and right channel audio.

Wireless Stereo Pairing



Figure 4.4: Two Soundcore 2 speakers can be paired for an enhanced stereo audio experience.

5. MAINTENANCE

To ensure the longevity of your Anker Soundcore 2 speaker:

- Clean the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure the charging port cover is securely closed when not charging, especially when near water, to maintain its IPX7 rating.
- Store the speaker in a cool, dry place when not in use.
- Avoid exposing the speaker to extreme temperatures.

6. TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the Micro USB cable.
Cannot pair with Bluetooth device.	Ensure the speaker is in pairing mode (flashing blue LED). Make sure Bluetooth is enabled on your device. Move the speaker closer to your device. Forget "Soundcore 2" from your device's Bluetooth list and try pairing again. Restart both the speaker and your device.
No sound or distorted sound.	Adjust the volume on both the speaker and your connected device. Ensure the speaker is within Bluetooth range (up to 66 feet). Check for obstructions between the speaker and your device. If using AUX-IN, ensure the cable is fully inserted and functional.

7. SPECIFICATIONS

Feature	Detail
Model Name	A3105
Speaker Maximum Output Power	12 Watts
Connectivity Technology	Bluetooth, AUX-IN
Wireless Communication Technology	Bluetooth
Bluetooth Range	66 Feet
Battery Life	24 Hours
Water Resistance Level	IPX7 (Waterproof)
Product Dimensions	1.77"D x 2.13"W x 6.5"H
Item Weight	14.6 ounces (415 Grams)
Material	Water-resistant plastic or rubber
Number of Microphones	1



Figure 7.1: Dimensions of the Anker Soundcore 2 speaker.

8. WARRANTY AND SUPPORT

The Anker Soundcore 2 comes with a Limited Warranty. For detailed warranty information and support, please refer to the official Anker website or the Quick Start Guide included in your package.

You can also find the full user manual in PDF format here: [Anker Soundcore 2 User Manual \(PDF\)](#)

For further assistance, contact Anker customer support through their official channels.

© 2024 Anker Innovations Limited. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question