

[Manuals.plus](#) /

› [uehba](#) /

› uehba RAV271 Replacement Remote Control User Manual for Yamaha AV System Receivers

uehba RAV271

uehba RAV271 Replacement Remote Control User Manual

For Yamaha AV System Receivers

1. INTRODUCTION

This manual provides instructions for the uehba RAV271 replacement remote control. This remote is designed to be compatible with various Yamaha AV System Receivers, including models such as RAV271, WE45890, RX-V750, RXV750, WM88530, WN372600, RXV3800, RX-V3900, RXV3900, RX-Z7, RX-Z7BL, and DSP-Z7. It offers a straightforward solution for controlling your Yamaha AV system.

2. SETUP

2.1 Battery Installation

The uehba RAV271 remote control requires two (2) AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



**Need 2x AAA batteries
(not included)**

The back of the remote control is shown with the battery cover removed, revealing the two slots for AAA batteries. Please note that batteries are not included with the remote.

2.2 Initial Use

This remote control is pre-programmed and does not require any setup or programming. Once batteries are installed, it is ready to operate your compatible Yamaha AV System Receiver directly.



uehba RAV271 remote control in hand, highlighting its immediate functionality upon battery insertion, requiring no complex programming.

3. OPERATING INSTRUCTIONS

The uehba RAV271 remote control functions via infrared (IR) technology. Ensure a clear line of sight between the remote control and your Yamaha AV System Receiver for optimal performance.

3.1 Basic Functions

- **Power:** Press the **POWER** button to turn the receiver on or off.
- **Volume:** Use the **VOLUME +** and **VOLUME -** buttons to adjust the audio level.
- **Mute:** Press the **MUTE** button to temporarily silence the audio. Press again to restore.
- **Input Selection:** Use buttons like **CD**, **DVD**, **TV**, **TUNER**, etc., to select the desired audio/video input source.
- **Navigation:** The directional arrow buttons (**UP**, **DOWN**, **LEFT**, **RIGHT**) and **ENTER** button are used for menu navigation and selection.



A clear front view of the uehba RAV271 remote control, detailing the layout and labeling of all its operational buttons for various functions.



This image illustrates a hand interacting with the uehba RAV271 remote control, specifically pressing one of its buttons during operation.

3.2 Advanced Functions

The remote includes buttons for various advanced functions specific to Yamaha AV receivers, such as **SCENE** selection (1-4), **MENU**, **DISPLAY**, and playback controls (**PLAY**, **PAUSE**, **STOP**, **SKIP**, **REC**). Refer to your Yamaha receiver's original manual for detailed explanations of these specific functions.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, wipe it with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or internal components.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there is a clear line of sight between the remote control and the Yamaha receiver. Obstructions can block the infrared signal.
 - Confirm that the remote is pointed directly at the receiver's IR sensor.
- **Limited functionality for specific receiver models:**
 - While this remote is designed for broad compatibility, specific advanced functions may vary or not be fully supported on all listed Yamaha receiver models. Refer to your original receiver manual for expected remote functions.
 - Ensure your receiver model is among the compatible models listed.
- **Buttons are sticky or unresponsive:**
 - Clean the remote control as described in the Maintenance section.
 - If the issue persists after cleaning and battery replacement, the remote may require replacement.

6. SPECIFICATIONS

Brand	uehba
Model Number	RAV271
Connectivity Technology	Infrared (IR)
Compatible Devices	Yamaha Home Theater AV System Receivers
Power Source	2 x AAA Alkaline Batteries (not included)

Maximum Range	10 Meters (approx. 33 feet)
Controller Type	Button Control
Item Weight	74 Grams
Color	Black

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This uehba remote control comes with a 1-year warranty from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage.

7.2 Customer Support

If you encounter any issues or have questions regarding your uehba RAV271 remote control, please contact the seller or manufacturer for assistance. Provide your purchase details and a clear description of the problem to facilitate support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0994PNXBJ>

More documents and user manuals: <https://manuals.plus/>