

## Casio AE-1500WH-1AVDF

# Casio Youth Series Digital Watch Instruction Manual

MODEL: AE-1500WH-1AVDF

## Introduction

This manual provides detailed instructions for the operation and maintenance of your Casio Youth Series Digital Watch, model AE-1500WH-1AVDF. Please read this manual carefully to ensure proper use and to fully utilize all features of your watch.

**Figure 1:** Front view of the Casio AE-1500WH-1AVDF digital watch. This image displays the watch face, which includes the digital time display, day of the week, date, and indicators for alarms and stopwatch. The watch features a black resin case and strap, with buttons labeled ADJUST, MODE, LIGHT, and START around the bezel.

The Casio AE-1500WH-1AVDF is designed for durability and functionality, featuring a 10-year battery life, 1/100-second stopwatch, dual time display, and LED backlight for enhanced visibility in low light conditions. Its robust resin construction ensures water resistance suitable for daily use.

## Getting Started: Button Functions

Your watch has four primary buttons, each with specific functions depending on the mode. Familiarize yourself with their locations and purposes.

**Figure 2:** Left side of the watch. The top left button is **ADJUST**, used for entering and exiting setting modes. The bottom left button is **MODE**, used to cycle through different watch modes (Timekeeping, Stopwatch, Alarm, Dual Time).

**Figure 3:** Right side of the watch. The top right button is **LIGHT**, which activates the LED backlight. The bottom right button is **START** (or Chronograph), used to start/stop stopwatch operations or change settings during adjustment.

- **ADJUST Button (Top Left):** Used to enter and exit setting modes. Press and hold to initiate time or date settings.
- **MODE Button (Bottom Left):** Cycles through the watch's various modes: Timekeeping, Stopwatch, Alarm, and Dual Time.
- **LIGHT Button (Top Right):** Activates the LED backlight for illumination of the display.
- **START Button (Bottom Right):** Used to start and stop the stopwatch. In setting modes, it is used to increment or change selected values.

## Operating Instructions

## 1. Timekeeping Mode

This is the default mode, displaying the current time, day of the week, and date.

### 1. To Set the Time and Date:

- a. In Timekeeping Mode, press and hold the **ADJUST** button until the seconds begin to flash, indicating the setting mode.
  - b. Press the **MODE** button to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day.
  - c. Use the **START** button to increment the flashing value. Hold the **START** button to rapidly advance the value.
  - d. Once all settings are correct, press the **ADJUST** button to exit the setting mode.
2. **12/24-Hour Format:** While in Timekeeping Mode, press the **START** button to toggle between 12-hour and 24-hour time formats.

## 2. Stopwatch Mode

The stopwatch measures elapsed time up to 23 hours, 59 minutes, 59.99 seconds.

1. From Timekeeping Mode, press the **MODE** button once to enter Stopwatch Mode. The display will show "00'00"00".
2. Press the **START** button to begin timing.
3. Press the **START** button again to stop timing.
4. Press the **ADJUST** button to reset the stopwatch to "00'00"00".
5. To return to Timekeeping Mode, press the **MODE** button.

## 3. Alarm Mode

The watch features 5 independent daily alarms and a snooze alarm.

1. From Timekeeping Mode, press the **MODE** button twice to enter Alarm Mode. The display will show "AL1" or similar.
2. Press the **START** button to cycle through the 5 alarms (AL1 to AL5) and the Snooze alarm (SNZ).
3. **To Set an Alarm:**
  - a. Select the desired alarm (e.g., AL1) using the **START** button.
  - b. Press and hold the **ADJUST** button until the alarm hour flashes.
  - c. Use the **START** button to set the hour. Press **MODE** to move to the minute setting.
  - d. Use the **START** button to set the minute.
  - e. Press the **ADJUST** button to confirm and exit.
4. **To Turn Alarm On/Off:** In Alarm Mode, with the desired alarm selected, press the **LIGHT** button to toggle the alarm on or off. An alarm indicator will appear on the display when active.
5. **To Stop an Alarm:** When an alarm sounds, press any button to stop it. For the Snooze alarm, it will sound again after approximately 5 minutes.

## 4. Dual Time Mode

This mode allows you to keep track of a second time zone.

1. From Timekeeping Mode, press the **MODE** button three times to enter Dual Time Mode.
2. **To Set Dual Time:**
  - a. In Dual Time Mode, press and hold the **ADJUST** button until the hour flashes.
  - b. Use the **START** button to set the hour. Press **MODE** to move to the minute setting.
  - c. Use the **START** button to set the minute.
  - d. Press the **ADJUST** button to confirm and exit.

## 5. LED Backlight

Press the **LIGHT** button (top right) in any mode to illuminate the display for a few seconds.

## Maintenance and Care

---

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, use a soft cloth dampened with water and mild soap, then wipe dry. Avoid using chemical cleaners.
- **Water Resistance:** Your watch is water resistant up to 100 meters (10 BAR). This means it is suitable for everyday use, showering, and swimming. Do not operate buttons while the watch is wet or submerged. Avoid exposing the watch to hot water or steam, as this can damage the seals.
- **Temperature Extremes:** Avoid exposing your watch to extreme temperatures, both hot and cold, for prolonged periods.
- **Battery Replacement:** The watch is equipped with a long-life lithium battery (approximately 10 years). When the display becomes dim or functions become erratic, it may be time for battery replacement. It is recommended to have the battery replaced by an authorized Casio service center to ensure proper sealing and water resistance.
- **Impact:** While durable, avoid strong impacts or dropping the watch, as this can damage internal components or the casing.

## Troubleshooting

---

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery. Contact an authorized service center.
Incorrect time/date.	Time/date not set correctly or reset due to impact.	Refer to "To Set the Time and Date" in the Operating Instructions.
Buttons are unresponsive.	Watch may be wet or internal issue.	Ensure watch is dry. If problem persists, contact support.
Water condensation inside display.	Exposure to extreme temperature changes or damaged seal.	Stop using the watch immediately and take it to an authorized service center. Do not attempt to dry it yourself.

If you encounter issues not listed here, or if the suggested solutions do not resolve the problem, please contact Casio customer support.

## Specifications

---

Feature	Detail
Model Number	AE-1500WH-1AVDF
Movement Type	Quartz
Case Material	Resin
Band Material	Resin (Rubber)
Dial Color	Black

Feature	Detail
Band Color	Black
Case Diameter	51.2 mm
Product Dimensions (LxWxH)	21.5 x 1.6 x 5.1 cm
Item Weight	57 g
Water Resistance	100 Meters (10 BAR)
Battery Type	1 Lithium Metal battery (included)
Battery Life	Approximately 10 years
Features	1/100-second stopwatch, Dual time, 5 Daily Alarms, Snooze Alarm, Hourly Time Signal, LED backlight, Full auto-calendar (to year 2099), 12/24-hour format
Country of Origin	China

## Warranty and Support

Your Casio AE-1500WH-1AVDF watch comes with an **Extended Warranty**. For specific terms and conditions of the warranty, please refer to the warranty card included with your purchase or visit the official Casio website.


For technical assistance, service, or inquiries regarding your watch, please contact Casio customer support. Contact information can typically be found on the official Casio website or on your product's packaging.

**Manufacturer:** Casio India Co Pvt Ltd, A-41, 1st Floor, MCIE, Mathura Road, New Delhi-110044

© 2024 Casio. All rights reserved. Information in this manual is subject to change without notice.

## Related Documents

	<p><a href="#">Casio 3573 Operation Guide: Features, Settings, and Maintenance</a></p> <p>Detailed operation manual for the Casio 3573 watch, covering precautions, time adjustment, dual time, stopwatch, time flash, user maintenance, and troubleshooting. Learn how to use all features and care for your watch.</p>
------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

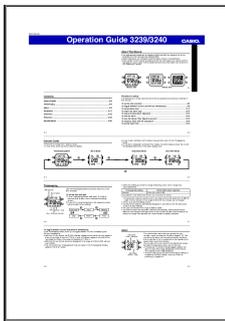


### [CASIO 3239/3240 Watch Operation Guide](#)

Comprehensive operation guide for CASIO digital watches models 3239 and 3240, covering timekeeping, alarms, stopwatch, dual time, and specifications. Learn how to set time, date, alarms, use stopwatch functions, and manage dual time zones.



### [Casio LAW-21 Модуль 2789: Руководство пользователя и характеристики](#)

Полное руководство пользователя для часов Casio LAW-21 (Модуль 2789). Содержит инструкции по эксплуатации, уходу, описания режимов работы (текущее время, мировое время, таймер, секундомер, будильник) и технические характеристики.

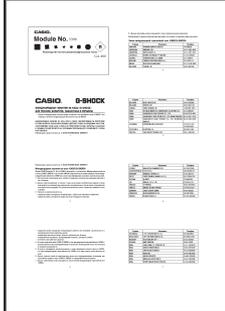

### [CASIO G-SHOCK GA-400 Watch Instruction Manual](#)

Comprehensive instruction manual for the CASIO G-SHOCK GA-400 watch, module 5398, covering features, operation, and maintenance. Includes details on timekeeping, alarms, stopwatch, world time, and water resistance.